

AUTO GRIP PLIERS

No necessary for adjusting the jaw, just open and grasp!

Point 1**No necessary for adjustment**

Self-adjustment according to the thickness of the object.



① Open

② Grasp

Point 2**Easy!**

- ① Push the red lever and the jaw will open.
- ② Grasp the target and hold it.

Point 3**Easy adjustment for grasping force.**

Grasping force can be changed by the screw.



A convenient tool for temporary fixing, welding and bonding.
Self-adjustment according to the thickness of the object.



GPA-250


AUTO GRIP PLIERS

Models	Dimensions (mm)			Max. Jaw Opening (mm)	Qty./Carton (Generally)	Weight (g)
	L	H	T			
GPA-150	163	48	18	25	6	230
GPA-250	235	69	25	40	6	635

- For light work.



Product video

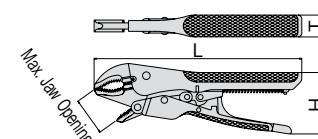

A convenient tool for temporary fixing, welding and bonding.
Self-adjustment according to the thickness of the object.




GPAL-175

AUTO GRIP PLIERS (LONG NOSE TYPE)

Models	Dimensions (mm)			Max. Jaw Opening (mm)	Qty./Carton (Generally)	Weight (g)
	L	H	T			
GPAL-175	195	48	18	43	6	250

- For light work.

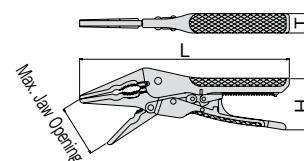

CAUTION • Jaw opening span of auto grip pliers can be adjusted automatically, but if the tool is forced to do heavier duty job than it is intended it may release work accidentally. Confirm if the work is surely locked.
• Do not use auto grip pliers with excessive load.