


CLIP REMOVER

Models	Dimensions (mm)			Qty./Carton		Weight (g)
	A	T	L	(Generally)	(Store Center)	
CLR-201	30	30	210	6	6	30
CLR-202	20	36	180	6	6	10

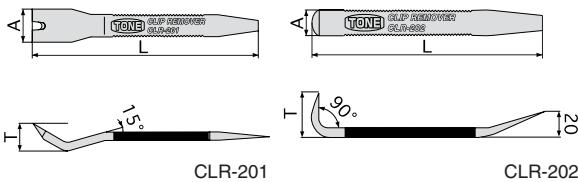

WARNING

- Plastic handle is not for insulation. Do not use on live lines.

The tool designed to removing automobile interiors and plastic clips used in interiors.




Example



CLIP HANDLE


Models	Axis surface Width Dimensions (mm)	Dimensions (mm)			Qty./Carton		Weight (g)
		A	L	(Generally)	(Store Center)		
CLH-150	6.5	80	171.5	12	6	80	
CLH-200	8.5	120	211.5	12	6	90	

 

WARNING

- Plastic handle is not for insulation. Do not use on live lines.

This tool ideal for removing the clip that holds the interior of the car.

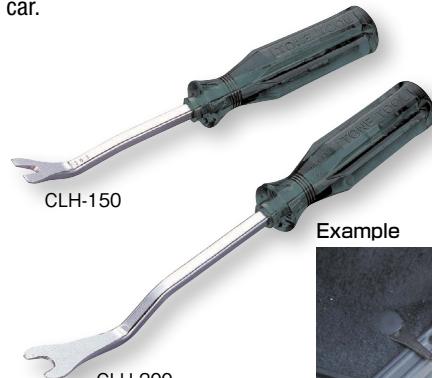


Example



BRAKE SHOE ADJUSTING TOOL

Models	Dimensions (mm)			Qty./Carton		Weight (g)
	A	A ₂	L	(Generally)	(Store Center)	
BST-110	6.0	9.0	110	6	6	30
BST-150	6.0	9.0	150	6	6	40

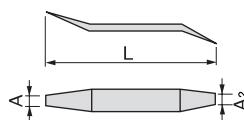

Special tool for brake shoe adjustment.

Access the shoe adjuster surely at an exquisite angle.




Example



REGULATOR HOOK

Models	The axis diameter (mm)	Dimensions (mm)			Qty./Carton		Weight (g)
		A	L	(Generally)	(Store Center)		
REH-150	2.0	50	140	12	6	10	

 

WARNING

- Plastic handle is not for insulation. Do not use on live lines.

A tool for removing car's regulator.

Model change



Example



STAINLESS TOOL
TITANIUM TOOL

TOOL SET

TOOL CASE

HEXAGON
WRENCH

T-TYPE
WRENCH

SPANNER
OFFSET WRENCH

BIT

ADJUSTABLE
WRENCH
PLIERS

SPECIALIZED
CAR EQUIPMENT

CYCLE TOOL

LED LIGHT

OTHER HAND
TOOLS

TORQUE
WRENCH

AIR TOOL