
DJX09-255

No	Code	Name of Spare Parts	Remark
1	30009010717	Hex Lock Nut	
2	30029901893	Washer (10.5×16×2)	
3	30009010718	Wave Spring Washer 15×10	
4	30009010719	Base	
5	30009010720	Bearer	
6	30021100044	Cross Recessed Pan Head Tapping Screw M5	
7	30009010721	Wing Screw M6×15	
8	30009010722	Baffle Assembly	
9	30021100657	Cross Recessed Pan Head Screw M5×35	
10	30009010723	Big Baffle	
11	30021600056	Flat Washer 6	
12	30021600050	Standard Spring Washer 6	
13	30009010724	Lock Knob	
14	30021100141	Hex Socket Cap Screw M6×25	
15	30009010725	Pressure Plate_Baffle	
16	30021100256	Cross Recessed Small Pan Head Screw M6× 20 (With Spring And Flat Washer)	
17	30009010726	Movable Baffle	
18	30021300013	Type I Hex Nut M8	
19	30009010727	Swivel Plate	
20	30021100132	Hex Socket Cap Screw M8×16	
21	30009010728	Standard Spring Washer 8	
22	30009010729	Flat Washer 16×8×1	
23	30009010730	Leaf Spring	
24	30009010731	Button_Leaf Spring	
25	30009010732	Adjusting Handle Cover	
26	30009010733	Angle Adjusting Handle	
27	30009010735	Angle Adjusting Handle	
28	30009010736	Angle Indicator	
29	30021600337	Washer4 (4.2×9×0.5)	
30	30021600052	Standard Spring Washer 4	
31	30021100085	Cross Recessed Small Pan Head Screw M4× 12	
32	30021100725	Cross Recessed Pan Head Screw M4×10	
33	30009010737	Lock Gasket	
34	30009010738	Slotted Plate	
35	30021100133	Hex Socket Cap Screw M8×40	
36	30021100542	Hex Socket Cap Screw M10×30	
37	30009010739	Set Screw	
38	30009010740	Bracket	
39	30009010741	Connector	
40	30021600051	Standard Spring Washer 5	
41	30021600170	Washer 3 (5×9×0.5)	
42	30009010742	Scale Indicator	
43	30009010743	Big Spring	
44	30009010744	Hexagon Socket Set Screws With Flat Point M5×12	
45	30009010745	Long Bolt	
46	30009010746	Screw Assembly	
50	30009010751	Bracket Pin	
51	30009010752	Flat Washer 24×12×2.5	
52	30009010753	Standard Spring Washer 12	
53	30009010754	Hex Lock Nut With Non-Metallic Insert M12	
54	30009010755	Spacer Pin Cap	
55	30009010756	Rubber Seal 5	
56	30009010757	Spacer Pin	
57	30021200042	Cross Recessed Pan Head Tapping Screw ST4×15	
58	30009010758	Rear Cover	
59	30021200107	Cross Recessed Pan Head Tapping Screw ST4.8×12	
60	30009010759	Brush Holder Assembly	
61	30009010760	Carbon Brush	
62	30009010761	Brush Cover	
63	30009010762	Motor Housing	
64	30021100658	Cross Recessed Pan Head Screw M5×25	
65	30009010763	Wave Spring Washer 27×21	
66	30021400054	Ball Bearing 6001ZZ	
67	30009010764	Stator Assembly	
68	30021200052	Cross Recessed Pan Head Tapping Screw ST4.8×68	
69	30009010765	Armature	
70	30021400103	Ball Bearing 6202ZZ	
71	30009010766	Baffle Plate	

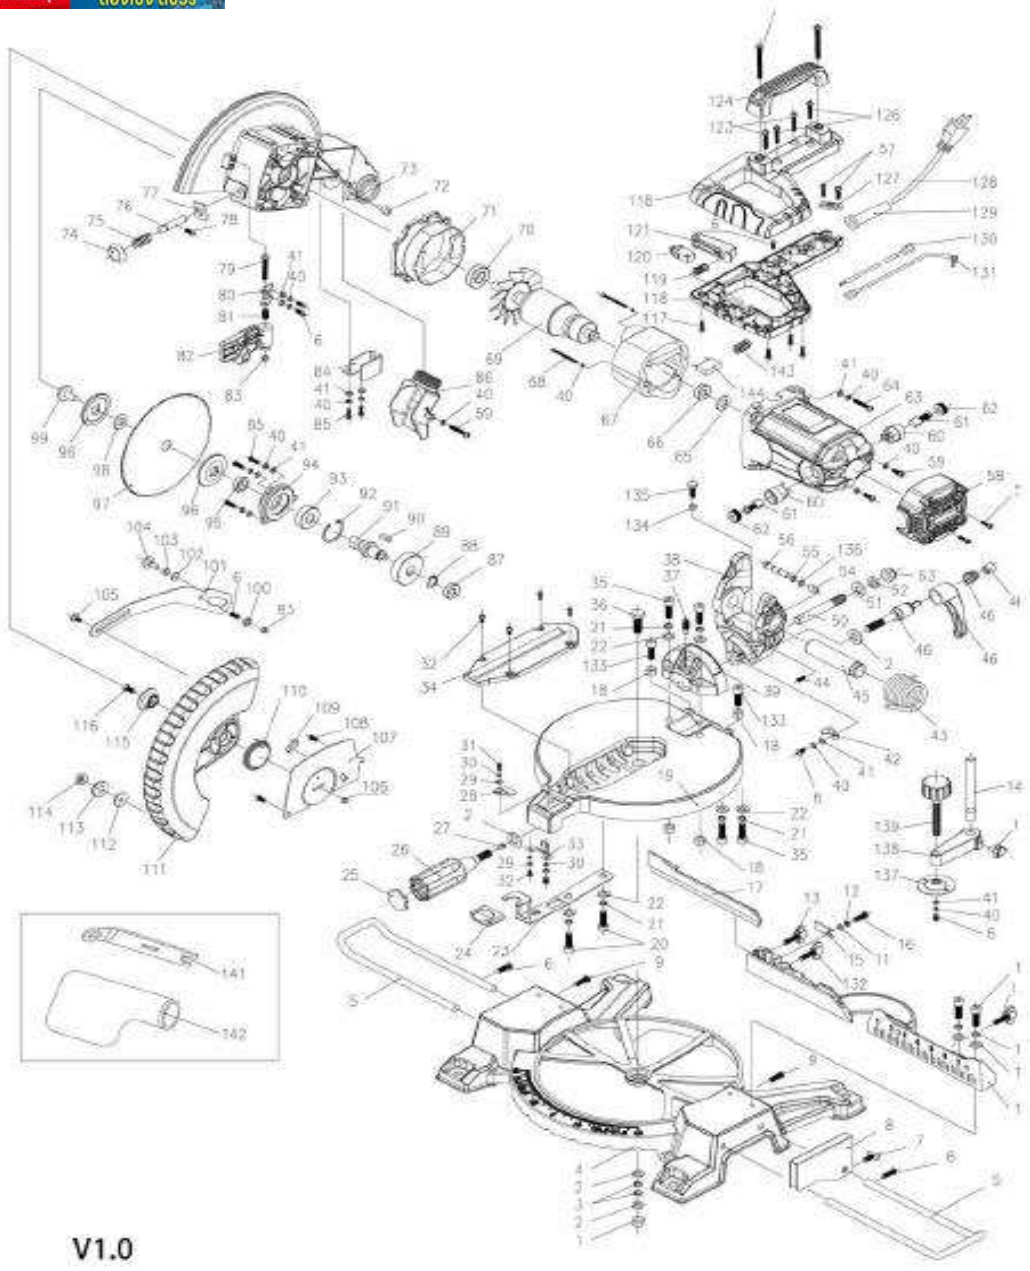

DJX09-255

No	Code	Name of Spare Parts	Remark
72	30021100008	Cross Recessed Pan Head Screw M8×10	
73	30009010767	Blade Cover	
74	30009010768	Self-Locking Buton	
75	30009010769	Shaft Lock Spring	
78	30021100222	Hex Socket Cap Screw M4×30	
79	30021100043	Cross Recessed Pan Head Screw M5×40	
80	30009010772	Support_Protective Cover	
81	30009010773	Spring_Protective Cover	
82	30009010774	Trigger_Protective Cover	
83	30009010775	Hex Lock Nut	
84	30009010776	Guard Board Saw Blade	
85	30021100161	Cross Recessed Pan Head Screw M5×16	
86	30009010777	Dust Exit Cover	
87	30021400499	Ball Bearing 6900-2RS	
88	30009010778	Circlip For Shaft Type A 16	
89	30009010779	Gear	
90	30009010780	Flat Key A5×16	
91	30009010781	Drive Spindle	
92	30009010782	Circlip For Hole 35	
93	30009010783	Deep Groove Ball Bearing 6003	
94	30009010784	Front Cap	
95	30009010785	Flange Bush	
96	30009010786	Blade Flange	
97	30009010787	Saw Blade	
98	30009010788	Lining Ring_Saw Blade	
99	30009010789	Flange Screw M8×16	
100	30009010790	Deep Groove Ball Bearing 695	
101	30009010791	Connecting Lever	
102	30029901760	Washer 12×22.5×1.5	
103	30009010792	Guide Wheel_Connecting Lever	
104	30009010793	Set Screw_Connecting Lever	
105	30009010794	Front Shoulder Screw_Connecting Lever	
106	30009010795	Hex Lock Nut	
107	30009010796	Locating Plate_Protective Cover	
108	30021100650	Cross Recessed Pan Head Screw M5×10	
109	30009010797	Damping Washer	
110	30009010798	Coil Spring	
111	30009010799	Transparent Cover	
112	30009010800	Guide Sleeve	
113	30009010801	Guide Wheel_Protective Cover	
114	30009010802	Bearing Baffle	
115	30009010803	Fixing Sleeve_Transparent Cover	
116	30021100061	Hex Socket Cap Screw M6×12	
117	30021200042	Cross Recessed Pan Head Tapping Screw ST4	
118	30009010804	Upper & Lower Handle Cover Assembly	
119	30009010805	Spring_Switch Trigger	
120	30009010806	Switch	
121	30009010807	Switch Trigger	
123	30021100011	Cross Recessed Pan Head Screw M5 × 30 (With Spring And Flat Washers)	
124	30009010808	Grip	
125	30021200032	Cross Recessed Pan Head Tapping Screw ST5	
126	30021200060	Cross Recessed Pan Head Tapping Screw	
127	30009010809	Strain Relief	
128	30030300075	Power Cord (European Standard Plug)	
129	30009010811	Grommet	
130	30009010812	Connecting Wire Assembly	
131	30009010813	Wire Assembly	
132	30009010814	Small Knob	
133	30121100149	Hex Socket Cap Screw M8×30	
134	30021300141	Hex Nut M6	
135	30021100003	Hex Socket Cap Screw M6×20	
136	30009010815	Split Washer 6	
137	30009010816	Pressure Plate	
138	30009010817	Connecting Rod	
139	30009010818	Pressure Handle	
140	30009010820	Pressure Pin	
141	30009010821	Wrench	
142	30009010822	Dust Bag Assembly	
143	30009010823	Inductor	
144	30009010824	Capacitor 0.47uf	
118	30009010828	Upper & Lower Handle Cover (Green)	

