

BMS18007 Exploded view

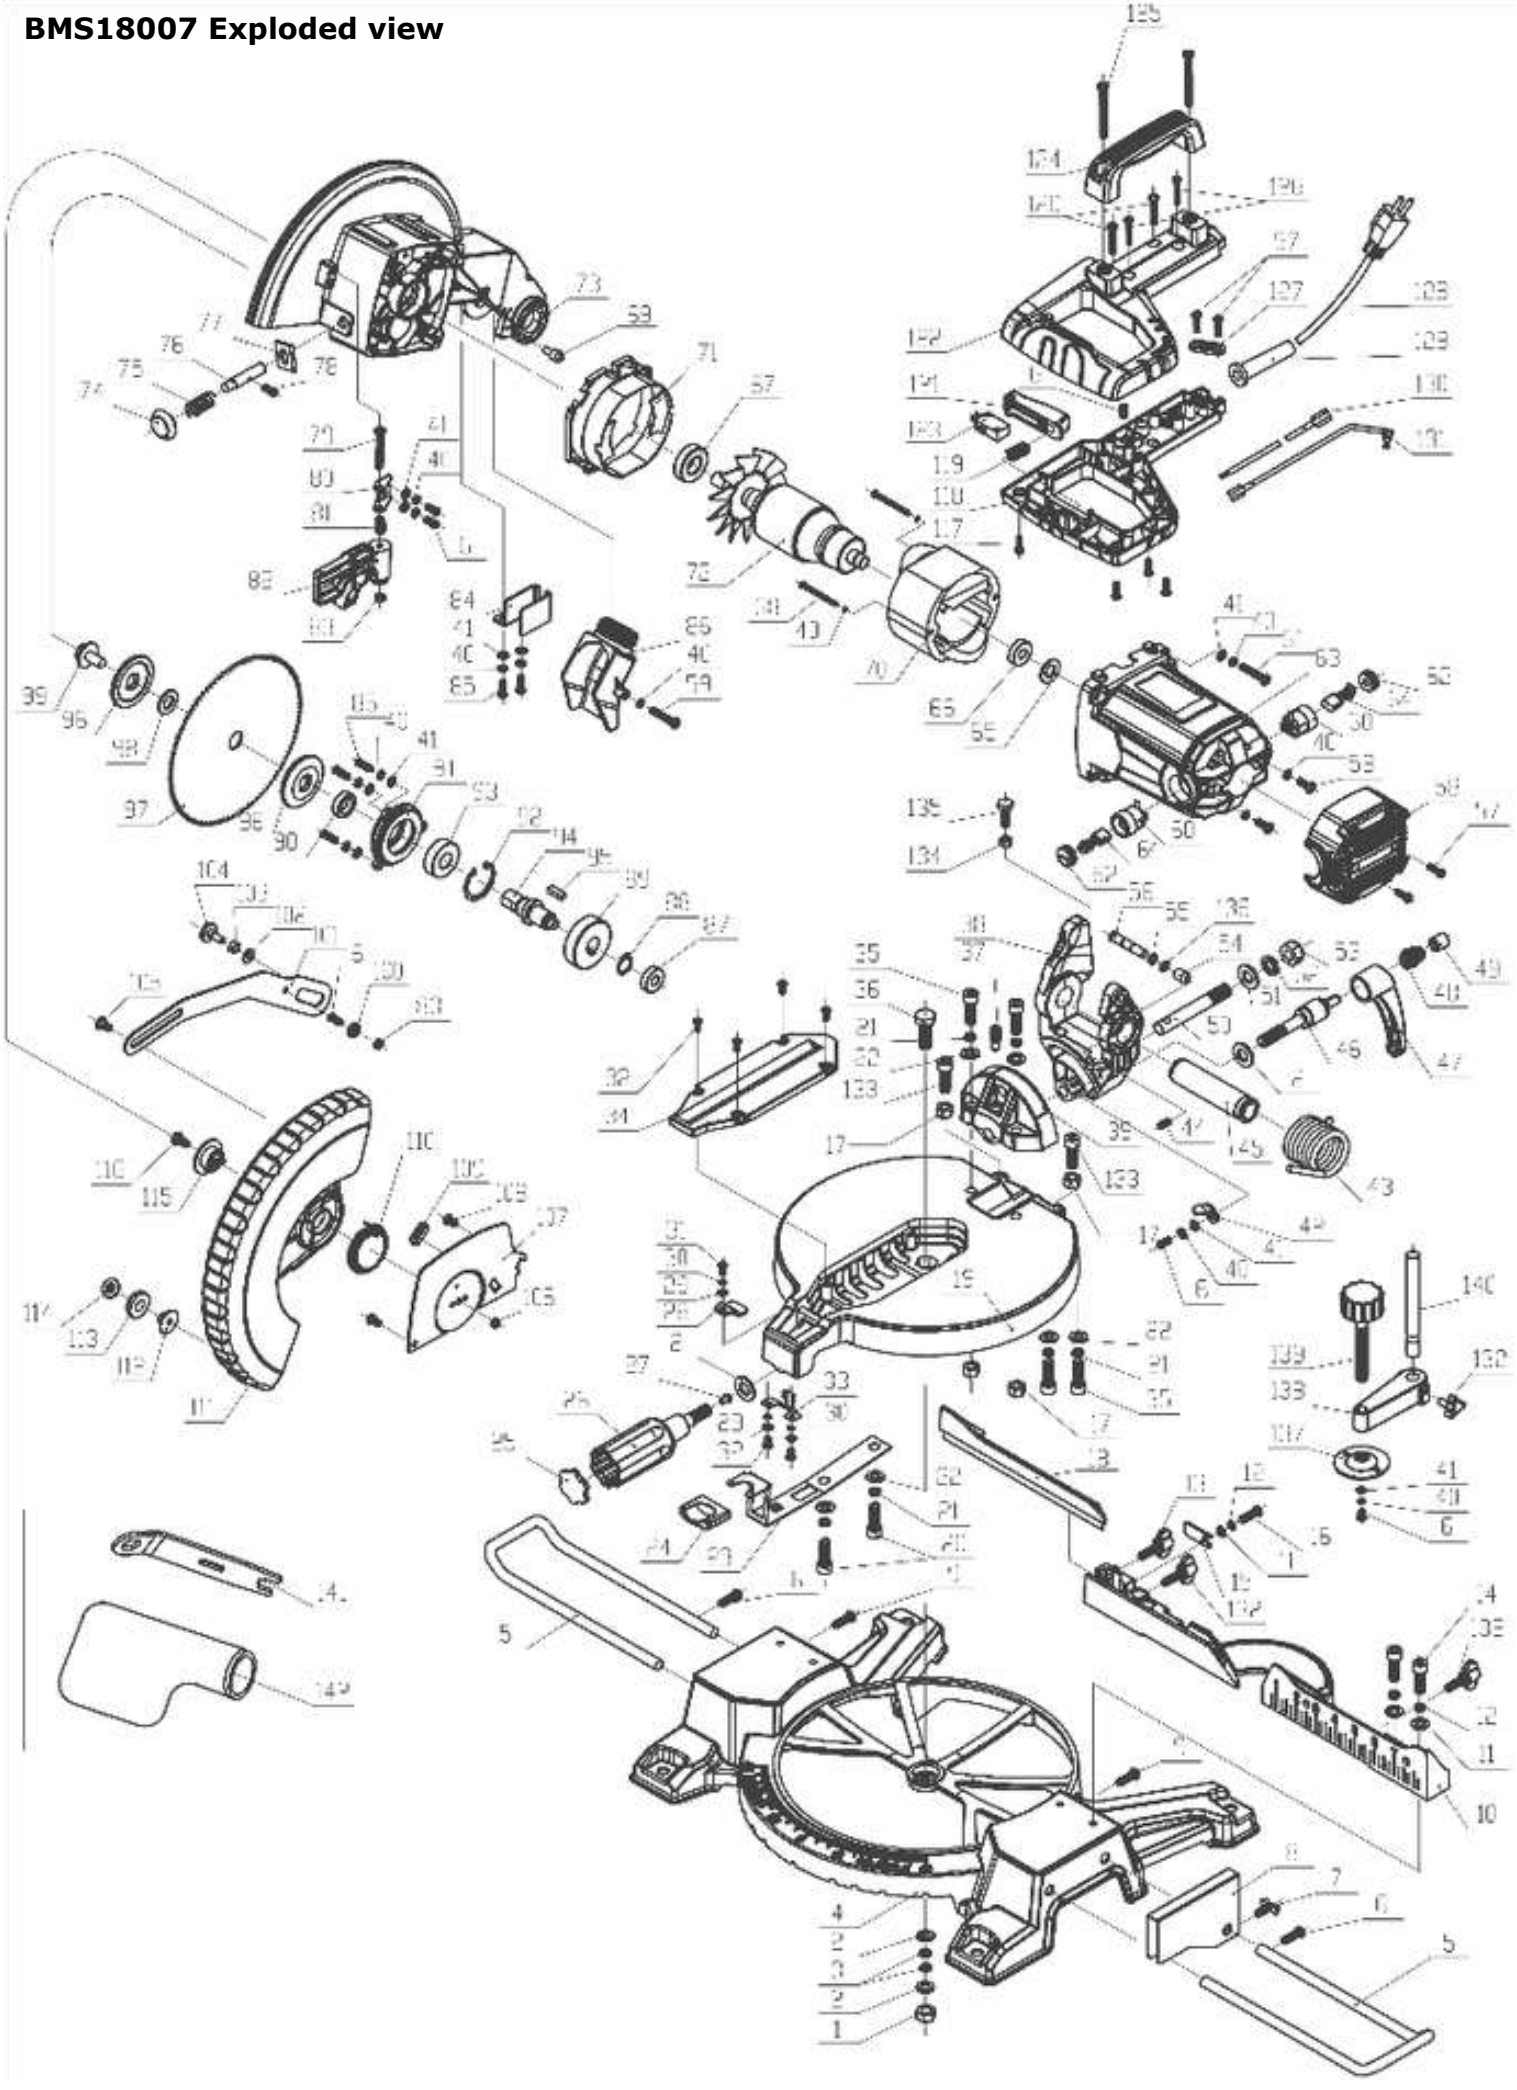

SPARE PART LIST


BMS18007

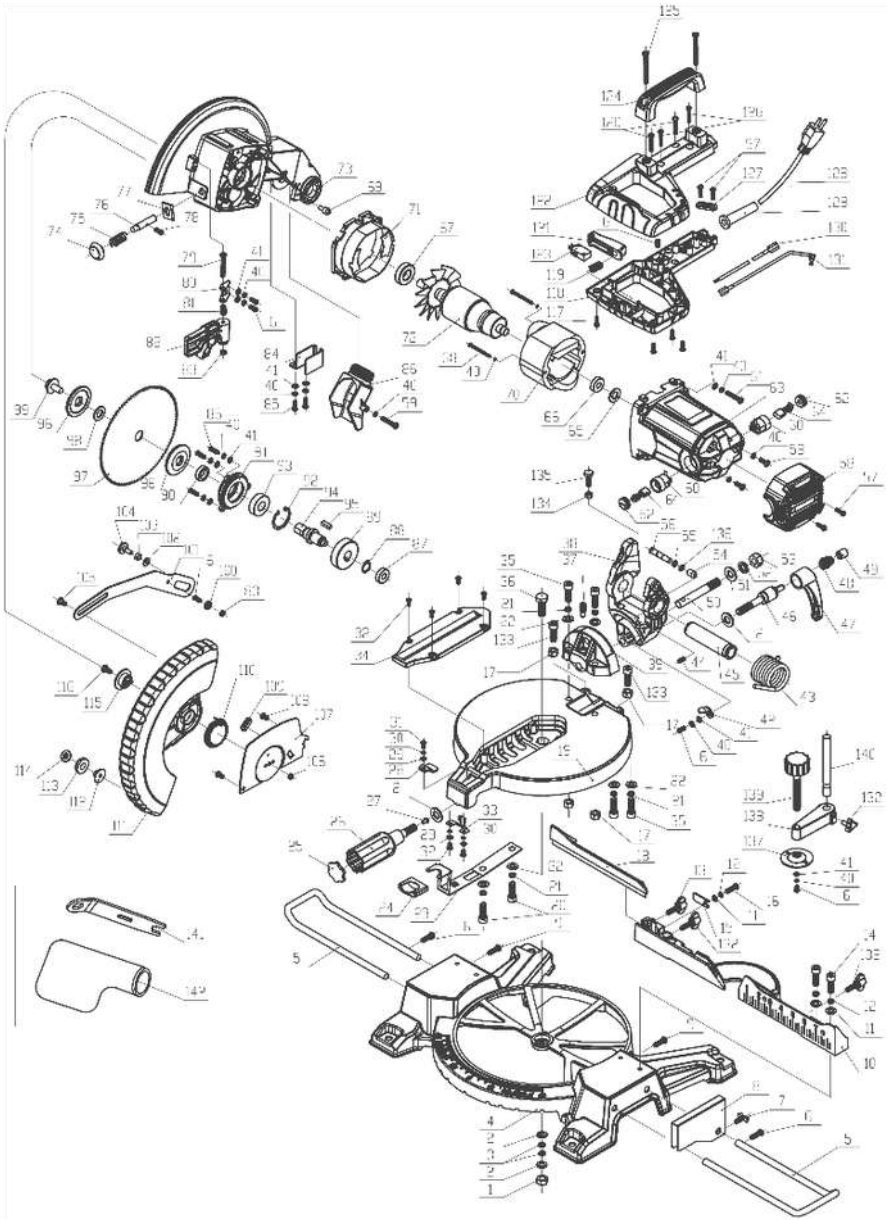

Item No.	Part No.	Part Description	Remark
BMS18007-EW			
BMS18007-SP-1	DD00004914	Nut M10	1pcs/1set
BMS18007-SP-2	DD00004915	Flat washer Φ20XΦ10X2	4pcs/1set
BMS18007-SP-3	DD00004916	Wave spring washers Φ15xΦ10	2pcs/1set
BMS18007-SP-4	DD00003760	Base	1pcs/1set
BMS18007-SP-5	DD00004918	Bracket	2pcs/1set
BMS18007-SP-6	DD00004919	Screw M5X12	7pcs/1set
BMS18007-SP-7	DD00004920	Butterfly screw M6×15	2pcs/1set
BMS18007-SP-8	DD00004921	Baffle as-bracket	1pcs/1set
BMS18007-SP-9	DD00004922	Screw M5X35	2pcs/1set
BMS18007-SP-10	DD00003766	Big baffle	1pcs/1set
BMS18007-SP-11	DD00004924	Flat washer Φ12XΦ6X1	5pcs/1set
BMS18007-SP-12	DD00004925	Spring washer 6	5pcs/1set
BMS18007-SP-13	DD00004926	Locking knob	1pcs/1set
BMS18007-SP-14	DD00004927	Screw M6X25	4pcs/1set
BMS18007-SP-15	DD00004928	Baffle plate	1pcs/1set
BMS18007-SP-16	DD00004929	Screw M6X20	1pcs/1set
BMS18007-SP-17	DD00004930	Hex Nut M8	1pcs/1set
BMS18007-SP-18	DD00003774	Movable baffle	1pcs/1set
BMS18007-SP-19	DD00004932	Turn Base	1pcs/1set
BMS18007-SP-20	DD00004933	Screw M8X16	2pcs/1set
BMS18007-SP-21	DD00004934	Spring washer 8	6pcs/1set
BMS18007-SP-22	DD00004935	Flat washer Φ16XΦ8X1	6pcs/1set
BMS18007-SP-23	DD00004936	Leaf Spring	1pcs/1set
BMS18007-SP-24	DD00004937	Leaf Spring button	1pcs/1set
BMS18007-SP-25	DD00004938	Angle grip cover	1pcs/1set
BMS18007-SP-26	DD00004939	Angle grip	1pcs/1set
BMS18007-SP-27	DD00004940	Angle grip pad	1pcs/1set
BMS18007-SP-28	DD00004941	Trun base angle indicator	1pcs/1set
BMS18007-SP-29	DD00004942	Flat washer Φ8XΦ4X0.5	3pcs/1set
BMS18007-SP-30	DD00004943	Spring washer 4	3pcs/1set
BMS18007-SP-31	DD00004944	Screw M4X14	1pcs/1set
BMS18007-SP-32	DD00004945	Screw M4X10	6pcs/1set
BMS18007-SP-33	DD00004946	Angle grip gasket	1pcs/1set
BMS18007-SP-34	DD00004947	Kerf board	1pcs/1set
BMS18007-SP-35	DD00004948	Screw M8X40	4pcs/1set
BMS18007-SP-36	DD00004949	Hex bolt M10X30	1pcs/1set
BMS18007-SP-37	DD00004950	Swivel pin	1pcs/1set
BMS18007-SP-38	DD00004951	Bracket	1pcs/1set
BMS18007-SP-39	DD00004952	Connector	1pcs/1set
BMS18007-SP-40	DD00004953	Spring washer 5	18pcs/1set
BMS18007-SP-41	DD00004954	Flat washer Φ10XΦ5X0.5	13pcs/1set
BMS18007-SP-42	DD00004955	Ajusting Indiactor	1pcs/1set

SPARE PART LIST


BMS18007

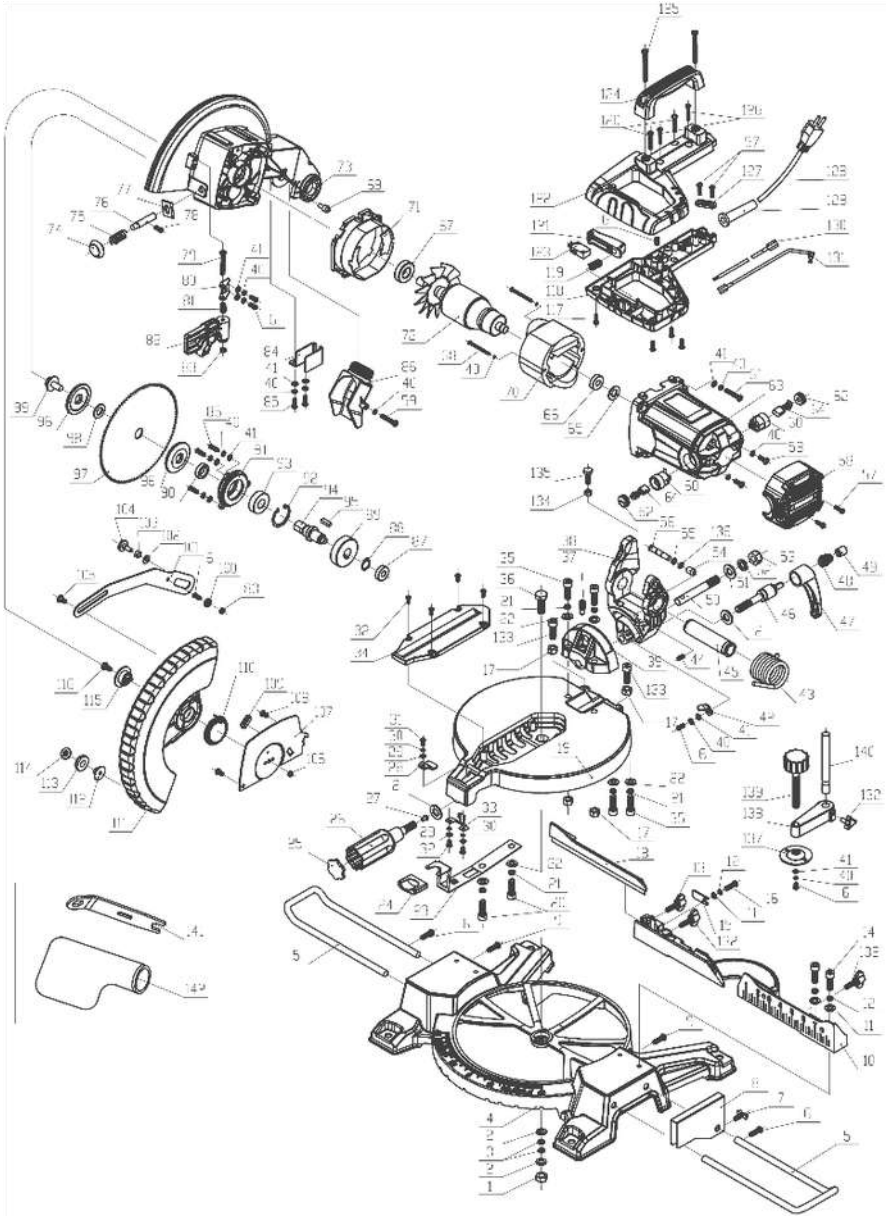

Item No.	Part No.	Part Description	Remark
BMS18007-EW			
BMS18007-SP-43	DD00004956	Big spring	1pcs/1set
BMS18007-SP-44	DD00004957	Screw M5X12	1pcs/1set
BMS18007-SP-45	DD00004958	Pin	1pcs/1set
BMS18007-SP-46	DD00004959	Head lock screw assembly	1pcs/1set
BMS18007-SP-47	DD00004960	Head lock knob	1pcs/1set
BMS18007-SP-48	DD00004961	Self locking pin spring	1pcs/1set
BMS18007-SP-49	DD00004962	Head lock button	1pcs/1set
BMS18007-SP-50	DD00004963	Bracket Pin	1pcs/1set
BMS18007-SP-51	DD00004964	Flat washer Φ24XΦ12X1.5	2pcs/1set
BMS18007-SP-52	DD00004965	Wave spring washers Φ18xΦ12	3pcs/1set
BMS18007-SP-53	DD00004966	Nut M12	1pcs/1set
BMS18007-SP-54	DD00004967	Stop pin cap	1pcs/1set
BMS18007-SP-55	DD00004968	O-ring 5	1pcs/1set
BMS18007-SP-56	DD00004969	Stop pin	1pcs/1set
BMS18007-SP-57	DD00004970	Screw ST4X14	4pcs/1set
BMS18007-SP-58	DD00004971	Rear cover	1pcs/1set
BMS18007-SP-59	DD00004972	Screw M5X12	3pcs/1set
BMS18007-SP-60	DD00004973	Brush holder assy	2pcs/1set
BMS18007-SP-61	DD00004974	Screw M5X25	4pcs/1set
BMS18007-SP-62	DD00004975	Brush cover	2pcs/1set
BMS18007-SP-63	DD00004976	Housing	1pcs/1set
BMS18007-SP-64	DD00003820	Carbon Brush	2pcs/1set
BMS18007-SP-65	DD00004978	Wave spring washers Φ27xΦ21	1pcs/1set
BMS18007-SP-66	DD00004979	6001 Bearing	1pcs/1set
BMS18007-SP-67	DD00004980	6202 Bearing	1pcs/1set
BMS18007-SP-68	DD00004981	Screw ST5X70	2pcs/1set
BMS18007-SP-69	DD00004982	Screw M8X12	1pcs/1set
BMS18007-SP-70	DD00003826	Stator	1pcs/1set
BMS18007-SP-71	DD00004984	Baffle Plate	1pcs/1set
BMS18007-SP-72	DD00003828	Armature	1pcs/1set
BMS18007-SP-73	DD00004986	Blade cover	1pcs/1set
BMS18007-SP-74	DD00004987	Self locking button	1pcs/1set
BMS18007-SP-75	DD00004988	Spindle lock spring	1pcs/1set
BMS18007-SP-76	DD00004989	Blade locking pin	1pcs/1set
BMS18007-SP-77	DD00004990	Wool felt ring	1pcs/1set
BMS18007-SP-78	DD00004991	Screw M4X30	1pcs/1set
BMS18007-SP-79	DD00004992	Screw M5X40	1pcs/1set
BMS18007-SP-80	DD00004993	Guard lock Bracket	1pcs/1set
BMS18007-SP-81	DD00004994	Guard lock spring	1pcs/1set
BMS18007-SP-82	DD00004995	Guard lock trigger	1pcs/1set
BMS18007-SP-83	DD00004996	Nut M5	2pcs/1set
BMS18007-SP-84	DD00004997	Blade guard plate	1pcs/1set

SPARE PART LIST


BMS18007

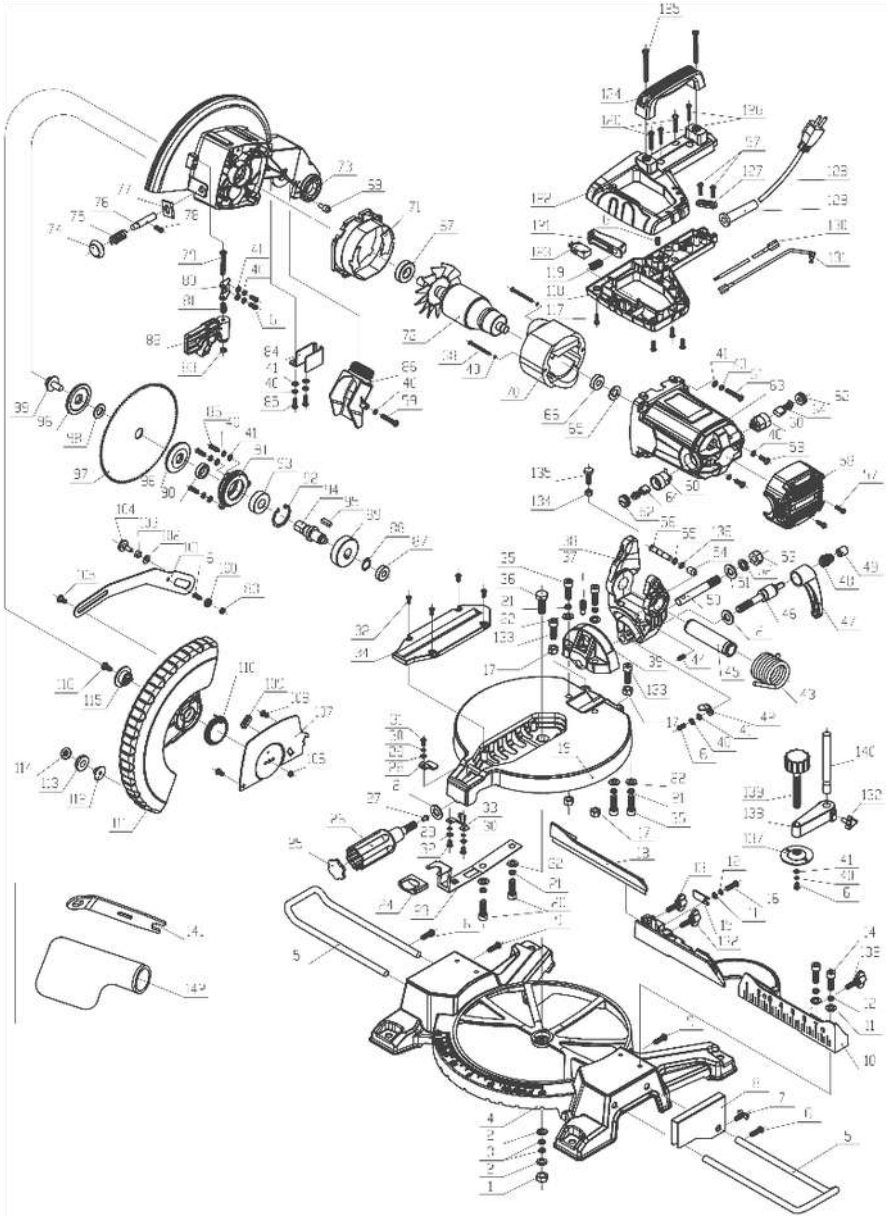

Item No.	Part No.	Part Description	Remark
BMS18007-EW			
BMS18007-SP-85	DD00004998	Screw M5X16	2pcs/1set
BMS18007-SP-86	DD00004999	Dust cover	1pcs/1set
BMS18007-SP-87	DD00005000	609 Bearing	1pcs/1set
BMS18007-SP-88	DD00005001	Circlip for shaft	1pcs/1set
BMS18007-SP-89	DD00005002	Gear	1pcs/1set
BMS18007-SP-90	DD00003846	609 Bearing	1pcs/1set
BMS18007-SP-91	DD00005004	Front cover	1pcs/1set
BMS18007-SP-92	DD00005005	Circlip for hole	1pcs/1set
BMS18007-SP-93	DD00005006	6003 Bearing	1pcs/1set
BMS18007-SP-94	DD00003850	Output shaft	1pcs/1set
BMS18007-SP-95	DD00005008	Flat key	1pcs/1set
BMS18007-SP-96	DD00005009	Blade pressing plate	2pcs/1set
BMS18007-SP-97	DD00005010	Saw blade	1pcs/1set
BMS18007-SP-98	DD00005011	Blade bushing	1pcs/1set
BMS18007-SP-99	DD00005012	Screw M8X16	1pcs/1set
BMS18007-SP-100	DD00005013	695 Bearing	1pcs/1set
BMS18007-SP-101	DD00005014	Connecting rod	1pcs/1set
BMS18007-SP-102	DD00005015	Flat washer Φ24XΦ12X1.5	1pcs/1set
BMS18007-SP-103	DD00005016	Connecting rod guide wheel	1pcs/1set
BMS18007-SP-104	DD00005017	Connecting rod fixing screw	1pcs/1set
BMS18007-SP-105	DD00005018	Connecting rod front axle position screw	1pcs/1set
BMS18007-SP-106	DD00005019	Hex Screw	1pcs/1set
BMS18007-SP-107	DD00005020	Center Cover	1pcs/1set
BMS18007-SP-108	DD00005021	Screw	2pcs/1set
BMS18007-SP-109	DD00005022	Shockproof ring	1pcs/1set
BMS18007-SP-110	DD00005023	Safety guard spring	1pcs/1set
BMS18007-SP-112	DD00005025	Guide bushing	1pcs/1set
BMS18007-SP-113	DD00005026	Guide wheel	1pcs/1set
BMS18007-SP-114	DD00005027	Bearing holder	1pcs/1set
BMS18007-SP-116	DD00005029	Hex bolt M6X12	1pcs/1set
BMS18007-SP-117	DD00005030	Screw ST4X16	4pcs/1set
BMS18007-SP-118	DD00005031	Handle cover (under)	1pcs/1set
BMS18007-SP-119	DD00005032	Switch trigger spring	1pcs/1set
BMS18007-SP-120	DD00005033	Screw M5X30	2pcs/1set
BMS18007-SP-121	DD00005034	Switch trigger	1pcs/1set
BMS18007-SP-122	DD00005035	Handle cover (upper)	1pcs/1set
BMS18007-SP-123	DD00003879	Switch	1pcs/1set
BMS18007-SP-124	DD00005037	Lifting handle	1pcs/1set
BMS18007-SP-125	DD00005038	Screw ST5X60	2pcs/1set
BMS18007-SP-126	DD00005039	Screw ST4X30	2pcs/1set
BMS18007-SP-127	DD00005040	Cord anchorage	1pcs/1set
BMS18007-SP-128	DD00005041	Power Cord	1pcs/1set

SPARE PART LIST

BMS18007

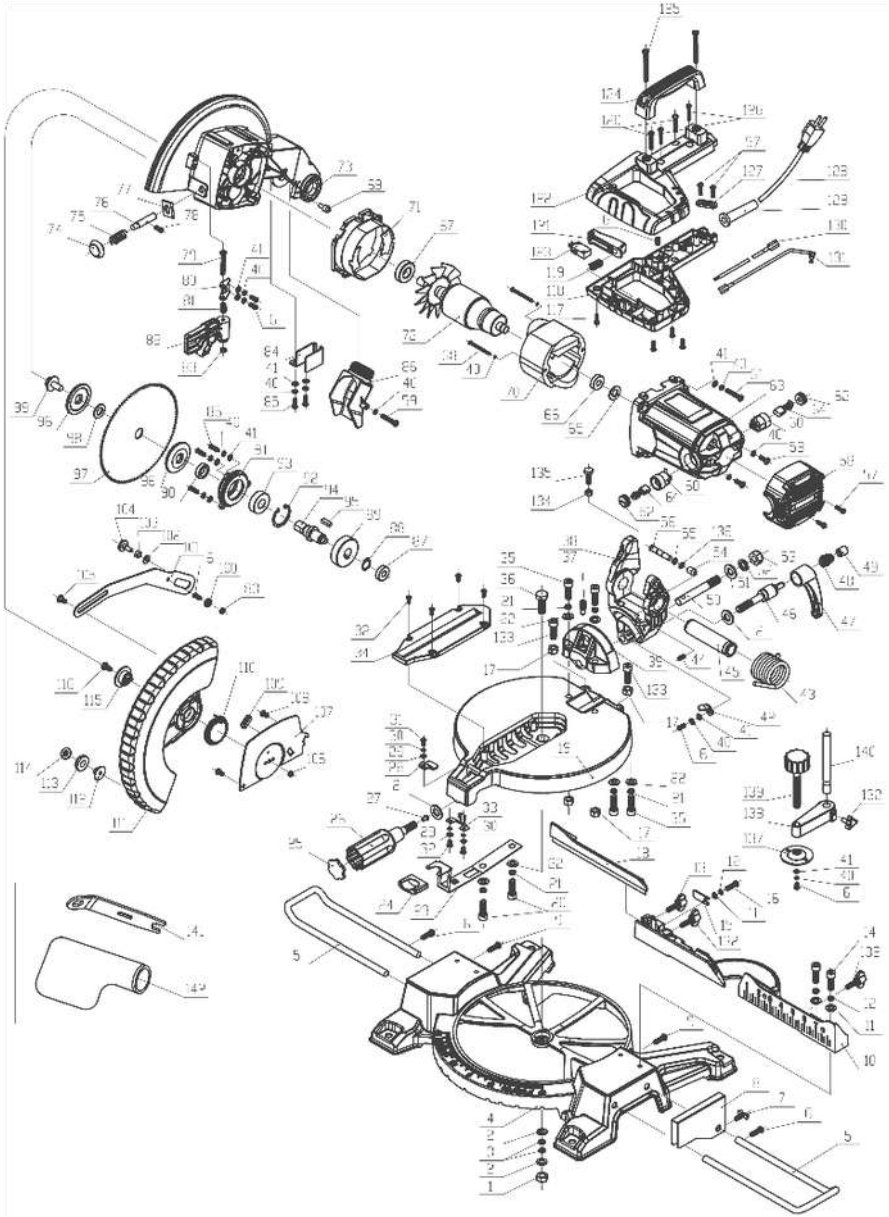

Item No.	Part No.	Part Description	Remark
BMS18007-EW			
BMS18007-SP-129	DD00005042	Cord Guard	1pcs/1set
BMS18007-SP-130	DD00005043	Connecting wire	1pcs/1set
BMS18007-SP-131	DD00005044	Brush holder wire	1pcs/1set
BMS18007-SP-132	DD00005045	Rotary knob	3pcs/1set
BMS18007-SP-133	DD00005046	Screw M8X30	2pcs/1set
BMS18007-SP-134	DD00005047	Hex Nut M6	1pcs/1set
BMS18007-SP-135	DD00005048	Hex bolt M6X18	1pcs/1set
BMS18007-SP-136	DD00005049	Split washer	1pcs/1set
BMS18007-SP-137	DD00005050	Pressing plate	1pcs/1set
BMS18007-SP-138	DD00005051	Holding base	1pcs/1set
BMS18007-SP-139	DD00005052	Pressing plate handle	1pcs/1set
BMS18007-SP-140	DD00005053	Pressing plate pin	1pcs/1set
BMS18007-SP-141	DD00005054	Wrench	1pcs/1set
BMS18007-SP-142	DD00005055	Dust bag	1pcs/1set
BMS18007-SP-111/115	DD00013158	Transparent cover component	1pcs/1set