
P271-PL230C ตัวเครื่อง

Model No.	Model Name(CHN)	Model name(ENG)	Qty
C1	启动器罩	Starter cover	1
C2	花型圆柱螺钉M5*20	Screw M5*20	7
C3	自攻螺钉ST5.0*20F	Screw ST5.0*20F	12
C4	启动拉手	Starter puller	1
C5	启动拉绳	Starter rope	1
C6	出绳嘴	Rope exit nozzle	1
C7	绳轮紧固螺丝	Rope wheel fastening screw	1
C8	启动盘簧	Starter disc spring	1
C9	启动绳轮	Starter rope sheave	1
C10	绳轮紧固垫圈	Rope wheel fastening washers	1
C11	启动轮卡簧	Starter wheel clamping spring	1
C12	O型圈φ28*3.55	O-ring φ28*3.55	1
C13	自攻螺钉ST5.0*16F	Self-tapping screws ST5.0*16F	6
C14	后手柄左盖	Rear handle left cover	1
C15	熄火开关	Switch	1
C16	熄火线B	Flame out wire B	1
C17	波纹管	Corrugated Pipe	1
C18	接地线B	Grounding wire B	1
C19	扳机控制臂	Trigger control arm	1
C20	扳机	Trigger	1
C21	扳机扭簧	Trigger torsion spring	1
C22	后手柄右盖	Rear handle right cover	1
C23	按钮轴	Button Shaft	1
C24	按钮压簧	Button compression spring	1
C25	自锁按钮	Self-locking button	1
C26	油箱盖总成	Fuel tank cap assembly	1
C27	旋转控制臂	Rotating control arm	1
C28	旋转控制臂压簧	Rotary control arm compression sprin	1
C29	油门拉索	Throttle cable	1
C30	燃油平衡器	Fuel Balancer	1
C31	燃油平衡器座	Fuel balancer holder	1
C32	油箱总成	Fuel tank assembly	1
C33	燃油滤	Fuel filter	1
C34	燃油管	Fuel pipe	4
C35	O型圈φ20*1.8	O-ring φ20*1.8	1
C36	油管座	Fuel Hose Holder	1
C37	出油管φ3Xφ6X132	Oil outlet pipe φ3Xφ6X132	1
C38	回油管φ2Xφ5.5X168	Oil return pipeφ2Xφ5.5X168	1
C39	前提把	Front handle	1
C40	底座	Base	1
C41	减震弹簧	Vibration damping springs	1

P271-PL230C ชุดใบตัด


No.	Model Name(CHN)	Model Name(ENG)	Qty
B1	梅花圆柱组合螺钉M5	Phillips Pan Head Combination Screw	2
B2	下罩	Lower Cover	1
B3	拨动盘	Thrust Washer	1
B4	定位销φ7X6	Locating Pin φ7×6	2
B5	齿轮箱	Gearbox	1
B6	定位销φ4X8	Positioning Pull Pin φ4×8	1
B7	轴承6002	Bearing 6002	1
B8	滚针轴承HK0808	Needle Roller Bearing HK0808	3
B9	孔用挡圈φ32	Circlip for Bore φ32	1
B10	主动齿	Driving Gear	1
B11	梅花圆柱组合螺钉M5	Phillips Pan Head Combination Screw	3
B12	连杆垫片	Connecting Rod Gasket	2
B13	刀片连杆	Blade Connecting Rod	2
B14	偏心齿轮	Eccentric Gear	1
B15	齿轮箱纸垫	Gearbox Gasket	1
B16	齿轮箱盖	Gearbox Cover	1
B17	注油螺栓	Grease Fitting Bolt	6
B18	排气管	Exhaust Pipe	1
B19	花型圆柱头螺钉M4*1	Phillips Pan Head Screw M4*18	2
B20	刀片护套	Blade cover	1
B21	护刃板	Blade Guard	1
B22	塑料衬板	Plastic Liner	1
B23	密封毛毡	Seal Felt	1
B24	花型圆柱头螺钉M5*2	Phillips Pan Head Screw M5*25	8
B25	下压条	Lower Presser Bar	1
B26	刀片大衬套	Large Blade Bushing	3
B27	刀片	Blade	2
B28	刀片小衬套	Small Blade Bushing	5
B29	上压条	Upper Presser Bar	1
B30	铝压条	Aluminum Presser Bar	1
B31	全金属六角锁紧螺母	Hex Lock Nut	7
B32	防护板	Protective Plate	1
B33	滚针轴承HK26326	Needle Bearing HK26326	2

P271-PL230C ตัวเครื่อง

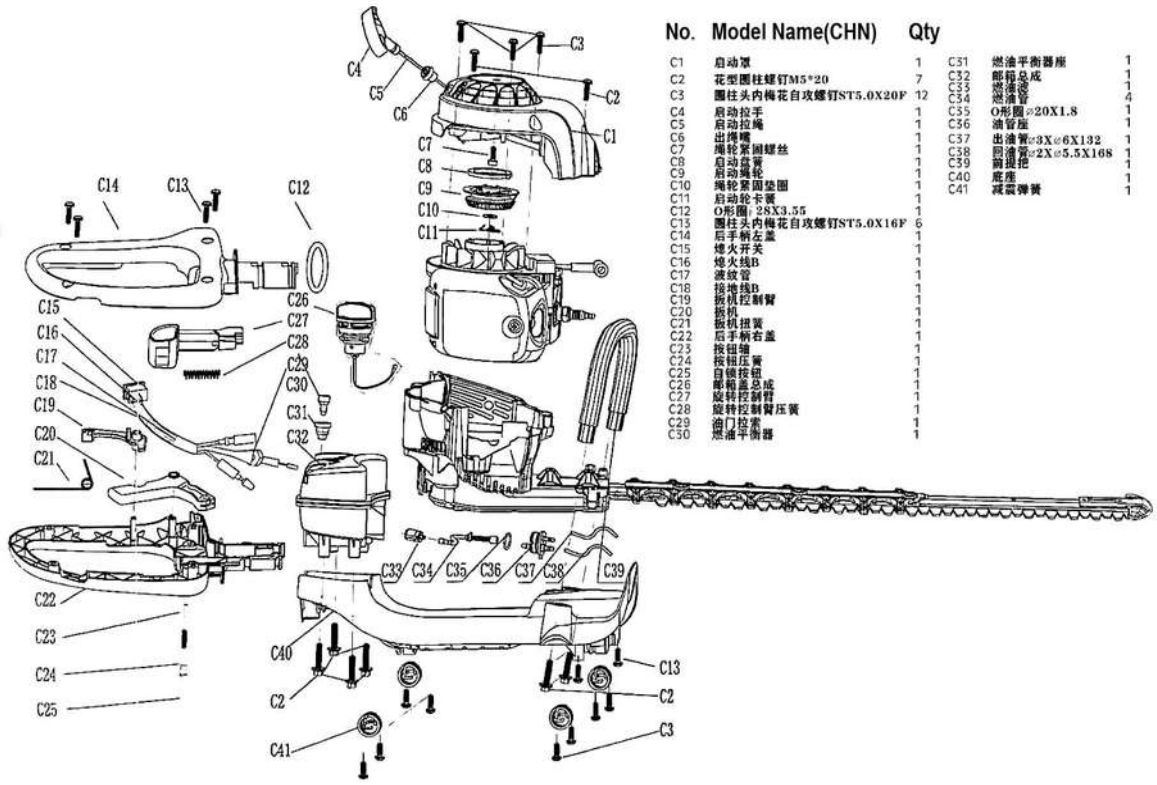

No.	Model Name(CHN)	Qty	No.	Model Name(CHN)	Qty
C1	启动器	1	C31	燃油平衡器座	1
C2	花型圆柱螺钉M5*20	7	C32	邮箱总成	1
C3	圆柱头内梅花自攻螺钉ST5.0X20F	12	C33	燃油滤	1
C4	启动拉手	1	C34	燃油管	4
C5	启动拉绳	1	C35	O形圈⌀20X1.8	1
C6	出牌螺	1	C36	油管座	1
C7	绳轮紧固螺丝	1	C37	出油管⌀3X⌀6X132	1
C8	启动簧簧	1	C38	回油管⌀2X⌀5.5X168	1
C9	启动绳轮	1	C39	前提把	1
C10	绳轮紧固垫圈	1	C40	底座	1
C11	启动轮卡簧	1	C41	减震弹簧	1
C12	O形圈:28X3.55	1			
C13	圆柱头内梅花自攻螺钉ST5.0X16F	6			
C14	后手柄左盖	1			
C15	熄火开关	1			
C16	熄火线B	1			
C17	波纹管	1			
C18	接地线B	1			
C19	拨机控制臂	1			
C20	拨机	1			
C21	拨机扭簧	1			
C22	后手柄右盖	1			
C23	按钮轴	1			
C24	按钮压簧	1			
C25	自锁按钮	1			
C26	邮箱盖总成	1			
C27	旋转控制臂	1			
C28	旋转控制臂压簧	1			
C29	油门拉索	1			
C30	燃油平衡器	1			

P271-PL230C ชุดใบตัด

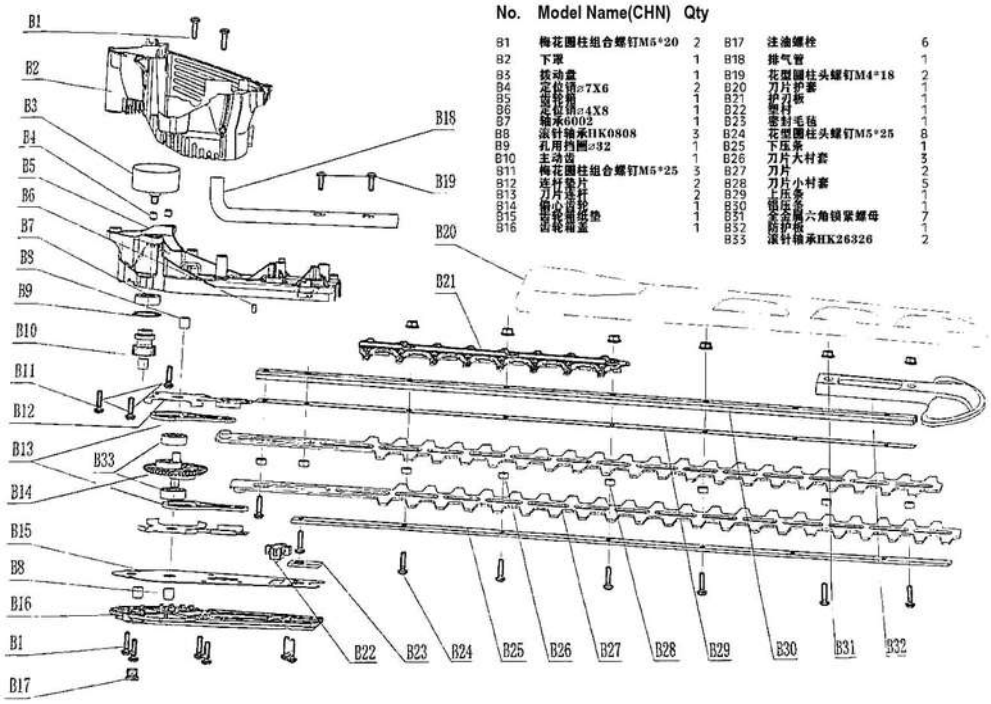

No.	Model Name(CHN)	Qty	No.	Model Name(CHN)	Qty
B1	梅花圆柱组合螺钉M5*20	2	B17	注油螺栓	6
B2	下罩	1	B18	排气管	1
B3	拨动盘	1	B19	花型圆柱头螺钉M4*18	2
B4	定位销Ø7X6	2	B20	刀片护套	1
B5	定位销	1	B21	护刃板	1
B6	定位销Ø4X8	1	B22	垫衬	1
B7	轴承6002	1	B23	密封毛毡	1
B8	滚针轴承HK0808	3	B24	花型圆柱头螺钉M5*25	8
B9	孔用挡圈Ø32	1	B25	下压条	1
B10	主动齿	1	B26	刀片大衬套	3
B11	梅花圆柱组合螺钉M5*25	3	B27	刀片	2
B12	连杆垫片	2	B28	刀片小衬套	5
B13	刀片连杆	2	B29	上压条	1
B14	偏心齿轮	1	B30	锁压条	1
B15	齿轮箱纸垫	1	B31	全金属六角锁紧螺母	7
B16	齿轮箱盖	1	B32	防护板	1
			B33	滚针轴承HK26326	2