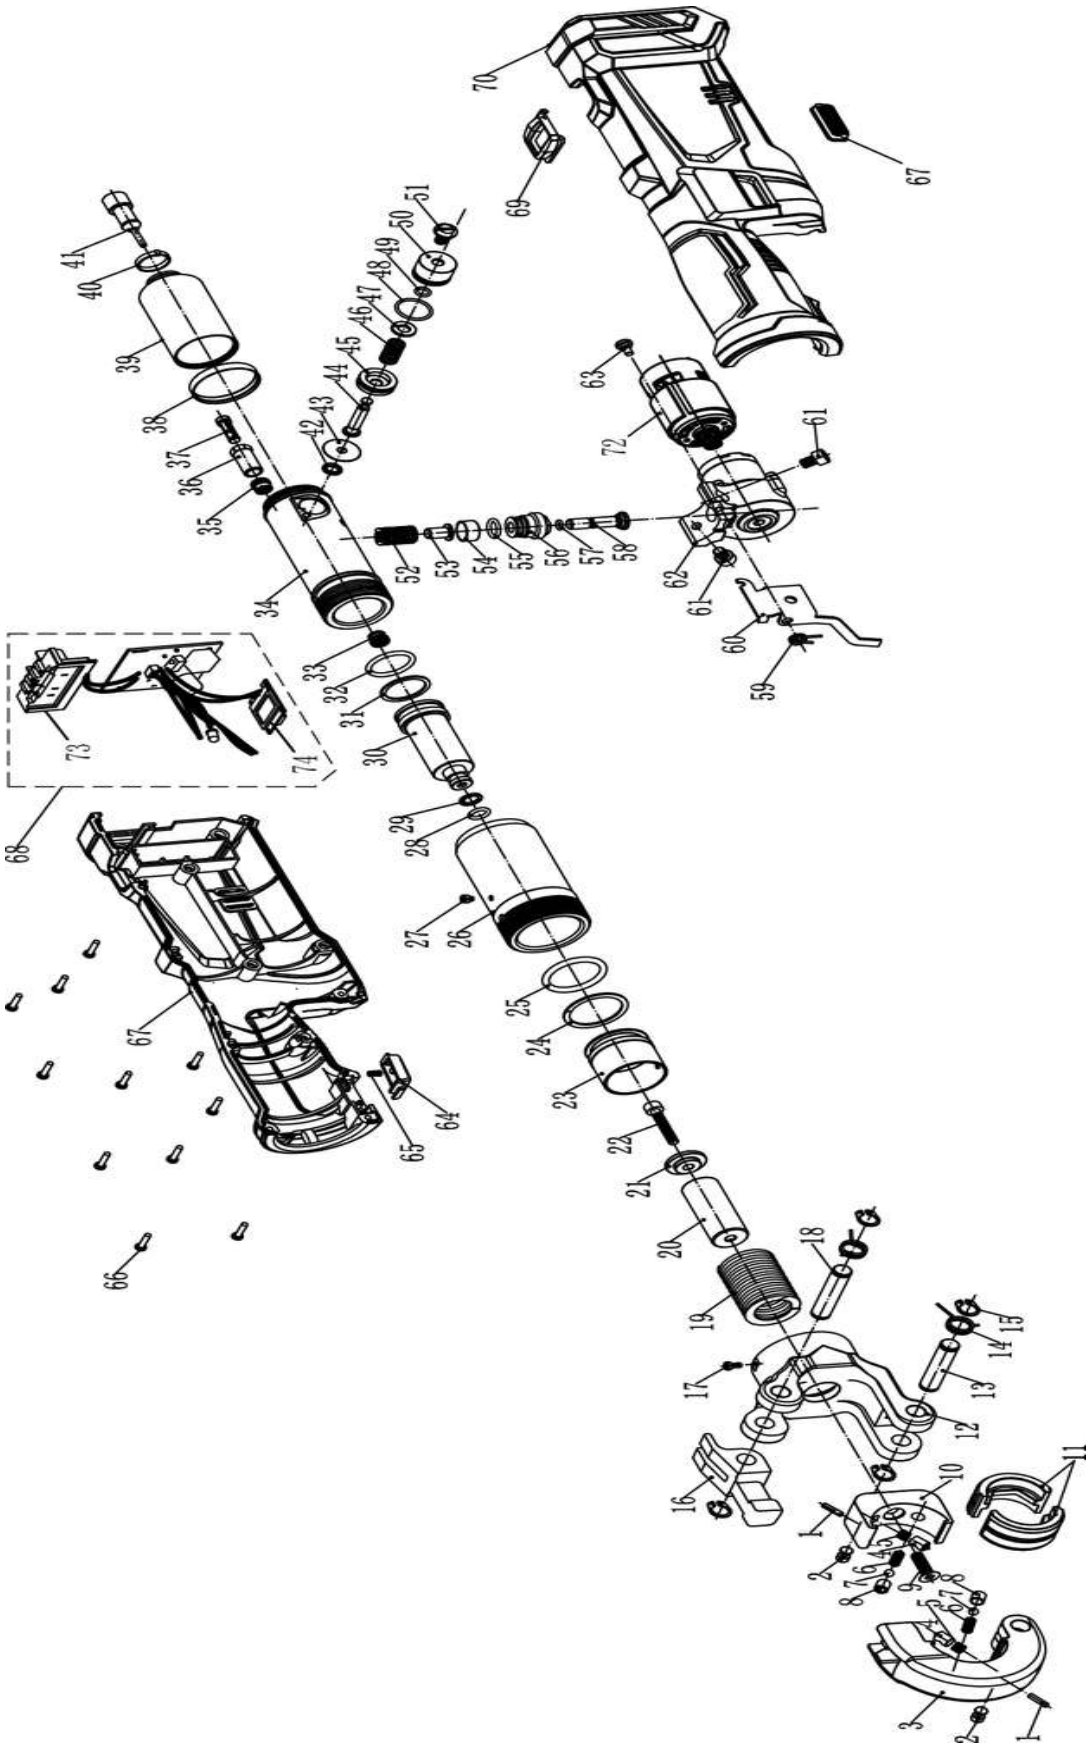


No	Code	Name of Spare Parts	Remark
1	30021500007	Spring Pin 3×12	
2	30009002813	Pin	
3	30009002814	Upper Die Base	
4	30009002815	Locating Pin	
5	30009002816	Spring 0.5×5.5×9	
6	30009002817	Spring 0.6×4.7×13	
7	30021000004	Steel Ball 5	
8	30009002819	Copper Sleeve	
9	30021100026	Cross Recessed Countersunk Head Screw M6×22	
10	30009002821	Die Base	
11	30009003001	Dies 35	
11	30009003007	Dies 185	
11	30009003008	Dies 240	
11	30009003002	Dies 50	
11	30009003006	Dies 150	
11	30009002999	Dies 16	
11	30009003003	Dies 70	
11	30009003005	Dies 120	
11	30009003004	Dies 95	
11	30009003000	Dies 25	
11	30009003009	Dies 300	
11	30009009003	Moulding-die 10	
12	30009002884	Crimping Head Holder	
13	30009002885	Round Pin 40.5	
14	30009002886	Torsion Spring	
15	30021600015	Circlip For Shaft 10	
16	30009002887	Latch	
17	30009002888	Hex Socket Cap Screw M3×6	
18	30009002889	Round Pin 42.5	
19	30009002890	Reset Spring	
20	30009002891	Piston Rod	
21	30009002892	Spring Collar	
22	30009002893	Hexagon Socket Head Cap Screws M5×30	
23	30009002894	Piston	
24	30009002895	Plastic Retainer Ring 35×29×1.3	
25	30009002896	O Ring 28×3.5	
26	30009008135	Oil Cylinder	
27	30009008136	Hex Socket Cap Screw M3×3	
28	30009008137	O Ring 8×2	
29	30009008138	Plastic Ring DQ12×9×1.3	

No	Code	Name of Spare Parts	Remark
30	30009008139	Piston	
31	30009008140	Plastic Ring DQ27×22.5×1.2	
32	30009008141	O Ring 27.14×2.62	
33	30009002898	Check Valve (Outlet)	
34	30009008142	Cylinder Block	
35	30009002900	Check Valve (Intlet)	
36	30009002901	Filter Body	
37	30009002902	Filter	
38	30009008143	Slide Bushing	
39	30009008144	Oil Bag	
40	30009002905	Cable Tie 4×150	
41	30009002906	Faucet	
42	30009002907	Washer 10×6.7×1	
43	30009008145	Relief Valve Base	
44	30009008146	Relief Valve Needle	
45	30009008147	Relief Valve Piston	
46	30009008148	Relief Valve Spring	
47	30009008149	Copper Washer 6	
48	30009008150	O Ring 14×1.5	
49	30009008151	O Ring 8.6×1.5	
51	30009008153	Pressure Adjusting Screw	
52	30009008154	Plunger Spring	
53	30009008155	Guide Pin	
54	30009008156	Plunger Spring Base	
55	30009008157	O Ring 12×1.5	
59	30009008161	Torsion Spring	
60	30009008162	Relief Lever	
61	30021100632	Flat Screw M4×6	
62	30009008163	Gearbox Assembly	
63	30009008164	Relief Valve Screw	
64	30009008165	Start Button (Red)	
64	30009010236	Start Button (Black)	
65	30009008166	Spring For Start Buttton	
66	30021200014	Torx Pan Head Tapping Screw ST2.9×16	
67	30009008167	Motor Housing Assembly (东成)	
67	30009010238	Motor Housing Assembly(DCA)	
67	30009010239	Motor Housing Assembly(DCK)	
67	30009010240	Motor Housing Assembly(DongCheng)	
68	30009008168	Circuit Board Assembly	
69	30009008169	Display Panel Case	
71	30009008170	Relief Valve Button (Red)	
71	30009010237	Relief Valve Button (Black)	

No	Code	Name of Spare Parts	Remark
72	30009008171	Motor Assembly	
73	30019901498	Terminal Socket	
74	30009008172	Display Panel	
T1	30009010245	Plunger Assembly	Including：56-58
T2	30109000115	Plastic Case (Blue)	