
# Exploded view BG6 and BG8

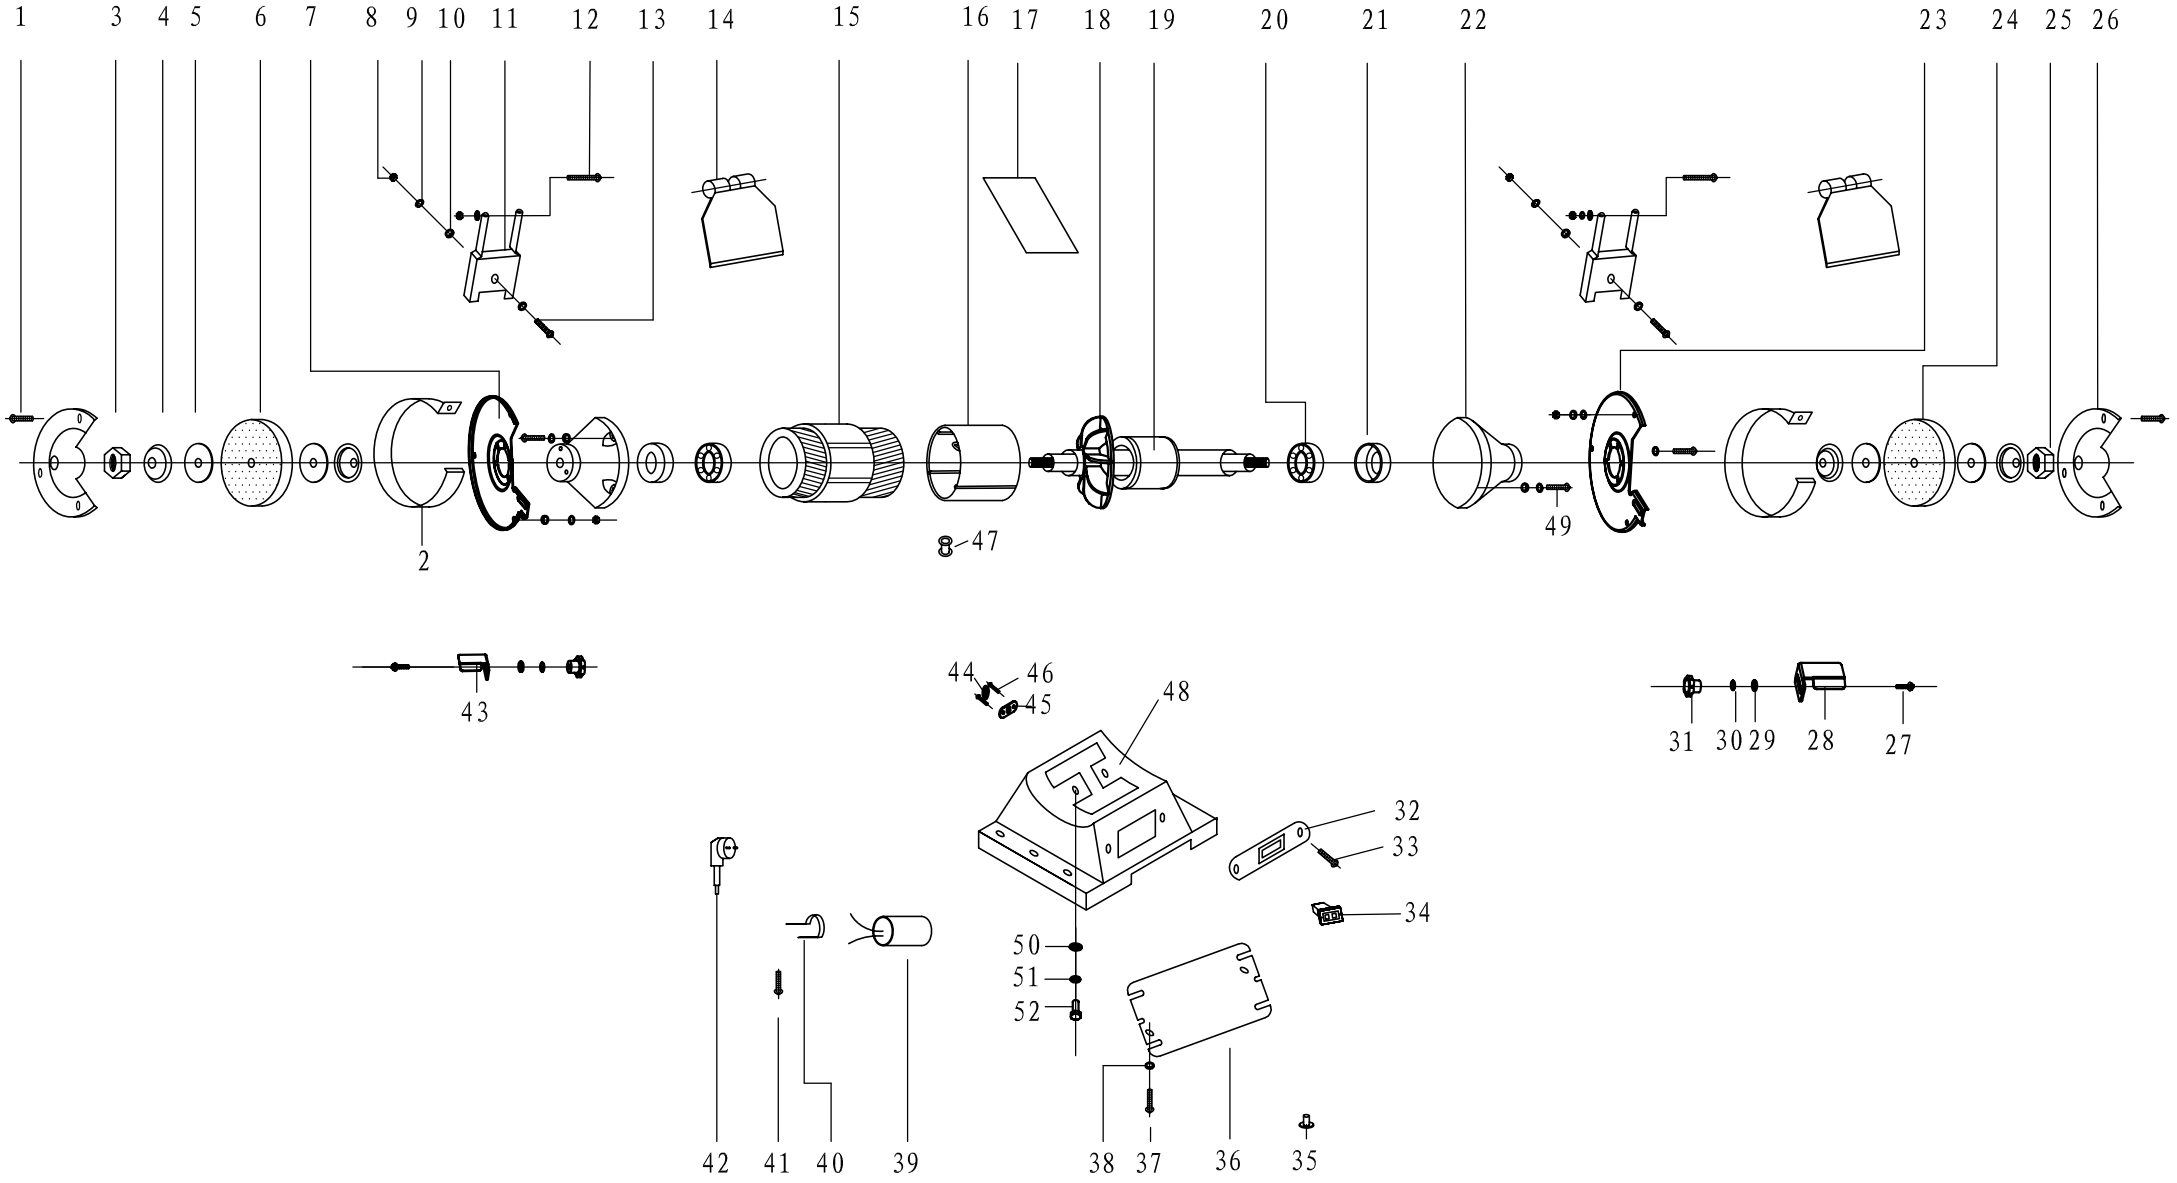

# Model:BG6 and BG8

| Part Number | Component Description | Quantity | Part Number | Component Description | Quantity |
|---|---|---|---|---|---|
| 1 | Bolt | 6 | 30 | Washer | 2 |
| 2 | Wheel ring | 2 | 31 | Knob nut | 2 |
| 3 | Nut | 1 | 32 | Switch Panel | 1 |
| 4 | Wheel flange | 4 | 33 | Screw | 2 |
| 5 | Nameplate of wheel | 4 | 34 | Switch | 1 |
| 6 | Wheel | 1 | 35 | Rubber Feet | 4 |
| 7 | Left Inner guard | 1 | 36 | Base plate | 1 |
| 8 | Screw | 10 | 37 | Screw | 2 |
| 9 | Washer | 20 | 38 | Washer | 2 |
| 10 | Washer | 14 | 39 | Capacitor | 1 |
| 11 | Eyeshield Bracket | 2 | 40 | Capacitor clip | 1 |
| 12 | Screw | 2 | 41 | Screw | 1 |
| 13 | Screw | 8 | 42 | Cable | 1 |
| 14 | Eyeshield | 2 | 43 | Left tool rest | 1 |
| 15 | Stator | 1 | 44 | Cable adaptor | 1 |
| 16 | Motor Housing | 1 | 45 | Screw | 2 |
| 17 | Nameplate | 1 | 46 | Cable presssure plate | 1 |
| 18 | Fan | 1 | 47 | Cable protector | 1 |
| 19 | Rotor | 1 | 48 | Base | 1 |
| 20 | Bearing | 2 | 49 | Screw | 8 |
| 21 | Bearing cover | 2 | 50 | Washer | 2 |
| 22 | Cover | 2 | 51 | Washer | 2 |
| 23 | Right Inner guard | 1 | 52 | Bolt | 2 |
| 24 | Wheel | 1 | | | |
| 25 | Nut | 1 | | | |
| 26 | outer guard | 2 | | | |
| 27 | Square Neck Screw | 2 | | | |
| 28 | Right tool rest | 1 | | | |
| 29 | Washer | 2 | | | |