RUTLAND™ SPORT

DIGITAL STOPWATCH

ORDER CODE RTL314-3120K

USER INSTRUCTIONS

Thanks for choosing our professional stopwatch. This digital stopwatch features split time and lap time measurement, as well as countdown / count up timer, normal time and pacer function.
To get the most out of your purchase, be sure to carefully read this leaflet and keep for reference.

CONTENTS

A. FEATURES	3
B. MODE	4
C. TIME / CALENDAR DISPLAY	5
D. STOPWATCH FUNCTION	6
E. COUNTDOWN AND UP FUNCTION	8
G. CARE OF YOUR STOPWATCH	11
F. PACER FUNCTION	10

A. FEATURES

- STOPWATCH: The stopwatch can measure up to 10 hours in 1/100sec.
- SPLIT TIME / LAP TIME MEASUREMENT
- LARGE-SIZE THREE-ROW DISPLAY

- PANEL: Total elapsed time, split time or lap time are displayed at the same time in separate rows, and they can be measured without releasing split or lap time measurement.
- MEMORY FUNCTION: Up to 100 lap measurements can be stored in memory (varies with different models),and they can be recalled with fastest lap time, slowest lap time and average lap time.
- TIME/ CALENDER DISPLAY: Year, month, date, week, hour, minutes and seconds can be displayed while the stopwatch is not used.
- TIME MODE: 12/ 24 hour display
- PACER MODE: The pacer value can be adjusted from 10 to 320 counts per minute.

12

B. MODE

IMPORTANT NOTICE:
- You can go through each mode by pressing the MODE key.



Time and Calendar Mode



Countdown Mode



Stopwatch Mode



Pacer Mode

- The stopwatch has been turned off before shipment in order to save power.
- Before usage, please install attached CR2032 lithium battery with included miniscrewdriver.
- Stopwatch will take a while to get totally activated.

C. TIME / CALENDAR DISPLAY

- In time display mode, press SPLIT/RESET key to enter into Time setting mode. The year will start flashing, press START/STOP key to advance the year.
- After setting the year, you can press the SPLIT/RESET key to set the month, and you can press SPLIT/RESET key again to advance the month. You can adjust the date, 12/24 hour display, hour, minute and second in the same way. The order is as follows:

Year - Month - Date - 12/24 hour - Hour - Minute - Second

- Press MODE key to confirm the setting at any stage.
- The hour display can have 12 / 24 hour display option.
- The year range is from 2000 to 2049. The date will adjust automatically for odd and even month including February of leap year.


D. STOPWATCH FUNCTION

- In Time/ Calendar mode, press MODE key to switch to Stopwatch mode.
- Before using the stopwatch, be sure to reset the stopwatch to zero by pressing the SPLIT/RESET key.
- Start the stop watch by press the START/STOP key, and press the SPLIT/RESET key to record the SPLIT/RESET time.
  You can pause and resume the stopwatch by pressing the START/STOP key.
- “Lap time” refers to an elapsed time required to cover a given section of the whole distance.
- “Split time” refers to an elapsed time required to cover a distance from the start to a given point.
- The first row of the display will show the Split time, as well as the lap gone through (on the top left hand corner). The second row of the display will show the elapsed time of the last lap,and the bottom row show the total time elapsed.



- Press the START/STOP key to finish the timing. To recall the record, press the RECALL key to go through the recorded time data (Both Lap time and Split time) of every lap.



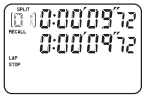


- Whenever RECALL icon appear, you can press the START/STOP key to display the average lap time, and press the SPLIT/RESET key to recall the fastest lap time, and press the SPLIT/RESET key again to recall the slowest lap time.
- After going through all the data, you can press the MODE key to come back to stopwatch main screen. You can clear the record by press the SPLIT/RESET key, or resume the stopwatch by pressing the START/STOP key again.




- After setting, press the MODE key to confirm the setting. Your target countdown time will be shown in the middle line and the bottom line of display.
- Press the START/STOP key to start, and press it again to stop / pause / resume it.
- When the timer reaches zero, there will be an audio signal “beep” sound to alert you, and the memory will add on forward. The number of countdown time periods passed by will show on the top row of display.



- When the timer reaches zero again, there will be an audio signal “beep” sound to alert you again, and the memory will add on forward.
- After finishing with the countdown timer, press the SPLIT/RESET key to clear the setting.

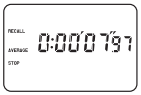



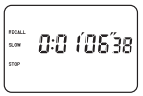

Note: Unless starting a new measurement, the restored time data can never disappear; even the number is adjusted to “00”.

E. COUNTDOWN AND UP FUNCTION

- In Time mode, press the MODE key twice to enter timer mode (timer icon “TR” will appear in the upper left corner).

- You can set the countdown time by pressing the SPLIT/RESET key. Then adjust the order as follows:


Hour - Minute - Second

- You can press START/STOP key to add 1 to it, and it will add automatically by pressing and holding the START/STOP key for 2 second.

F. PACER FUNCTION

- In Time mode, press the MODE key three times to enter PACER mode (“PACE” will be display on the top row).
- The digits on the lower corner will be flashing. Press the Split/Reset key to select the frequency of the speed as follow: 10,20,30,40,60,80,120,160,240,320.
- Press START/STOP key to start the pacer. If you choose 120, there will be 120 “Beep” sound per minute.
- PACE will be flashing on the upper row, and the counted value of beep will be shown on the middle row and the frequency will be on the bottom row. Press the SPLIT/RESET key to clear the count value when you stop the pacer function. Please note that the pacer data will not be stored if you exit the pacer mode.



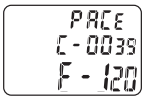

G.CARE OF YOUR WATCH

- Never attempt to disassemble or service your stopwatch.
- Protect your stopwatch from extreme heat, shocks and long time exposure to direct sunlight.
- Stopwatch can be wiped clean with a lightly moistened cloth. Apply mild soap to the area if there are stubborn stains or marks. Do not expose your stopwatch to strong chemicals such as gasoline, clean solvents, acetone, alcohol, insect repellents, as they may damage the unit’s seal, case and finish.
- Store your stopwatch in a dry place when you are not using it.
- Avoid allowing the stopwatch to come into direct contact with hair liquids,colognes, sun block creams,and other toiletries, which can cause deterioration of the plastic parts of the stopwatch. Whenever the stopwatch comes into contact with these or other toiletries, wipe it off immediately with a dry, soft cloth.