

INSTALLATION INSTRUCTION

Fuse monitors


OFM_

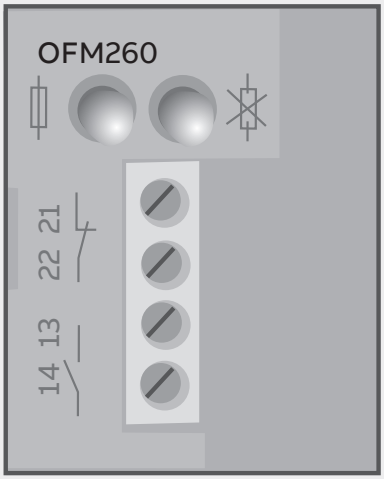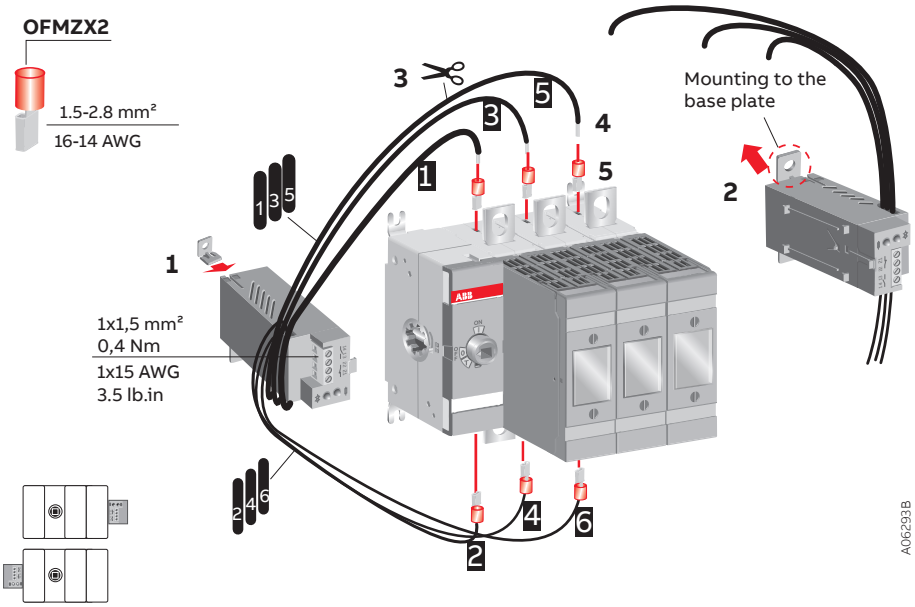


OS32...1250


OFMZX2
1.5-2.8 mm²
16-14 AWG
1x1,5 mm²
0,4 Nm
1x15 AWG
3.5 lb.in
Mounting to the
base plate
A06293B

OSMini 20...40 + OFM_

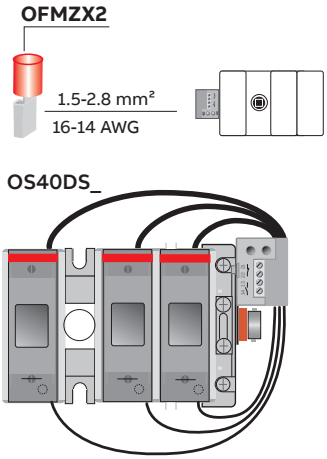

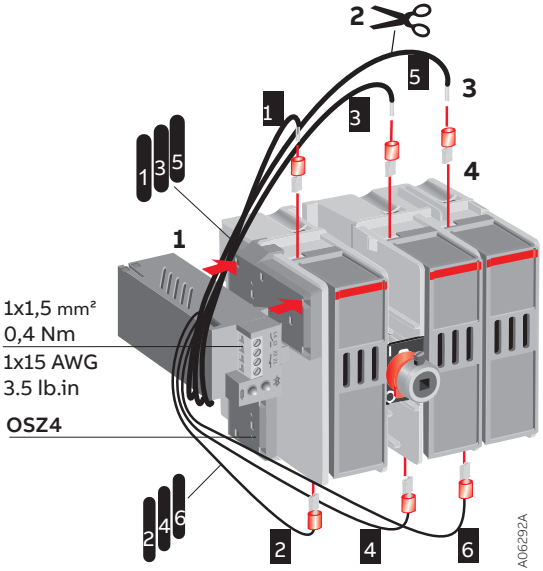


Functionality of the fuse monitor

		Green LED	Red LED	N.O	N.C
Switch fuse closed	Fuse OK	On	Off	Open	Closed
	Fuse blown	Off	On	Closed	Open
Switch fuse open	Fuse Ok	Off	Off	Open	Closed
	Fuse blown	Off	Off	Open	Closed


OFAX + OFM_



0,75 mm²
18 AWG

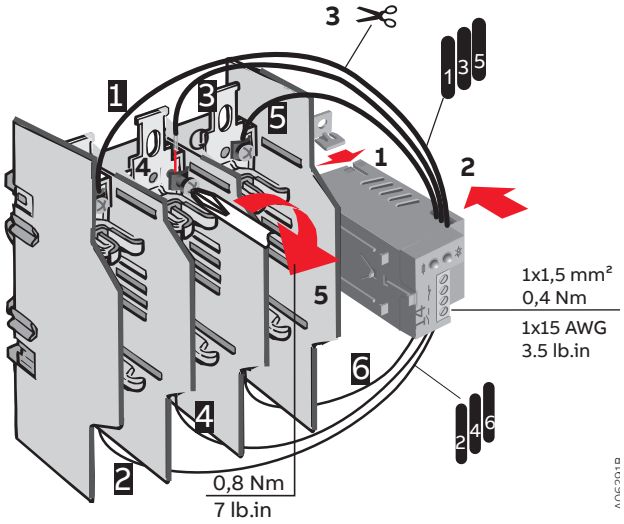



1
3
5
2
4
6
0,8 Nm
7 lb.in
1x1,5 mm²
0,4 Nm
1x15 AWG
3.5 lb.in


OFM_

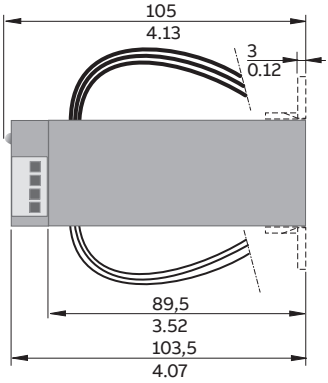
105
4.13
3
0.12
89,5
3.52
103,5
4.07

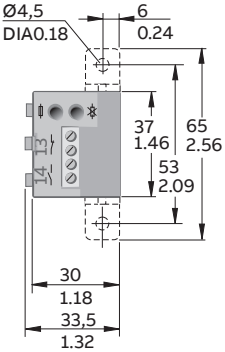
Ø4,5
DIA0.18
6
0.24
37
1.46
65
2.56
53
2.09
30
1.18
33,5
1.32

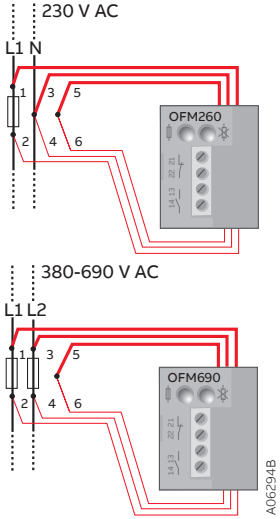
230 V AC
L1 N
OFM260
380-690 V AC
L1 L2
OFM690
A06294B

OFM_

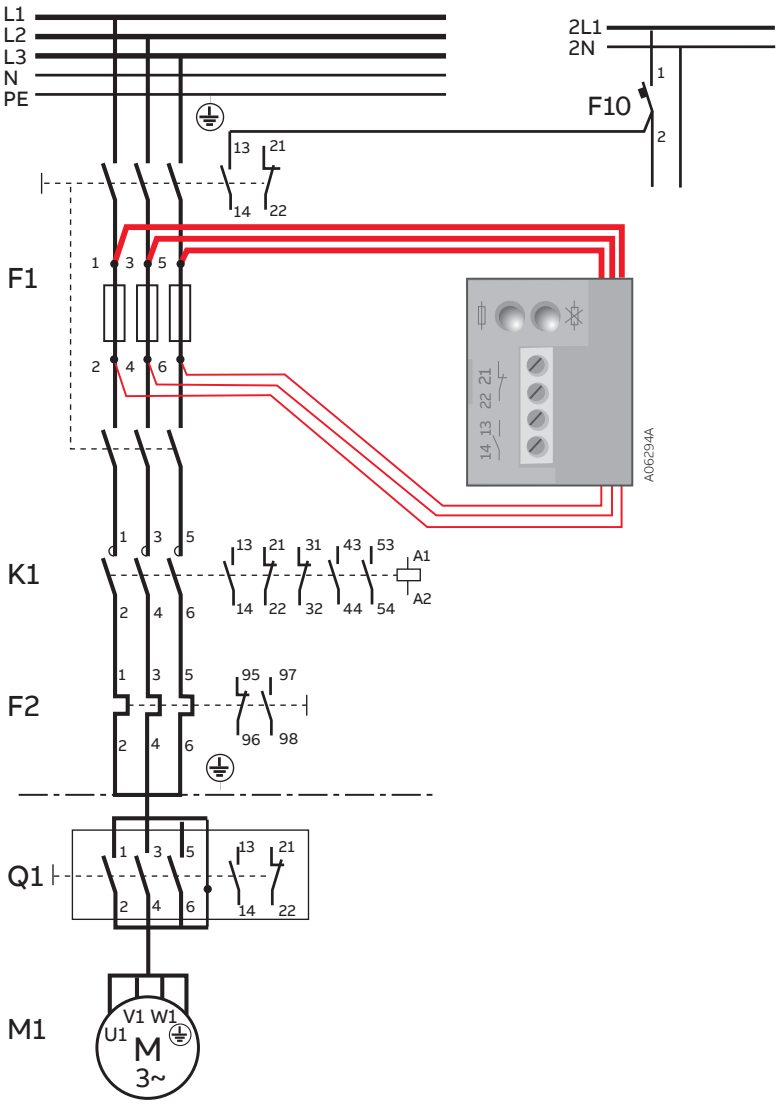
L1
L2
L3
N
PE
2L1
2N
F10
1
2
13
21
14
22
F1
1
3
5
2
4
6
14 13 22 21
A06294A
K1
1
3
5
13
21
31
43
53
A1
2
4
6
14
22
32
44
54
A2
F2
1
3
5
95
97
2
4
6
96
98
Q1
1
3
5
13
21
2
4
6
14
22
M1
V1 W1
U1
M
3~

Contact us

ABB Oy
Muottitie 2A 65320
Vaasa, Finland
abb.com/lowvoltage

© Copyright 2025 ABB. All rights reserved.
Specifications subject to change without notice.

34 OFM1 rev. M/ 1SCC314001M0008 # 18.11.2025