
Andon light wireless solutions for machine monitoring & workstation call-for-action systems

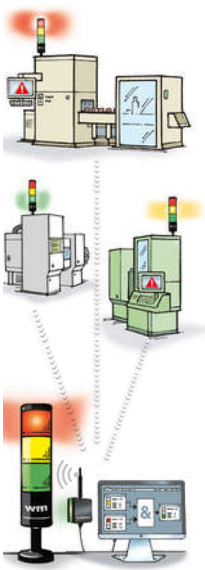

WERMA

Easy steps to head-of-line monitoring



1

Select your signal tower modules & add a transmitter to your system


184-5126


184-5128


184-5127


455-3407


314-7332

+


184-5124

2

Install ethernet master & software on your network


184-5126


184-5128


184-5127


455-3407


314-7332

+


185-3038

3

Install another signal tower in head of line location but add WIN slave control

4

Monitor from your PC


184-5123