06/08 AWA2100-2127

Montageanweisung
Installation Instructions
Notice d´installation
Istruzioni per il montaggio
Instrucciones de montaje
Инструкция по монтажу
安装说明


MOELLER

ALPHA LOVAG


DILM(C)17...M(C)38...
DILMF8...MF32...


DILM(C)32-XHI...
DILM32-XHI11-S

Hilfsschalterbaustein
Auxiliary contact module
Module de contacts auxiliaires
Modulo contatti ausiliari
Módulo de contactos auxiliares
Модуль вспомогательных вы ключателей
辅助开关组

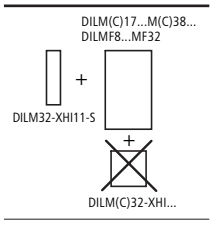


Montage **Mounting** **Montage** **Montaggio** **Montaje** Монтаж 安装	① aufsetzen ② rasten	① place in position ② latch in	① mettre en place ② encliqueter	① 装配 ② 装上嵌入
	① appoggiare ② inserire a scatto	① colocar en posición ② enclavar	① осадить ② зафиксировать	
Demontage **Dismantling** **Dêmontage,** **Smontaggio** **Desmontaje** Разберка 拆卸	③ schieben ④ abziehen	③ push ④ remove	③ pousse r ④ retirer	③ 推 ④ 拔出
	③ inserire ④ estrarre	③ desplazar ④ extraer	③ задвинуть ④ снять	

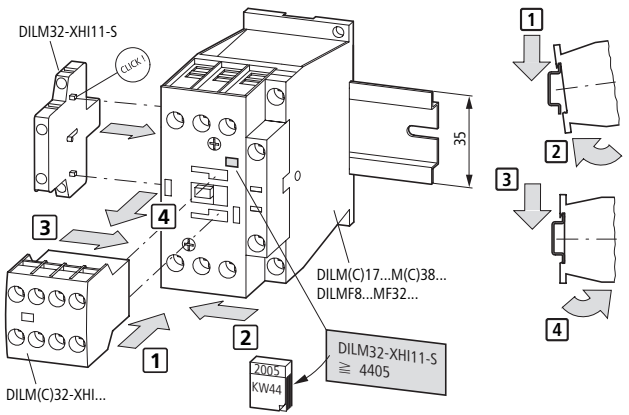

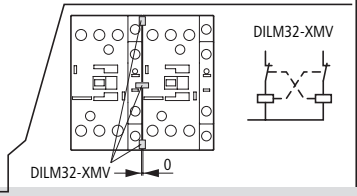



	mm²	AWG ≧ – ≦	Nm	lb-in
	1 × (0.75 – 16) 2 × (0.75 – 10)	14 – 8	3.2	28
	1 × (0.75 – 16) 2 × (0.75 – 10)			
	1 × 16			

A1/A2 13/14 21/22	mm²	AWG	Nm	lb-in
	0.75 – 2.5	18 – 14	1.2	10.6

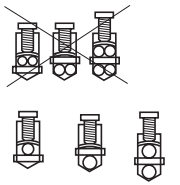



Einbaulage
Mounting position
Position de montage
Posizione di montaggio
Posición de montaje
Положение установки
安装位置

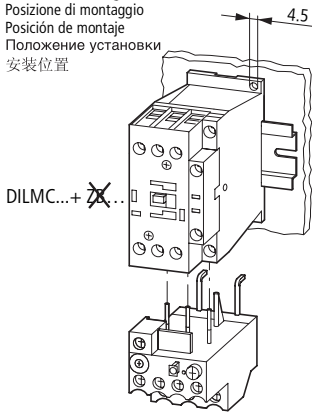


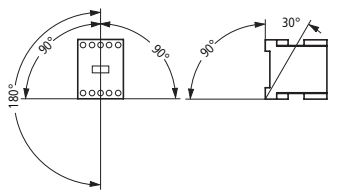

DILM(C)17...M(C)38...
DILMF8...MF32...

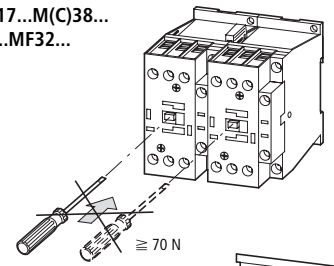

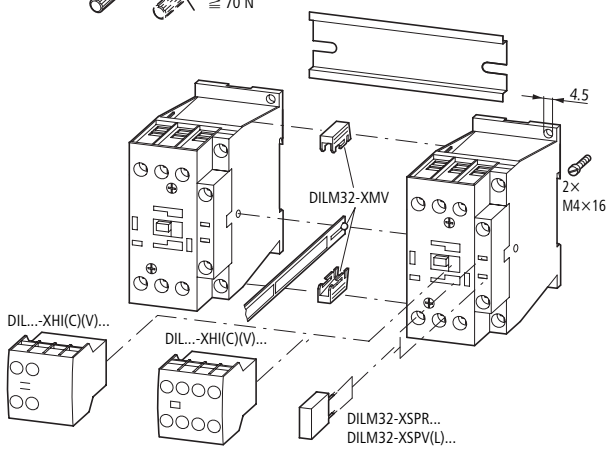

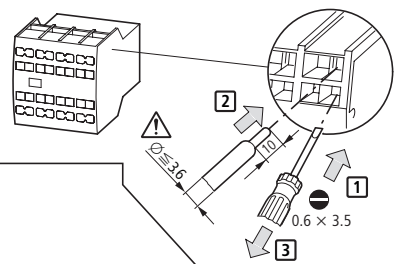

Warning!
The opening of the branch-circuit protective device may be an indication that a fault has been interrupted. To reduce the risk of fire or electrical shock, current-carrying parts and other components of the controller should be examined and replaced if damaged. If burnout of the element of an overloadrelay occurs, the complete overload relay must be replaced.

DIULM...
SDAINLM...
→ www.moeller.net/support

06/08 AWA2100-2127 Doku
Printed in Germany (08/08)
Änderungen vorbehalten

Moeller GmbH, Industrieautomation, D-53105 Bonn © 2004 by Moeller GmbH