

XLP2 1/2/3/4-pole

XLP2 1/2/3/4-pole: Cable connection

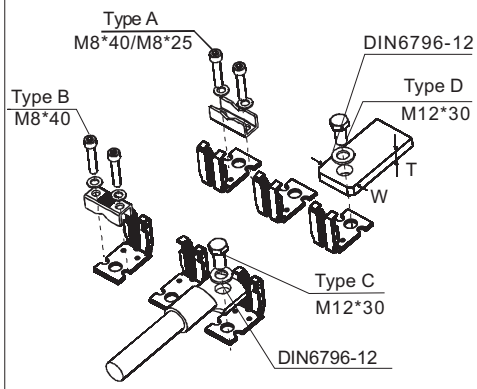

Cable connection					
Type		Flexible	Rm/Sm	Re/Se	Torque(Nm)
A	M8*40	300mm²	185-300 mm²	185-300mm²	14
	M8*25	16- 70mm²	16- 50mm²	16-95mm²	
B	M8*40	70- 240 mm²	50-185mm²	50-185mm²	
C	M12*30	10-240mm² Cable lug DIN46234			25
		16-300mm² Cable lug DIN46235			
D	M12*30	W≤ 50mm T≤ 10mm			

XLP2 1/2/3/4-pole: Dimension

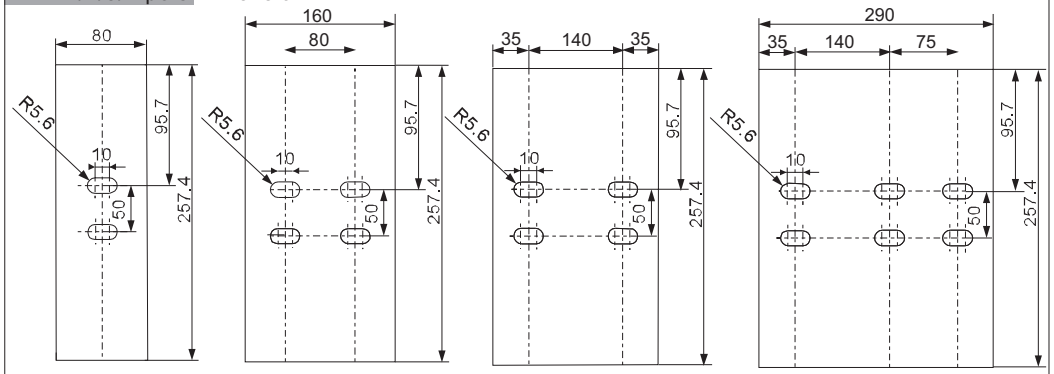

XLP2 1-pole XLP2 2-pole XLP2 3-pole XLP2 4-pole



BG Внимание! Опасно напрежение! Да се монтира само от лице с електротехническа квалификация.
FR Avertissement! Tension électrique dangereuse! Installation uniquement par des personnes qualifiées en électrotechnique.
MT Twissija! Vultaġġ perikoluż! Għandu jiġi installat biss minn persuna b'kompetenza elettroteknika.
HR Upozorenje! Opasan napon! Postavljati smije samo elektrotehnički stručnjak.
DE Warnung! Gefährliche Spannung! Installation nur durch elektrotechnische Fachkraft.
PL Ostrzeżenie! Niebezpieczne napięcie! Instalacji może dokonać wyłącznie osoba z fachową wiedzą w dziedzinie elektrotechniki.
CS Varování! Nebezpečné napětí! Montáž smí provádět výhradně elektrotechnik!
EL Προειδοποίηση! Υψηλή τάση! Η εγκατάσταση πρέπει να γίνεται μόνο από εξειδικευμένους ηλεκτροτεχνικούς.
PT Aviso! Tensão perigosa! A instalação só deve ser realizada por um eletricista especializado.
DA Advarsel! Farlig elektrisk spænding! Installation må kun foretages af personer med elektroteknisk ekspertise.
HU Figyelmeztetés! Veszélyes feszültség! Csak elektrotechnikai tapasztalattal rendelkező szakember helyezheti üzembe.
RO Avertizare! Tensiune periculoasă! Instalarea trebuie efectuată numai de către o persoană cu experienţă în electrotehnică.
NL Waarschuwing! Gevaarlijke spanning! Mag alleen geïnstalleerd worden door een deskundige elektrotechnicus.
IE Rabhadh! Voltas guaiseach! Ba chóir do dhuine ag a bhfuil saineolas leictriteicniúil, agus an té sin amháin, é seo a shuiteáil.
SK Varovanie! Nebezpečné napätie! Montáž môže vykonávať iba skúsený elektrotechnik.
EN Warning! Hazardous voltage! Installation by person with electrotechnical expertise only.
IT Avvertenza! Tensione pericolosa! Fare installare solo da un elettricista qualificato.
SL Opozorilo! Nevarna napetost! Vgradnjo lahko opravi le oseba z elektrotehničnim strokovnim znanjem.
ET Hoiatus! Ohtlik pinge. Paigaldada võib ainult elektrotehnika-alane ekspert.
LV Uzmanību! Bīstami - elektrība! Montāžas darbus drīkst veikt tikai personas, kurām ir atbilstošas elektrotehniskās zināšanas.
ES ¡Advertencia! ¡Tensión peligrosa! La instalación deberá ser realizada únicamente por electricistas especializados.
FI Varoitus! Vaarallinen jännite! Asennuksen voi tehdä vain sähköalan ammattihenkilö.
LT Dėmesio! Pavojinga įtampa! Dirbti leidžiama tik elektrotechniko patirties turintiems asmenims.
SE Varning! Farlig spänning! Installation får endast utföras av en elektriker.
CN 警告！电压危险！只能由专业电工进行安装。
RU Осторожно! Опасное напряжение! Монтаж должен выполняться только специалистом-электриком.


ABB Oy, Protection and Connection
P.O Box 622, FI-65101 Vaasa, Finland
www.abb.com/lowvoltage

Montasjeveiledning
Installation Instruction
Montage-und Betriebsanleitung


XLP2 1/2/3/4-pole

1SEP408011P0001 Rev.J


XLP2 1-pole

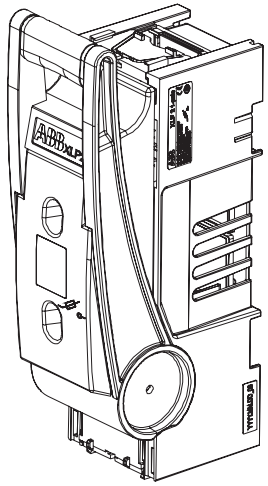


XLP2 3-pole

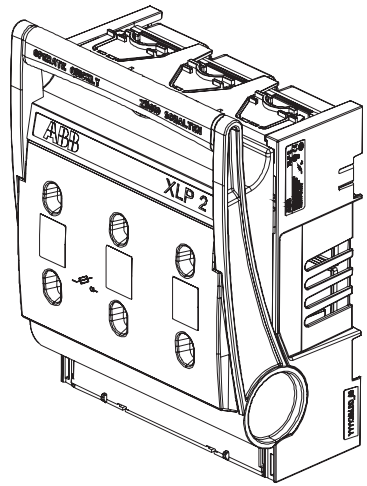

XLP2 2-pole

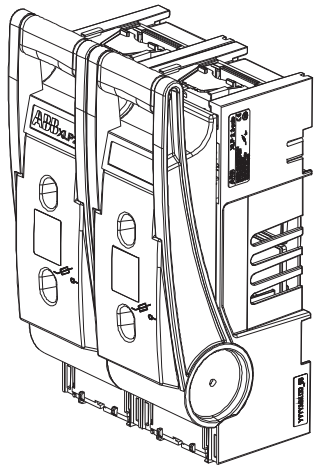

XLP2 4-pole

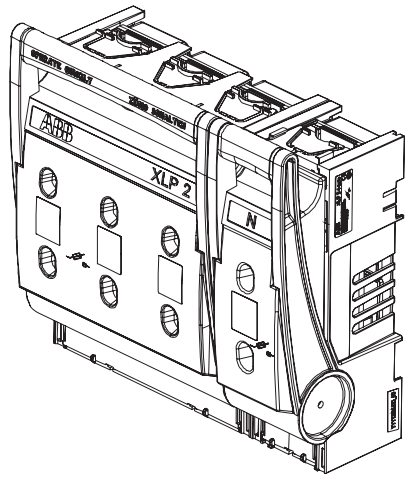


www.abb.com


Power and productivity
for a better world™

XLP2 1/2/3/4-pole


XLP21-pole: Remove the front cover

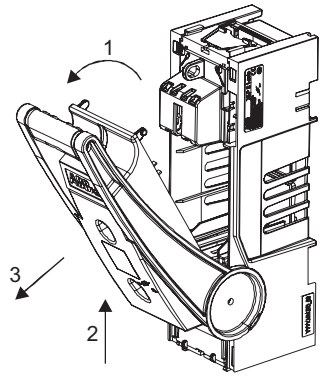


XLP21-pole: Remove the upper and lower terminal cover

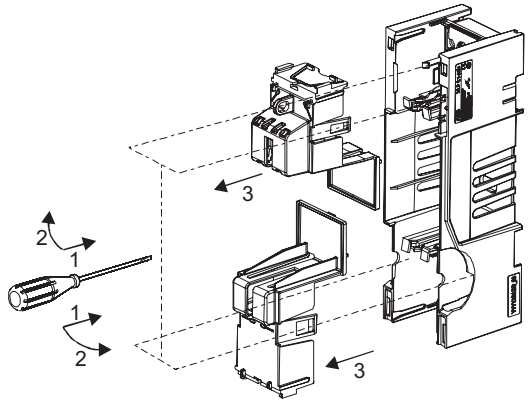


XLP22-pole: Remove the front cover

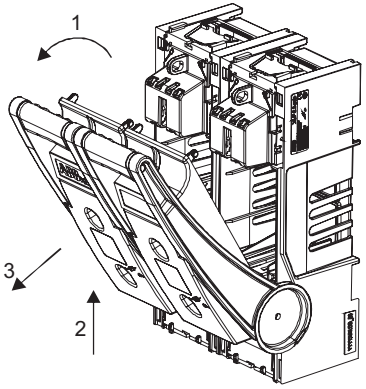


XLP22-pole: Remove the upper and lower terminal cover

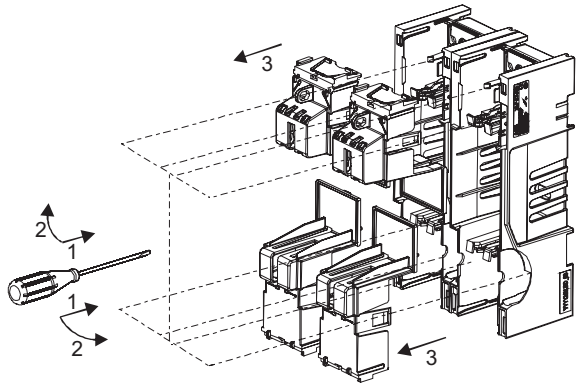

XLP23-pole: Remove the front cover

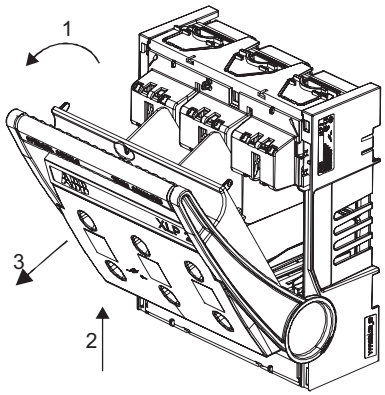


XLP23-pole: Remove the upper and lower terminal cover

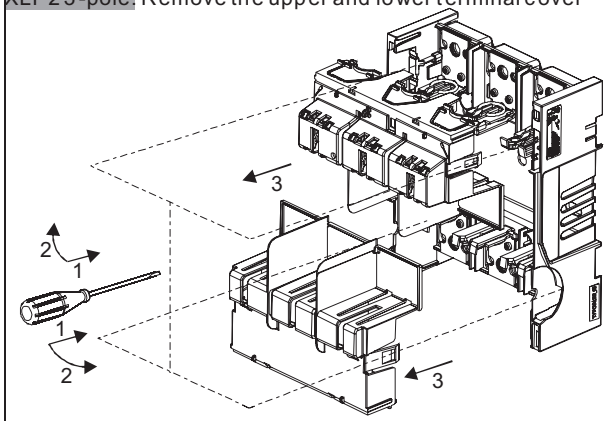


XLP2 1/2/3/4-pole


XLP24-pole: Remove the front cover

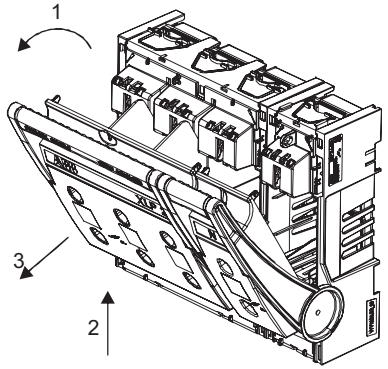


XLP24-pole: Remove the upper and lower terminal cover

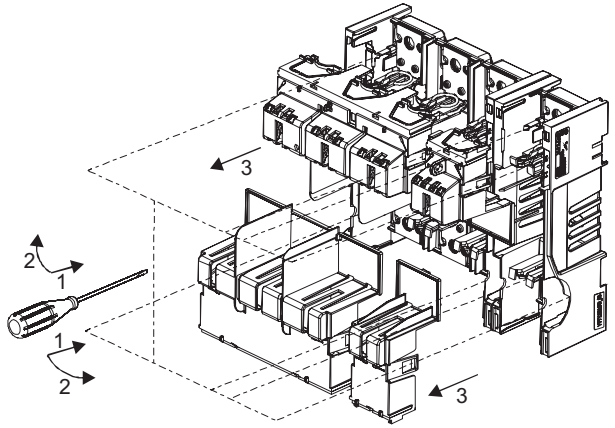


XLP2 1/2/3/4-pole: Install fuse and front cover

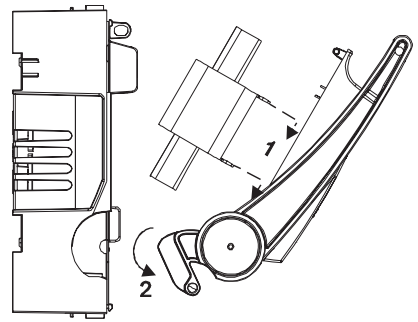

XLP21/2/3/4-pole: Remove the fuse from front cover

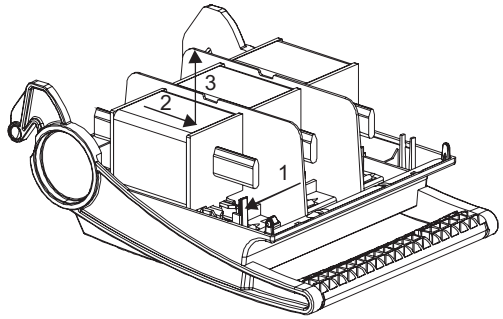

XLP21/2/4-pole: Padlock facility

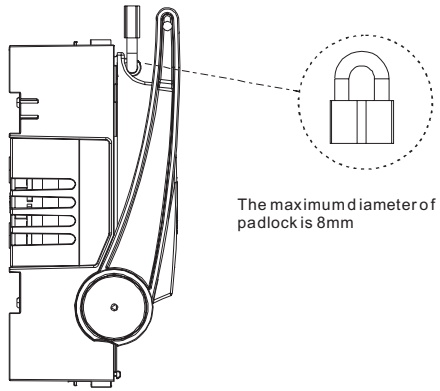

XLP23/4-pole: Sealing facility

