
INSTALLATION INSTRUCTION

Auxiliary contact

OA1G01-OA1G10, OA7G10, OA8G10

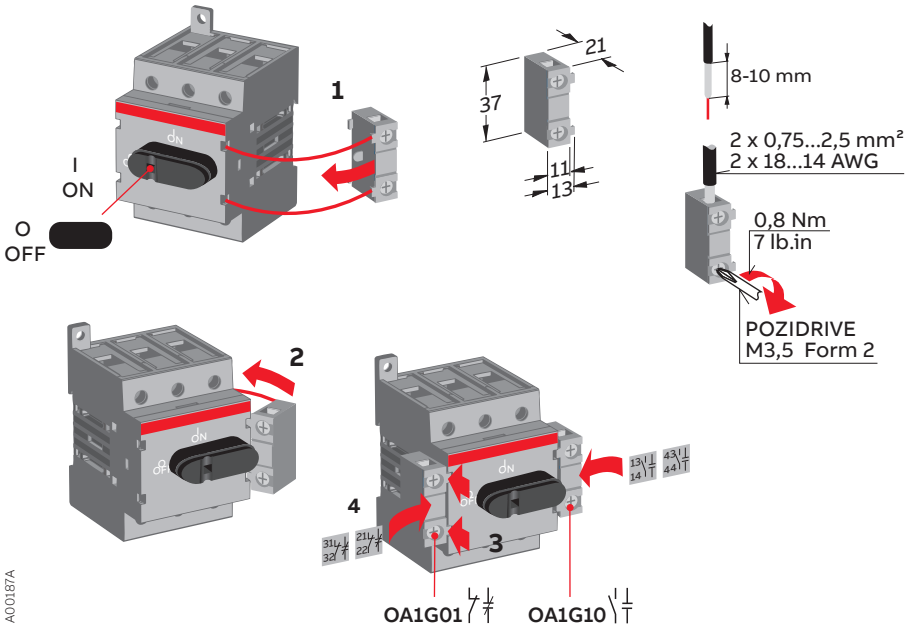


Auxiliary contacts




Auxiliary contacts


OT16-40F_

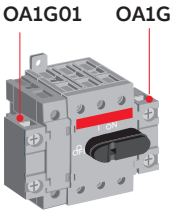


OT16-40FT_

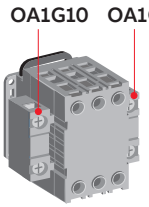


OT63-80F_

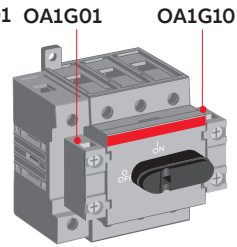

OT_16-125F_C

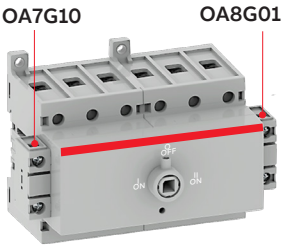


OT100-125F_

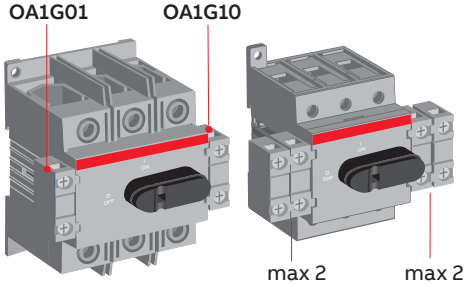


A00187B

OA1G10-OA3G01

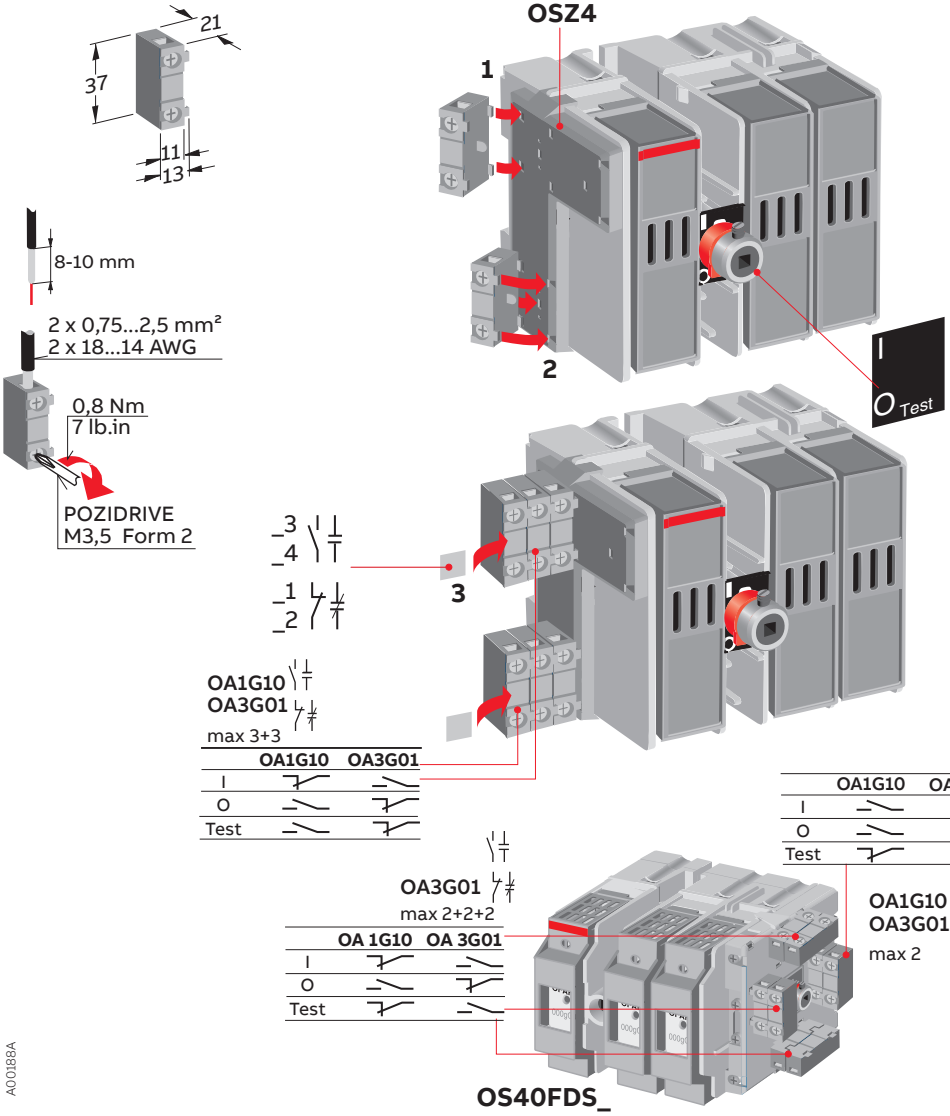


A00188A

OA1G10-OA3G01, OA5G10-OA6G01

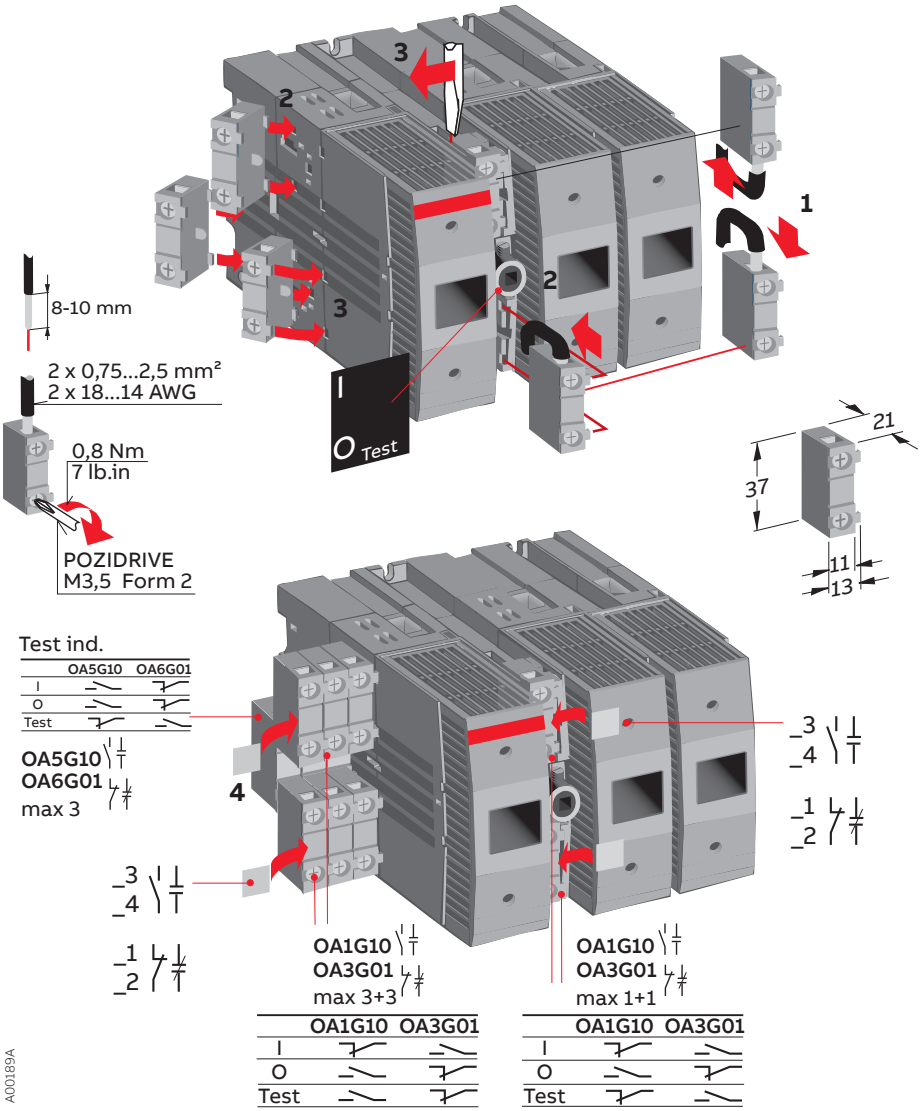

OA1G10-OA3G01

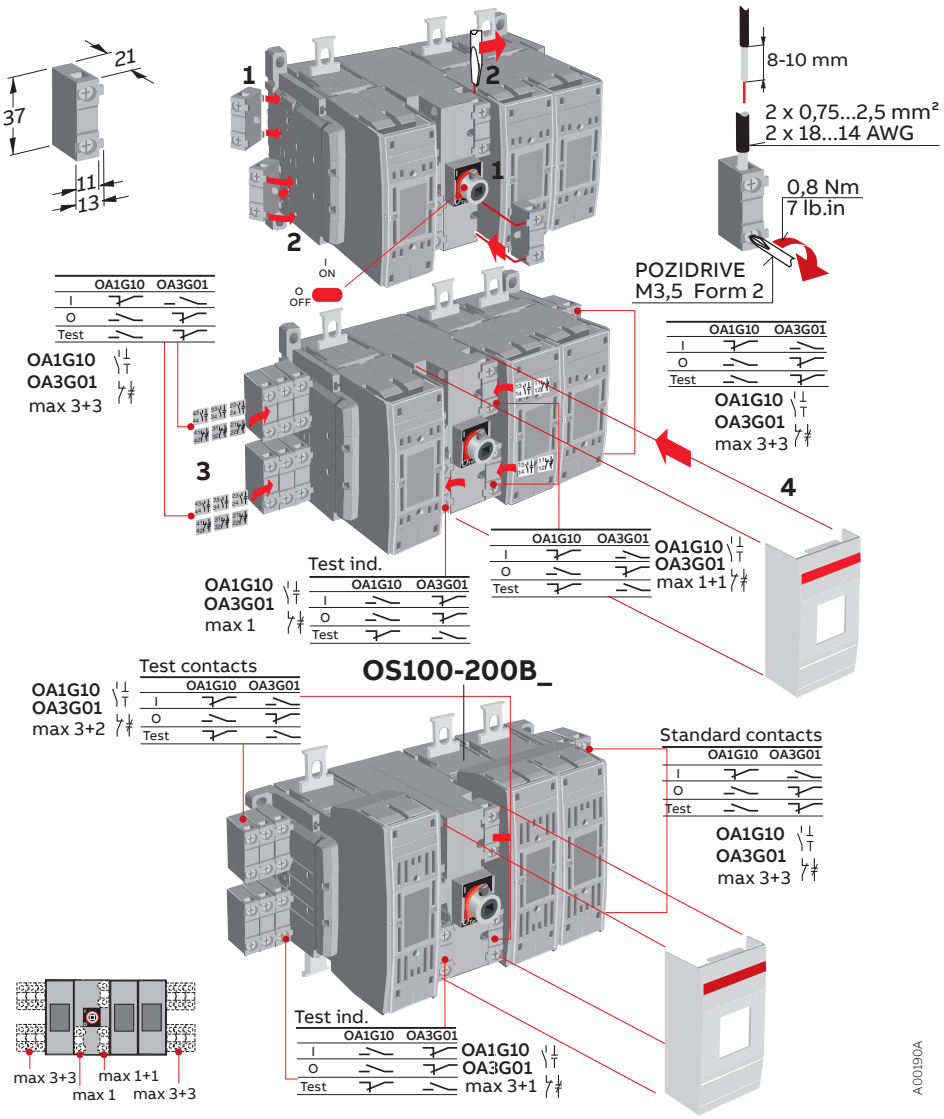

Contact us

ABB Oy
P.O. Box 622
FI-65101 Vaasa
Finland

abb.com/lowvoltage

© Copyright 2021 ABB. All rights reserved.
Specifications subject to change without notice.

34 OA1H01-10 rev. T/ 1SCC390026M0018 # 11.2.2021