
SCHMERSAL


EN Operating instructions. . . . . page 2
Translation of the original operating instructions

Dimensions

All measurements in mm.

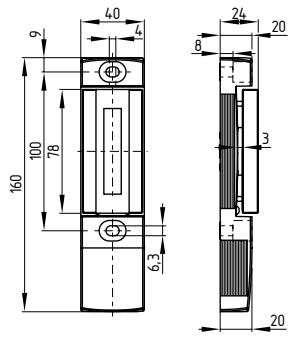

Axial misalignment and operating direction of the latching force

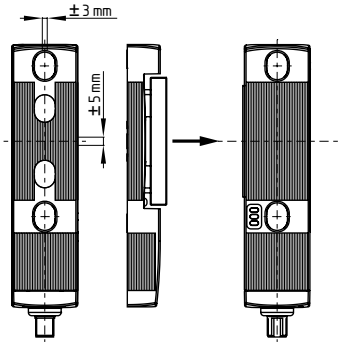

The safety component must be operated in the operating direction of the latching force (refer to image).

General mounting instructions

During fitting, the requirements of EN 1088 must be observed.

For fitting the solenoid interlock and the actuator, two mounting holes for M6 screws with washers (washers included in delivery) are provided. (Tightening torque: 8 N)

The solenoid interlock must be used as end stop.

For a safe operation of the system, the angle between the safety switch and the actuator compulsory must be ≤ 2°. After fitting, the unused fixing holes must be covered by means of the provided blanking plugs. To remove these plugs, if required, exert pressure on the topmost extremity (when the connector is fitted downwards) or press on the right-hand side of the plugs on the anchorage plate of the actuator.

The safety component and the actuator must be permanently fitted to the safety guards and protected against displacement by suitable measures (tamperproof screws, gluing, drilling, pinning).

K. A. Schmersal GmbH
Industrielle Sicherheitsschaltsysteme
Möddinghofe 30, D - 42279 Wuppertal
Postfach 24 02 63, D - 42232 Wuppertal

Telefon +49 - (0)2 02 - 64 74 - 0
Telefax +49 - (0)2 02 - 64 74 - 1 00
E-Mail: info@schmersal.com
Internet: http://www.schmersal.com

x.000 / April 2012 / v.A. - 101217354-EN / A / AE-Nr.: -