PanelPilot B

Low-cost Configurable E-paper Displays




Configuring your display


1. **Visit www.lascarelectronics.com/software/panelpilot-b** to download PanelPilot B software onto your PC.

2. Connect the device to your PC using the USB CABLE A-SIL5 (not supplied) as shown.

3. Open up the software on your PC and follow step-by-step instructions for configuring your display.

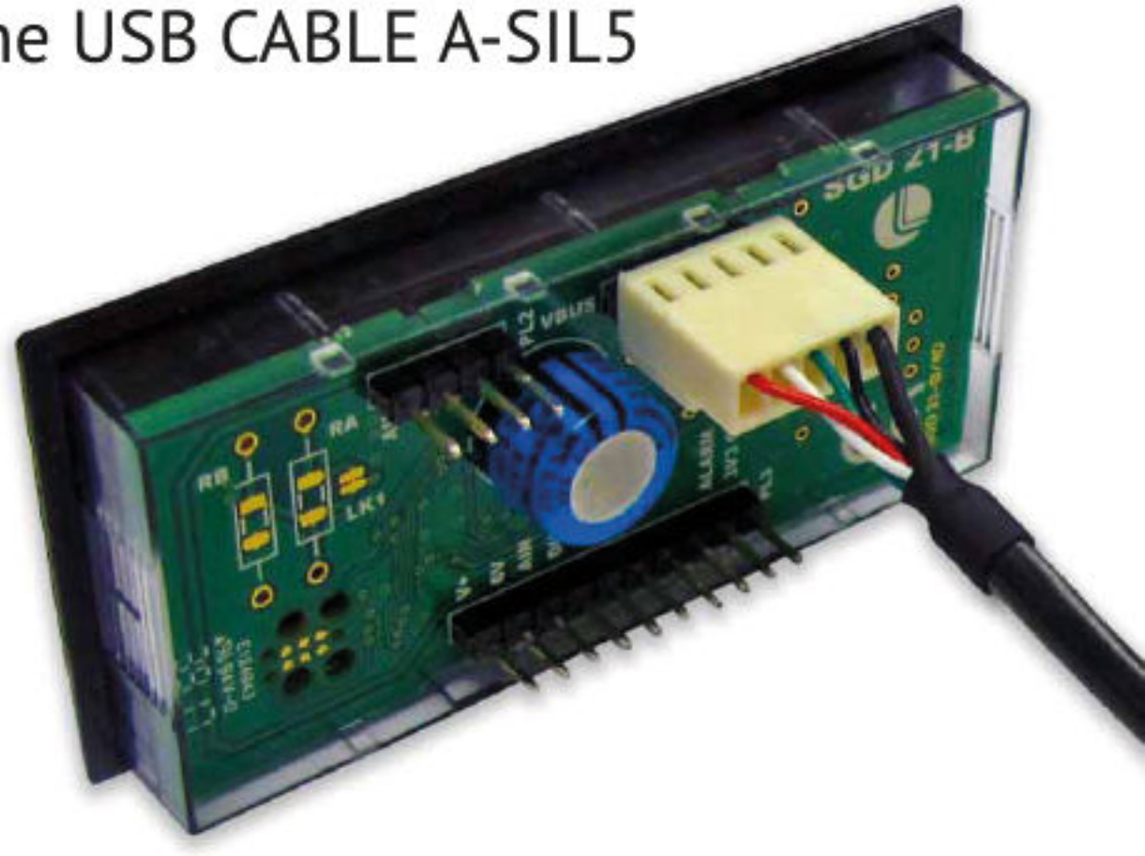

Installing your display

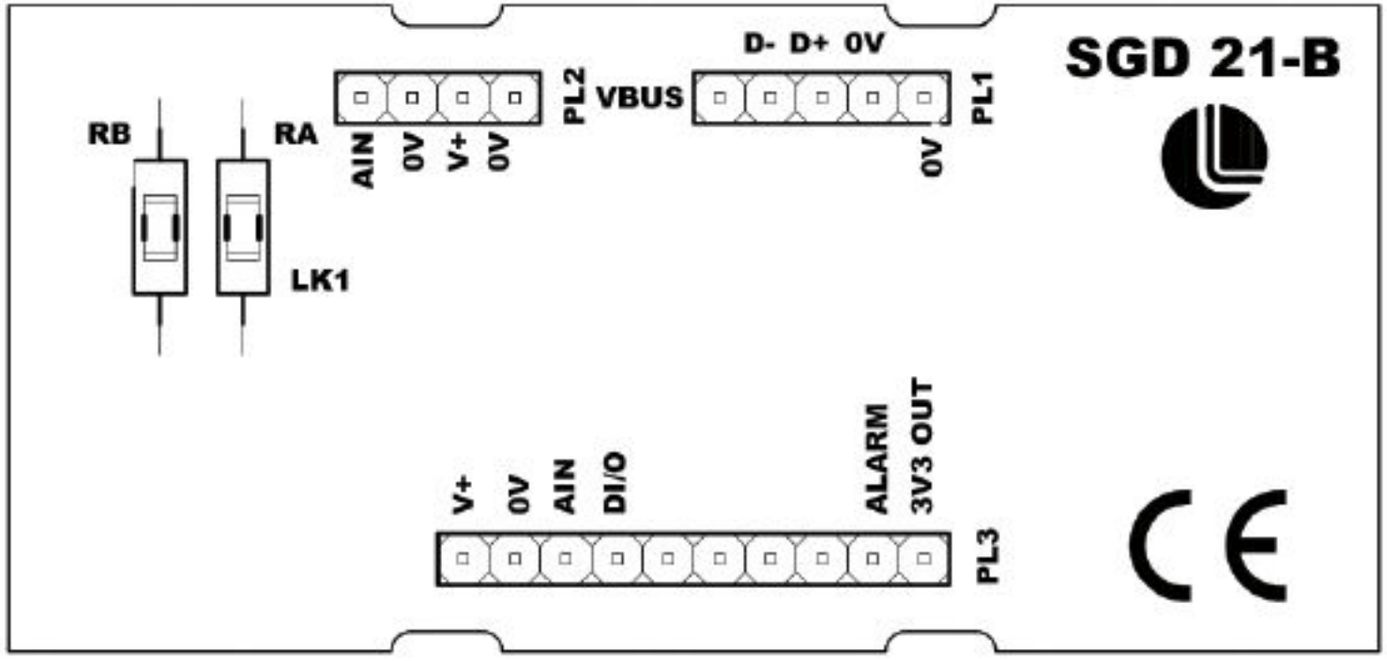


1. Fit scaling resistors if applicable (resistor values specified in the software).
2. Connect 4V-9V power supply to either PL2 or PL3.
3. Connect analogue input to either PL2 or PL3.
4. If used then connect alarm and digital pins on PL3.

- Fit scaling resistors RA and RB if applicable.
- Connect 4V-9V power supply to V+ and 0V on PL2 or PL3
- Connect analogue input to AIN and 0V on PL2 or PL3
- If used, then connect alarm and digital pins to ALARM and DI/O pins on PL3

What's in the box?

- Panel meter
- Fixing kit
- Quick start guide



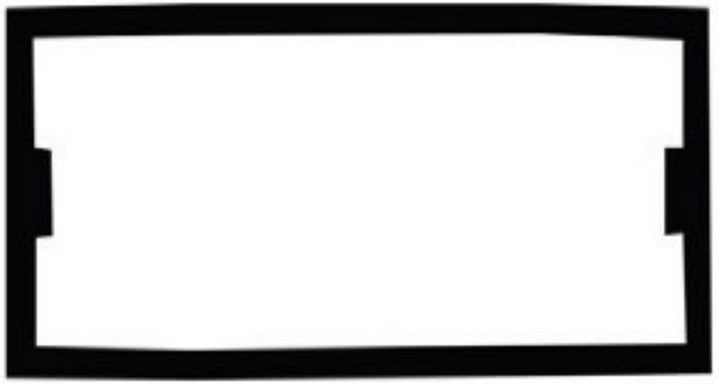

Accessories

- USB CABLE A-SIL5



For a full product data sheet, or for more information on the whole PanelPilot B range, visit **www.lascarelectronics.com/panelpilot**