
SCHMERSAL

EN Operating instructions. . . . . page 1
Translation of the original operating instructions

Dimensions

All measurements in mm.

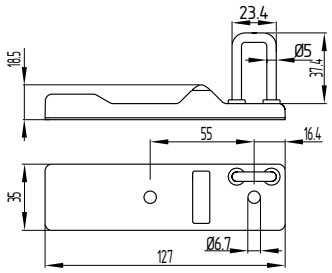

General mounting instructions


Please observe the remarks of the standards EN ISO 12100, EN 953 and EN 1088.

For the correct fixing of the solenoid interlock and the actuator, two mounting holes for M6 screws are provided (tightening torque max. 1.8 mm)

The solenoid interlock can be used as an end stop. Depending on the door weight and the actuating speed, the mechanical life could be reduced.


Any mounting position. The system must only be operated with an angle of ≤ 2° between the solenoid interlock and the actuator.

Axial and horizontal misalignment

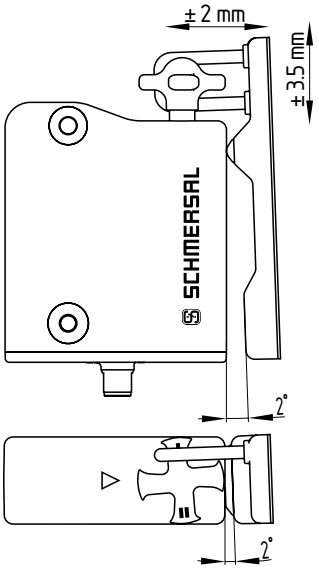

Provide for a sufficient insertion of the actuator into the rotary handle

Correct False



The safety component and the actuator must be permanently fitted to the safety guards and protected against displacement by suitable measures (tamperproof screws, gluing, drilling, pinning).

K. A. Schmersal GmbH & Co. KG
Industrielle Sicherheitsschaltsysteme
Möddinghofe 30, D - 42279 Wuppertal
Postfach 24 02 63, D - 42232 Wuppertal

Phone: +49 - (0)2 02 - 64 74 - 0
Telefax +49 - (0)2 02 - 64 74 - 1 00
E-Mail: info@schmersal.com
Internet: http://www.schmersal.com

x.000 / Dezember 2012 / v.A. - 103001170-EN / A / 2012-11-06 / AE-Nr. -