




PS1-..-65


PS1-..-100


S1-M1-25


S1-M3-25


S1-M3-35


SA1

3-phase busbar systems

Manual Motor Starters MS116	Manual Motor Starters MS132	Number of MMS	Number of aux. contacts	Catalog number	List price	Pack[ing] pieces	Weight kg/lb (1 pce)
3-phase busbar up to 65 A							
●	●	2	0	**MS132-PS1-2-0-65**		10	0.034/0.07
●	●	3	0	**MS132-PS1-3-0-65**		10	0.055/0.12
●	●	4	0	**MS132-PS1-4-0-65**		10	0.077/0.17
●	●	5	0	**MS132-PS1-5-0-65**		10	0.098/0.22
●	●	2	1	**MS132-PS1-2-1-65**		10	0.036/0.08
●	●	3	1	**MS132-PS1-3-1-65**		10	0.060/0.13
●	●	4	1	**MS132-PS1-4-1-65**		10	0.087/0.19
●	●	5	1	**MS132-PS1-5-1-65**		10	0.108/0.24
●	●	2	2	**MS132-PS1-2-2-65**		10	0.040/0.09
●	●	3	2	**MS132-PS1-3-2-65**		10	0.067/0.15
●	●	4	2	**MS132-PS1-4-2-65**		10	0.095/0.21
●	●	5	2	**MS132-PS1-5-2-65**		10	0.122/0.27
3-phase busbar up to 92 A							
●	●	3	0	**MS132-PS1-3-0-100**		10	0.084/0.19
●	●	4	0	**MS132-PS1-4-0-100**		10	0.117/0.26
●	●	5	0	**MS132-PS1-5-0-100**		10	0.154/0.34
●	●	3	1	**MS132-PS1-3-1-100**		10	0.094/0.21
●	●	4	1	**MS132-PS1-4-1-100**		10	0.134/0.30
●	●	5	1	**MS132-PS1-5-1-100**		10	0.172/0.38
●	●	3	2	**MS132-PS1-3-2-100**		10	0.105/0.23


3-phase feeder terminals

Busbar types 65 A	Busbar types 92 A	Remarks	Connecting capacity AWG	Catalog number	List Price	Pack[ing] pieces	Weight kg/lb (1 pce)
3-phase feeder terminals							
●	●	Flat	4	**MS132-S1-M1-25**		10	0.038/0.08
●	-	High	4	**MS132-S1-M2-25**		10	0.051/0.11
3-phase feeder terminals for CSA/UL type E							
●	●		4	**MS132-S1-M3-25**		10	0.042/0.09
●	●		2	**MS132-S1-M3-35**		10	0.060/0.13
Cover for 3-phase busbars							
				MS132-BS1-3		50	0.003/0.01

Locking

Manual Motor Starters MS116	Manual Motor Starters MS132		Catalog number	List Price	Pack[ing] pieces	Weight kg/lb (1 pce)
Locking device						
●	-	Lock adapter	**MS132-SA1**		10	0.003/0.01
●	●	Padlock + 2 keys	**MS132-SA2**		10	0.020/0.04
●	-	Lock adapter + padlock + 2 keys	**MS132-SA3**		10	0.050/0.11

3-phase busbar up to 65 A

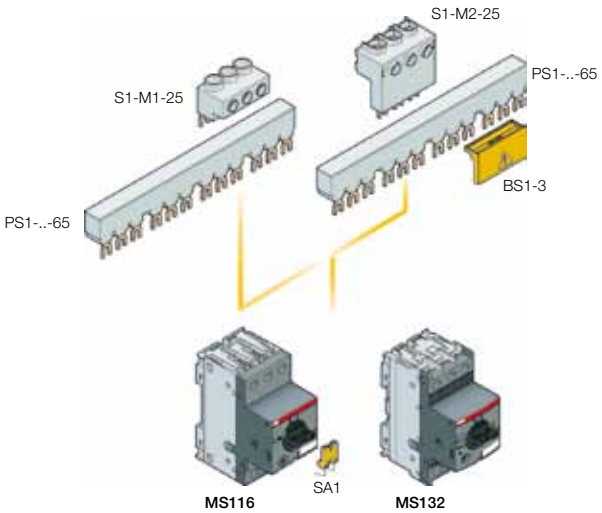

3-phase busbar up to 92 A

