

# Technical Diagrams

## 107 Electronic Installation Buzzer

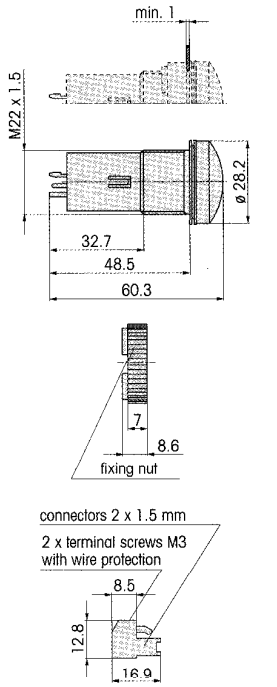



## 108 Electronic Buzzer

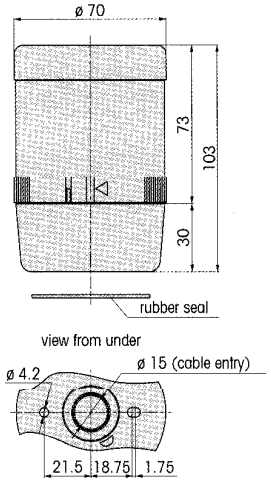



**Special parts: see 840 Kombi*SIGN* 70**
**Pages 82 + 83**


## 109 Electronic Installation Buzzer

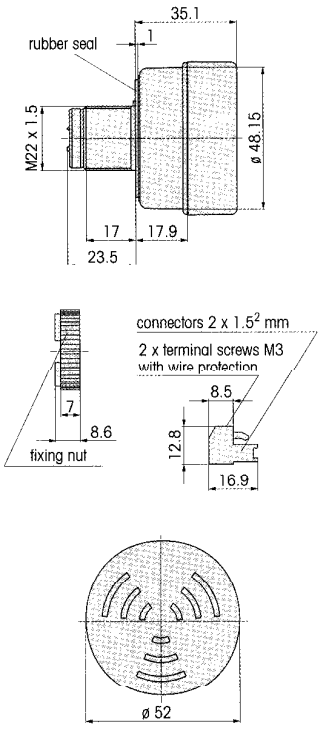



## 110 Electronic Buzzer

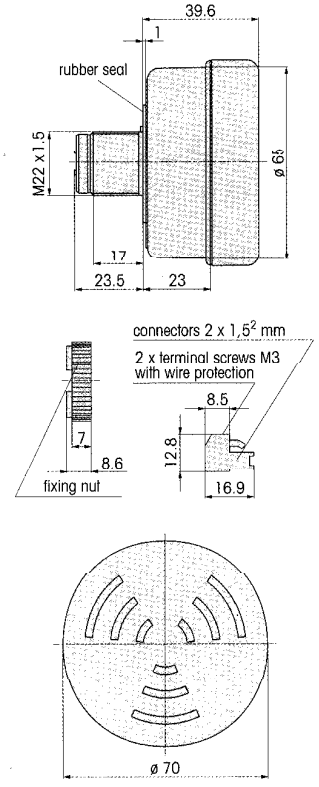


## 109/110 Special parts

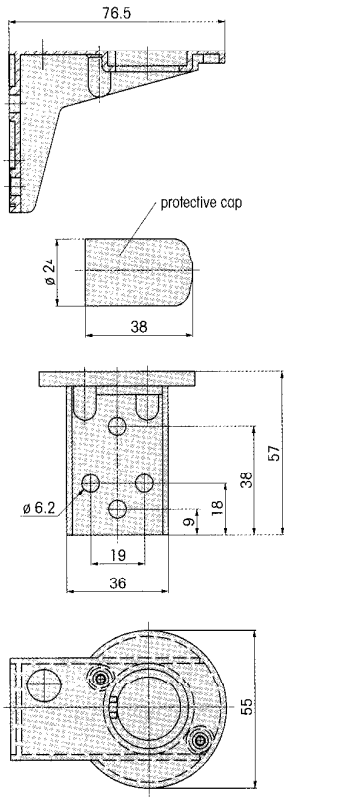


975 109 01 Bracket

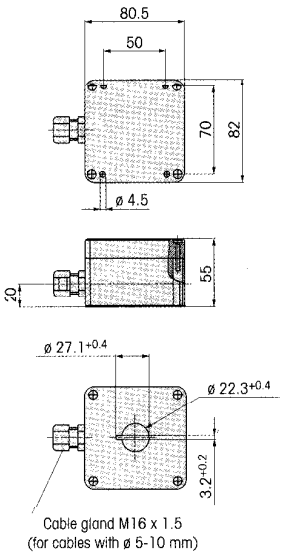



975 109 02 Single surface housing


Phone +49 74 24 / 95 57-0 Fax +49 74 24 / 95 57-44


# Technical Diagrams

## 109/110 Special parts

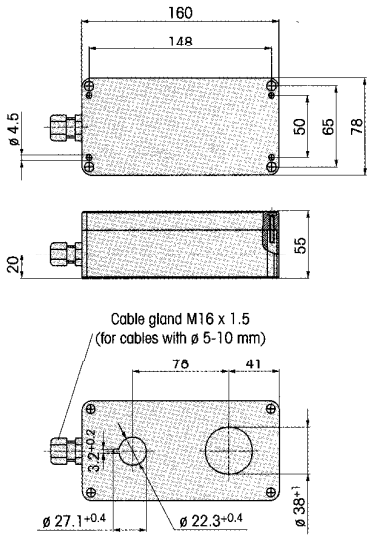



975 109 03 Double surface housing


## 114 Electronic Installation Buzzer

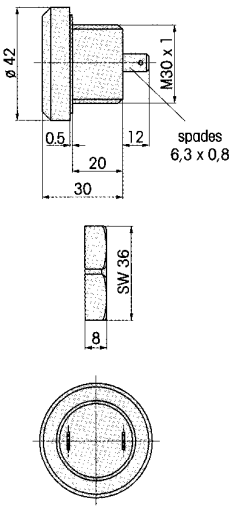



## 117 Electronic Installation Buzzer

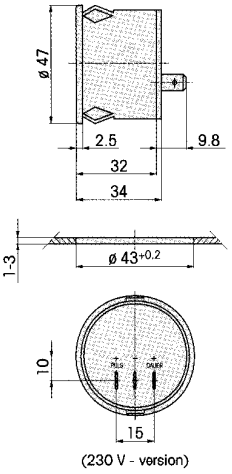



## 118/119 Electronic Installation Buzzer

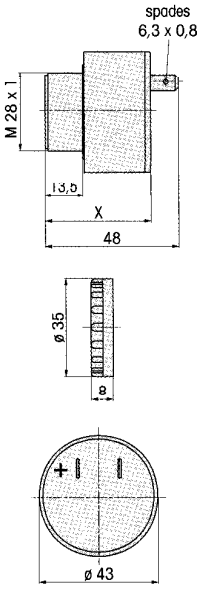


## 115 Buzzer/Light Combination

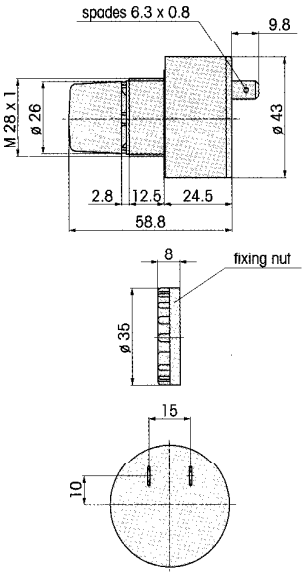


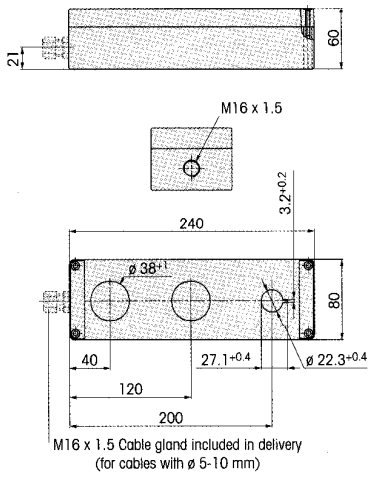

975 109 04 Triple surface housing

# Technical Diagrams


**118 493/119 483 Electronic Buzzer**

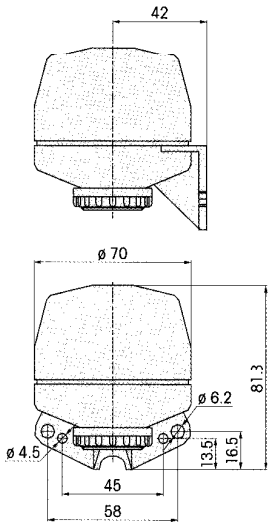



**126 Electronic Sound Transmitter**

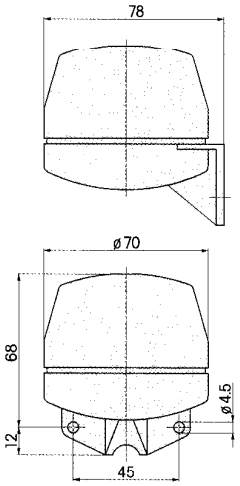



**130 Electronic Sound Transmitter**

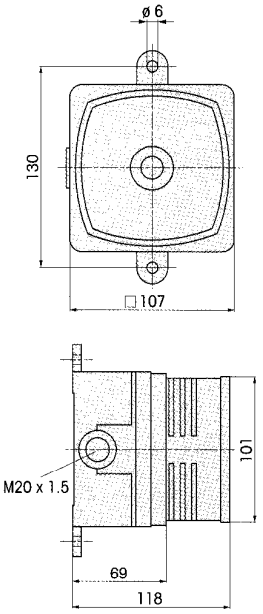



**123 Electronic Siren**

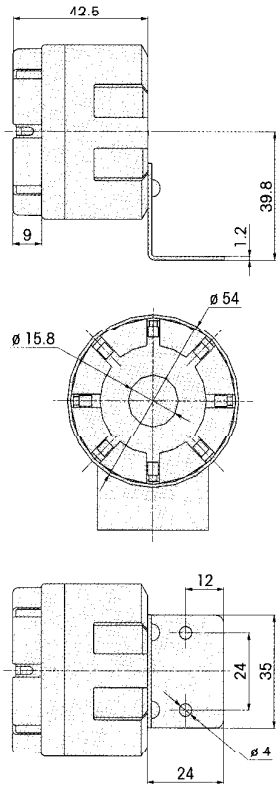


**129 Electronic Sound Transmitter**

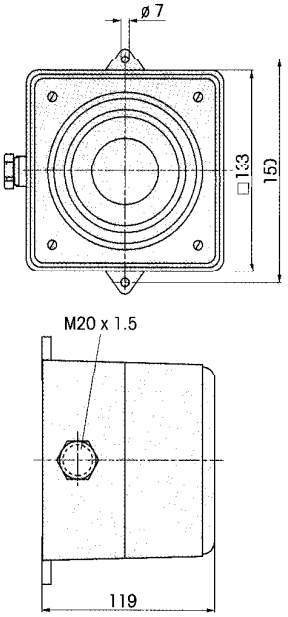


**338 234 Installation Buzzer**

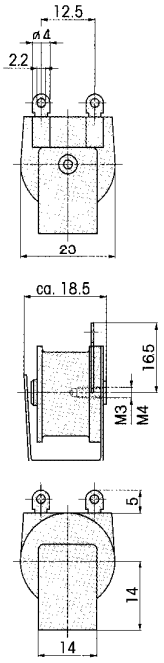




Phone +49 74 24 / 95 57-0 Fax +49 74 24 / 95 57-44


WERMA SIGNALTECHNIK

# Technical Diagrams


**338 323** **Installation Buzzer**

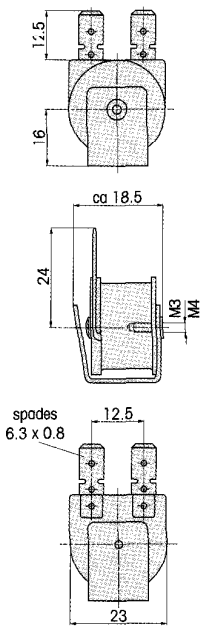



**382** **Installation Buzzer**

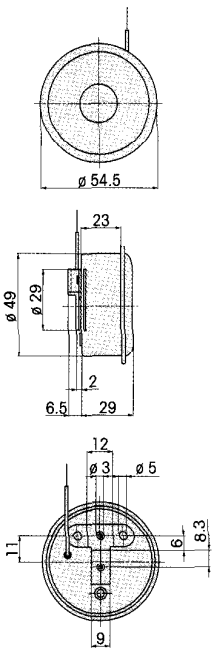



**481** **Flashing Light Buzzer**

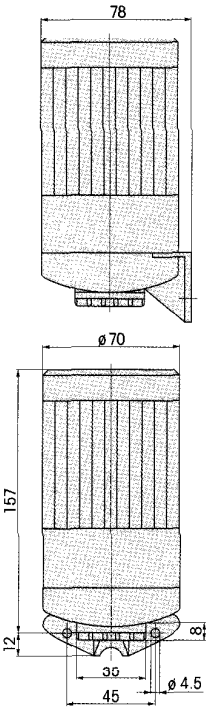



**338 373** **Installation Buzzer**

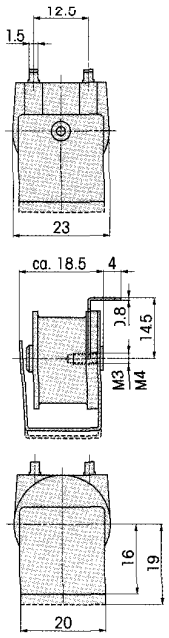


**480** **Buzzer/Light Combination**

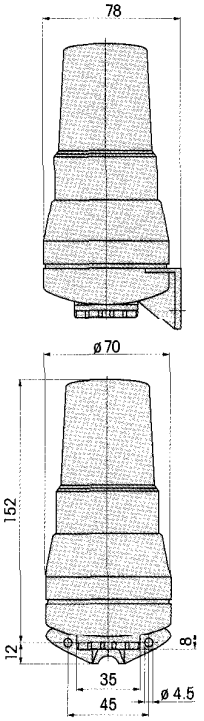



**482** **Signal Horn**

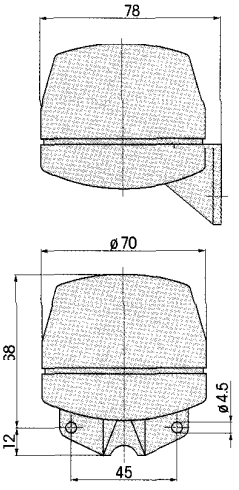


# Technical Diagrams


## 558 Signal Horn

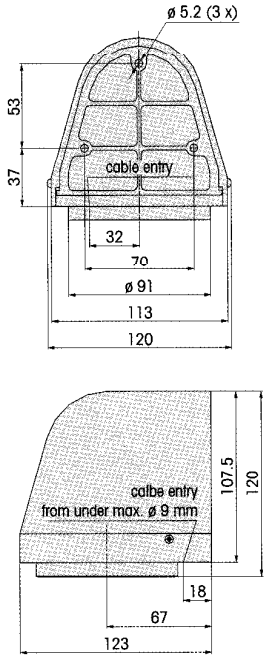



## 571 Signal Horn

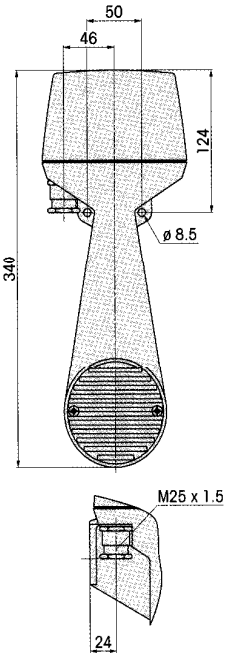



## 580 Warning Light Horn

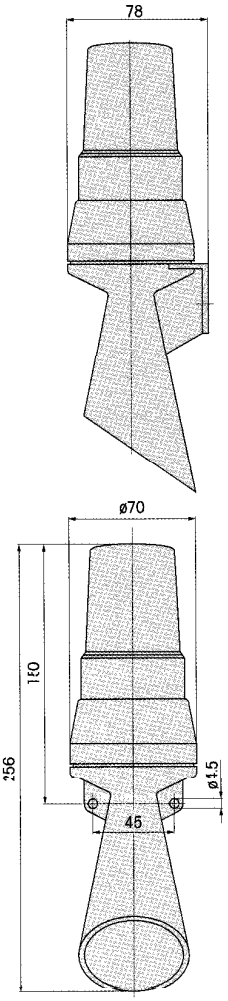


## 570 Signal Horn

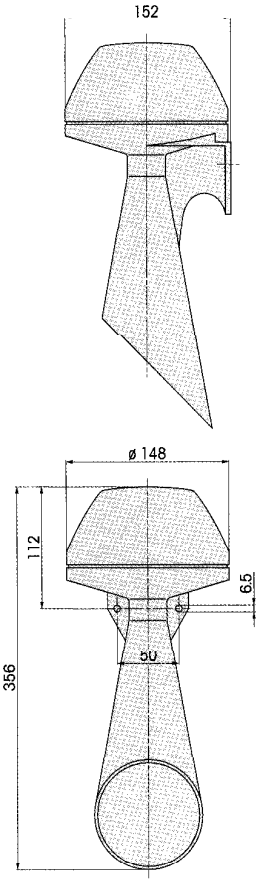


## 572 Signal Horn

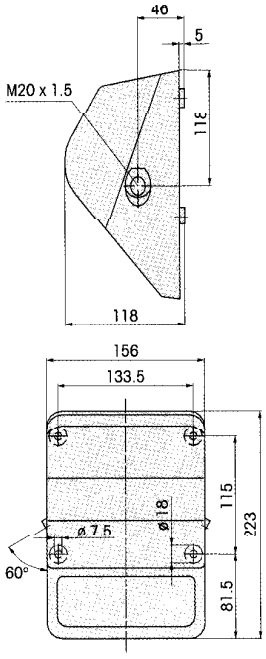




Phone +49 74 24 / 95 57-0 Fax +49 74 24 / 95 57-44


WERMA SIGNALTECHNIK

# Technical Diagrams


## 581 Flashing Light Buzzer

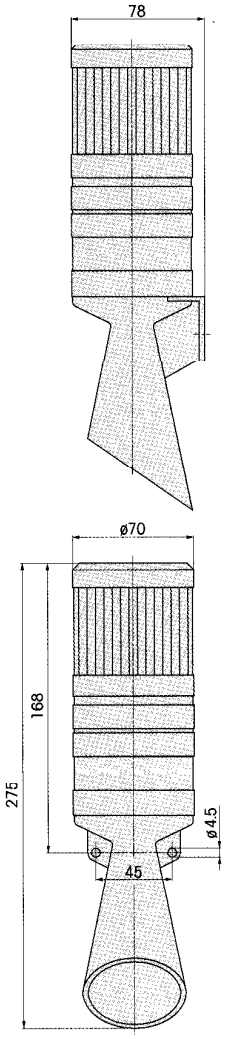


## 582 Signal Horn

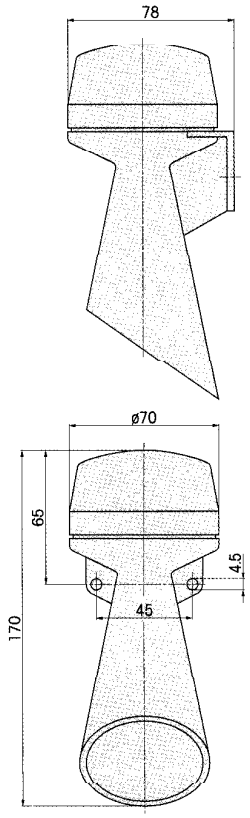



## 718 EEx-Electronic Buzzer

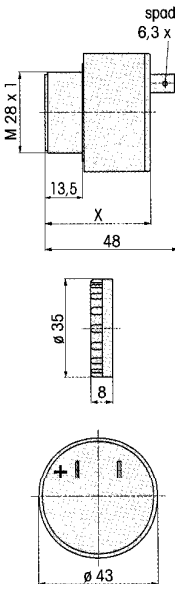



Measurement X:
38 mm at U = 48 V to 230 V
40 mm at U = 12 and 24 V

## 730 EEx-Double Flash Beacon

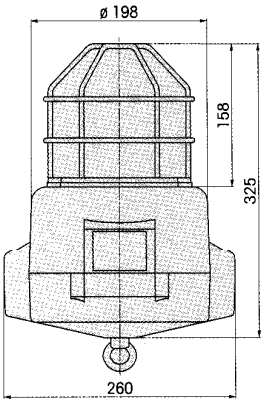



## 740 EEx-Warning Beacon

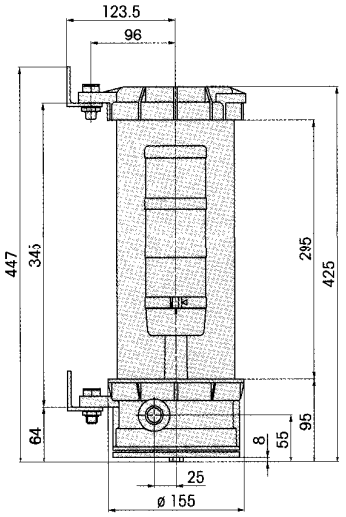


# Technical Diagrams


## /58 EEx-Signal Horn

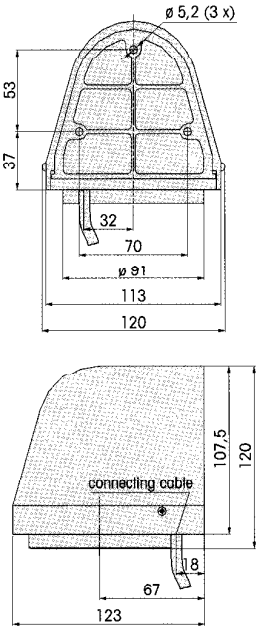



## /60 EEx-Signal Horn

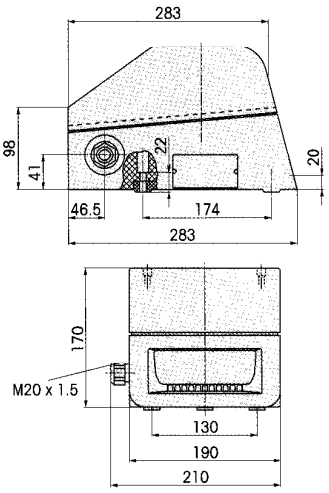



## /90 EEx-Alarm Bell

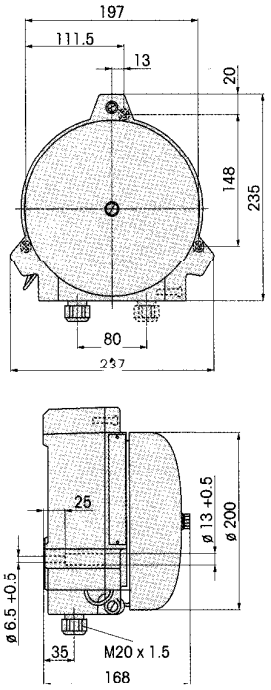



## 759 EEx-Signal Horn

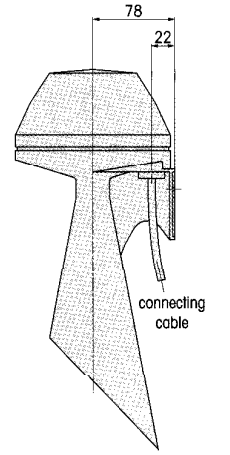


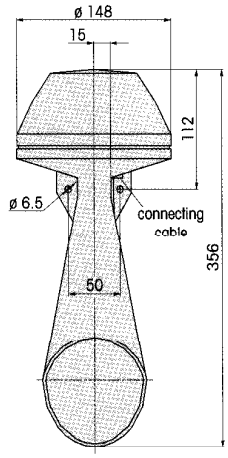


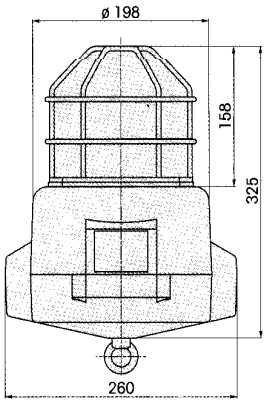

## 780 EEx-Rotating Signal Beacon

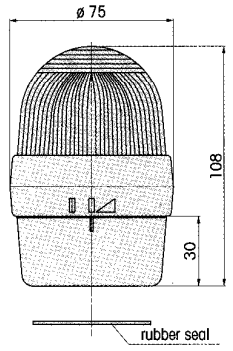


## 805/806/807 Perman./LED/Flash Beacon

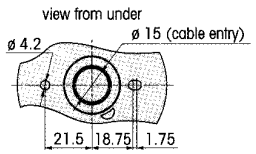



**Special parts: see Kombi*SIGN* 70 Pages 82 + 83**



Phone +49 74 24 / 95 57-0 Fax +49 74 24 / 95 57-44


WERMA SIGNALTECHNIK


# Technical Diagrams

**806** **Monitored LED** **810** **Display** **815/816/817 Installation Signal Beacon**

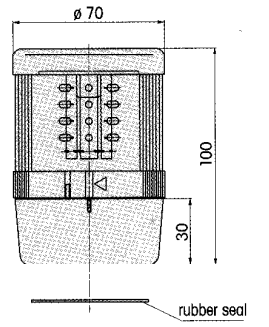


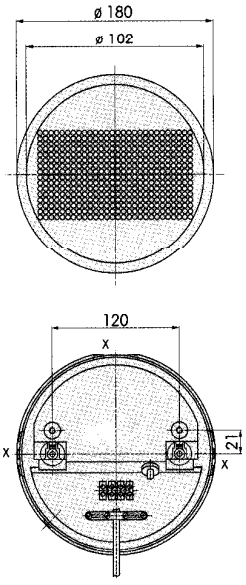


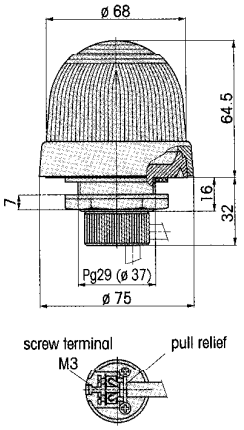
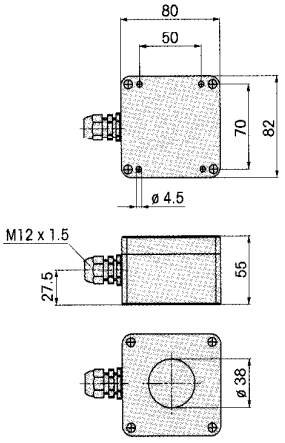

815/816/817 Installation Signal Beacon

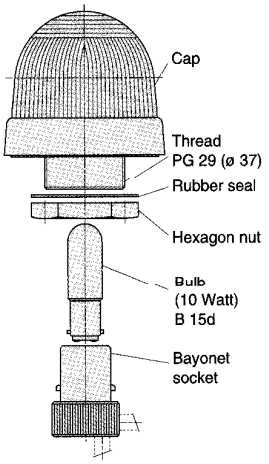


960 000 01 Bracket

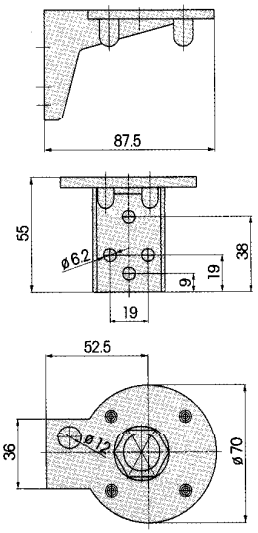**811** **Display**

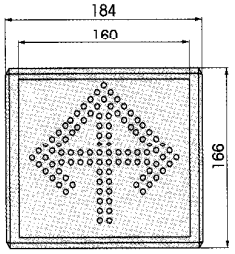




975 815 03 Single surface housing

# Technical Diagrams

**815/816/817 Special parts**

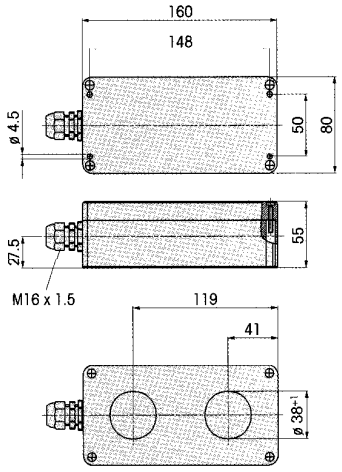



975 815 07 Double surface housing

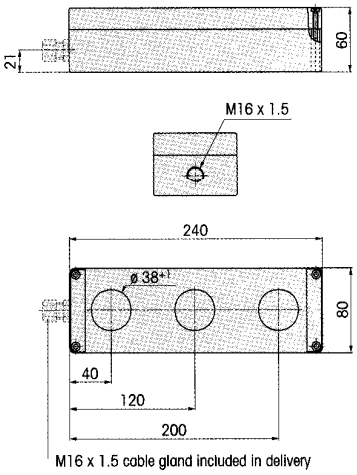




975 815 08 Triple surface housing

**820 Flashing Beacon**

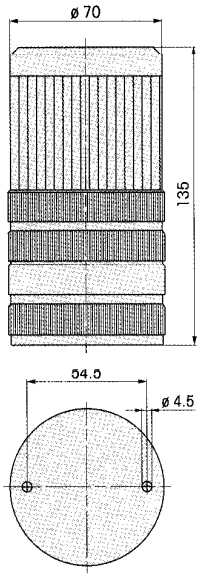




**825 Flashing Beacon**

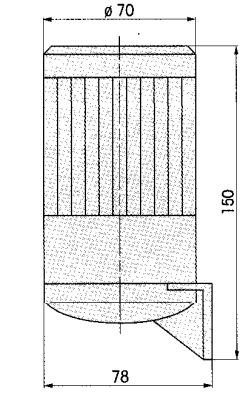


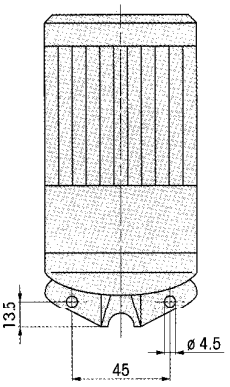
**826/827/828 Permanent/ Blinking/Flashing Beacon**

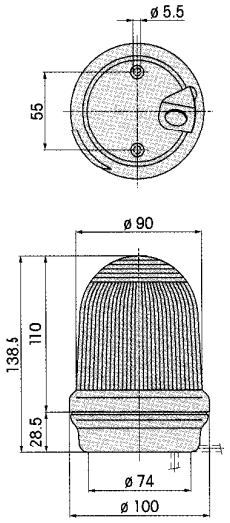



975 826 03 Wire guard

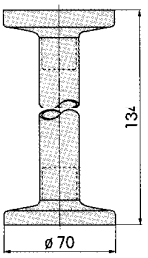

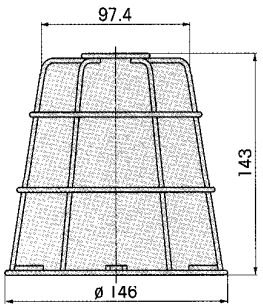WERMA SIGNALTECHNIK


# Technical Diagrams

## 826/827/828 Special parts

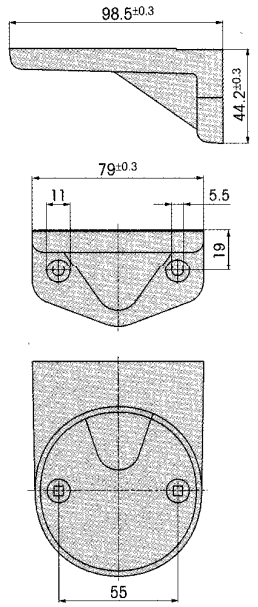



975 826 05 Bracket

## 826/827/828 Special parts

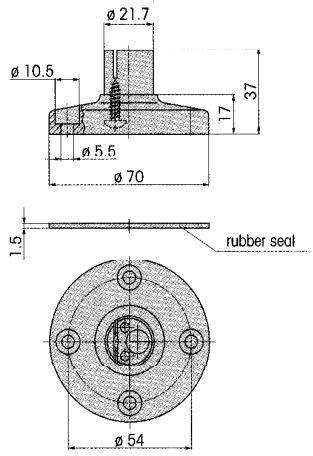



975 840 90 Base


## 830/834/835 Flashing Beacon

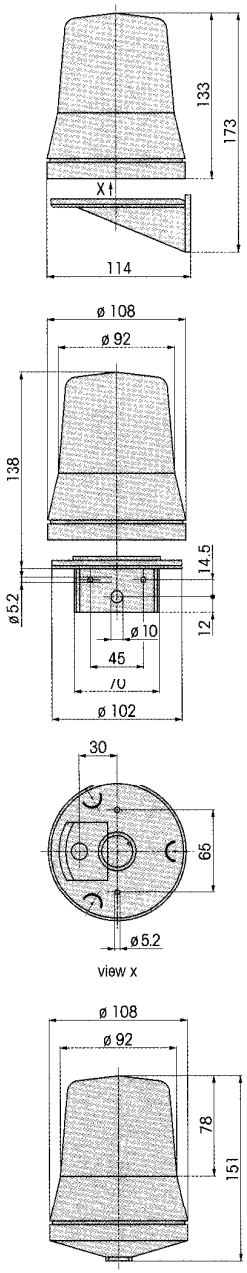


## 837 Double Flashing Beacon

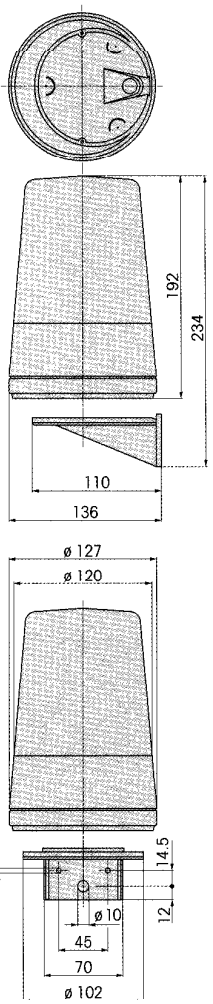



## 839 Double Flashing Beacon

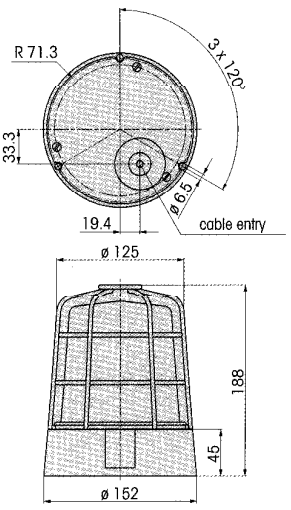


# Technical Diagrams


**840** **Kombi*SIGN* 70** **840** **840 Special parts**

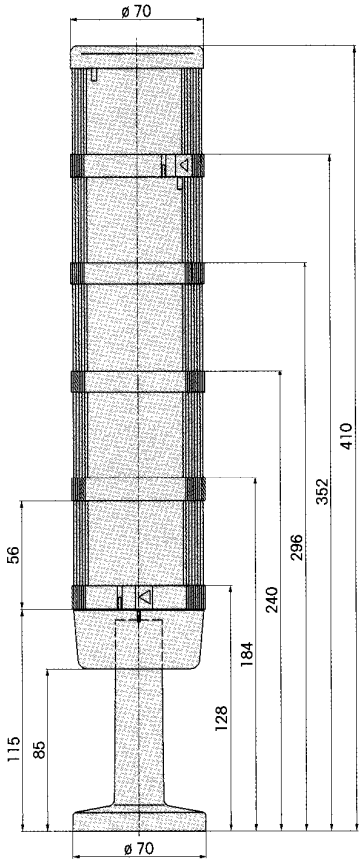



**Connection plan**

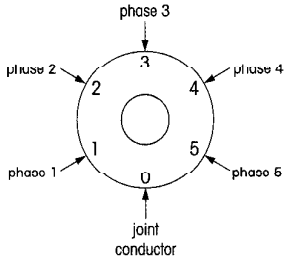



**Connection plan AS-Interface element**

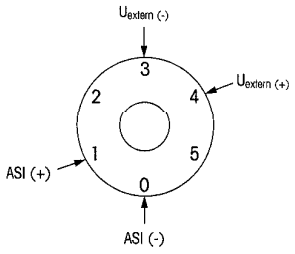


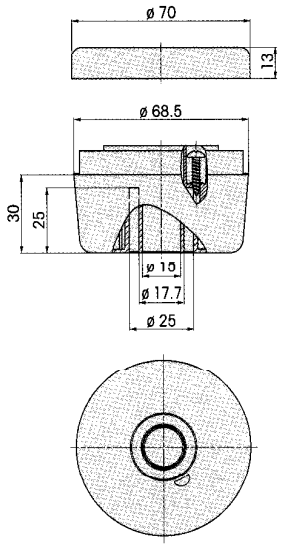

840 080 00 Terminal element

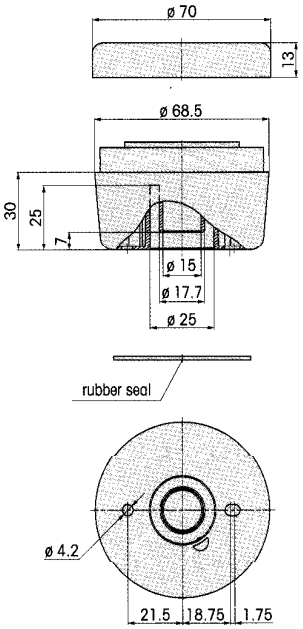



840 085 00 Terminal element

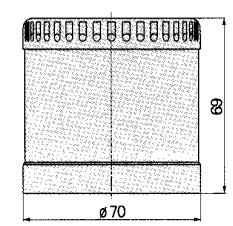



844 900 55 Vocal element

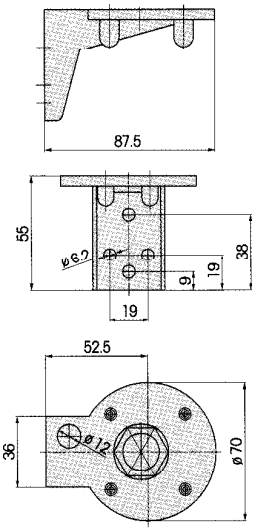


960 000 01 Bracket

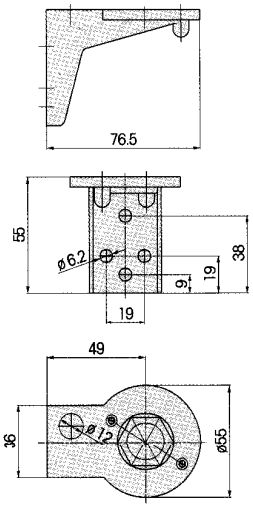


960 000 02 Bracket

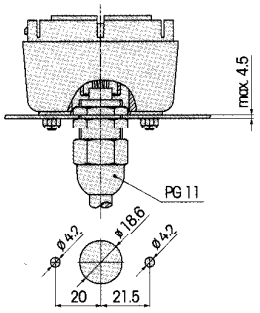



960 000 04 PG screw for base mounting




WERMA SIGNALTECHNIK

# Technical Diagrams


**840 Special parts**

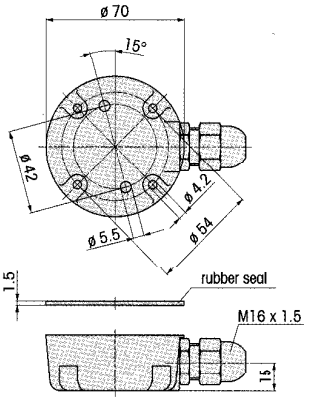



975 840 01 Adapter box

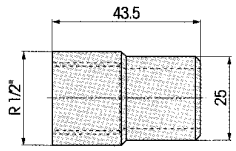


975 040 02 Adapter





975 840 04 Adapter with magnetic base

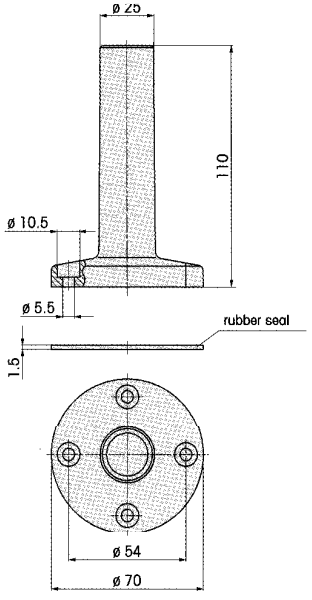



975 840 10 Base with tube

**840 Special parts**

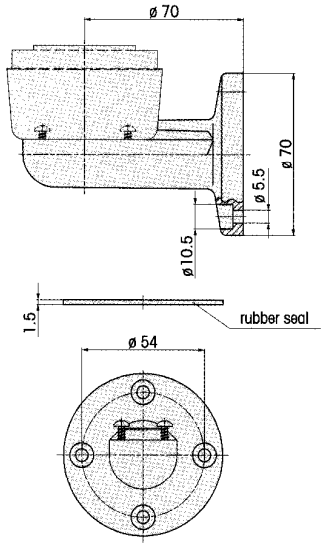



975 840 85 Bracket

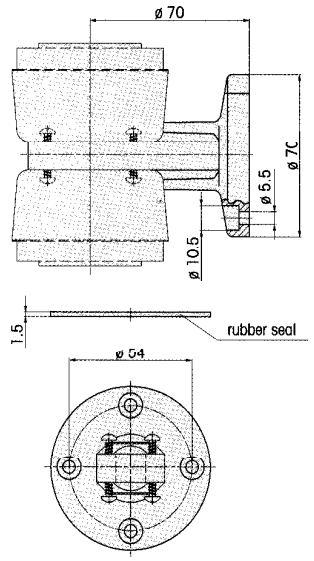



975 840 86 Bracket

**840 Special parts**

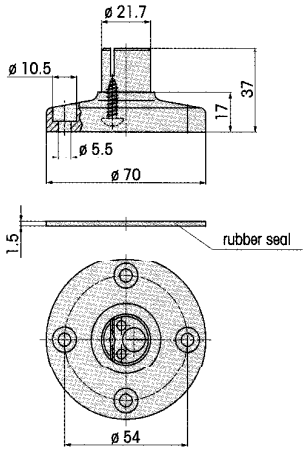



975 840 90 Base

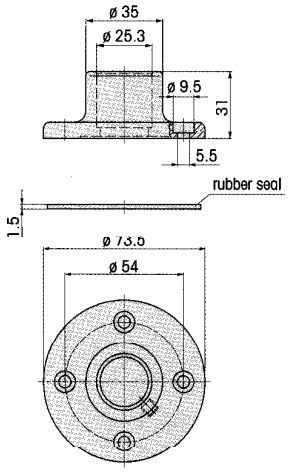



975 840 91 Base


# Technical Diagrams

**845** **KombiSIGN 50** **845 Special parts** **845 Special parts**

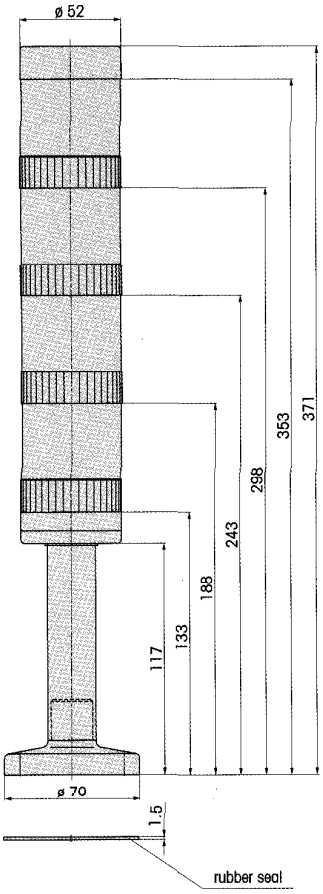



**Connection plan**

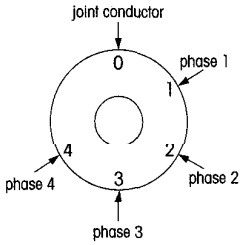


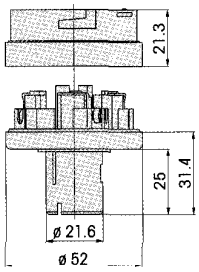

845 000 00 Terminal element

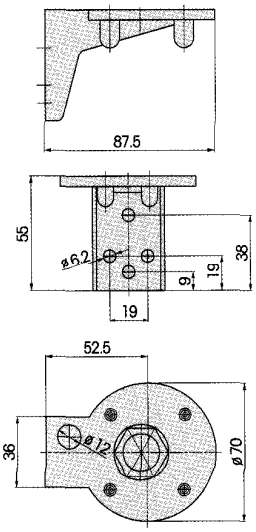



960 000 01 Bracket

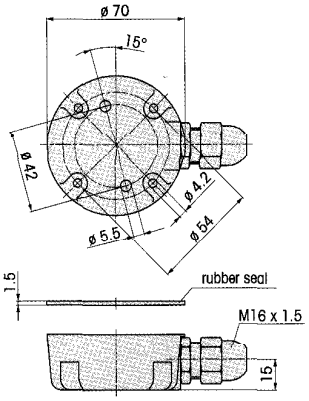



975 840 01 Adapter box




975 840 04 Adapter with magnetic base

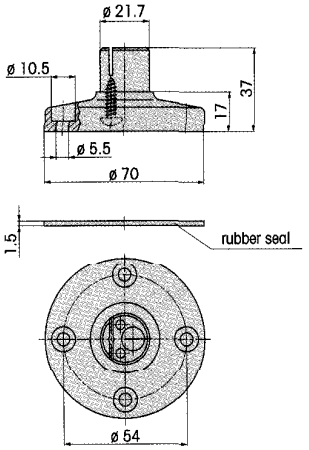


975 840 90 Base

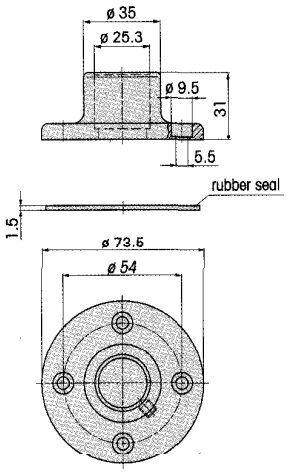



975 840 91 Base


Phone +49 74 24 / 95 57-0 Fax +49 74 24 / 95 57-44


WERMA SIGNALTECHNIK


# Technical Diagrams


## 845 Special parts

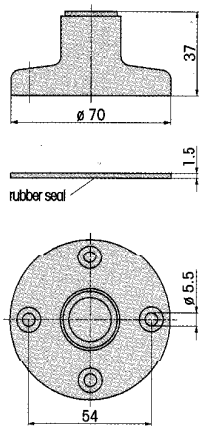


975 845 01 Base

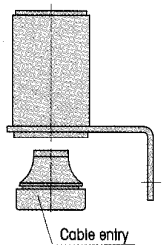


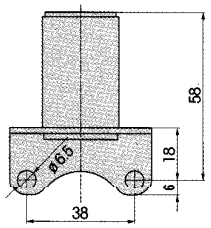


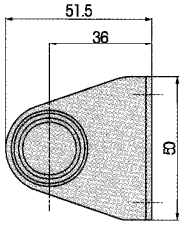

975 845 02 Bracket


## 845 Special parts

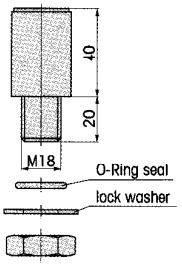

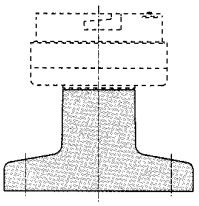

975 845 03 Adapter




Base mounting

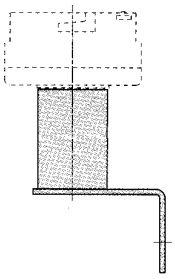

Bracket mounting

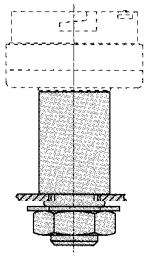



Single hole mounting

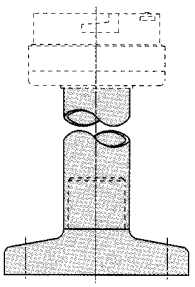


Tube mounting

## 850 Permanent Beacon

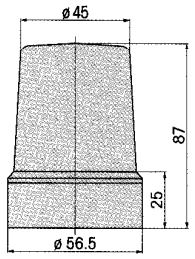


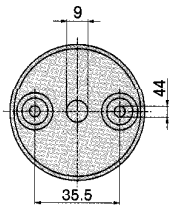
## 851 Permanent Beacon

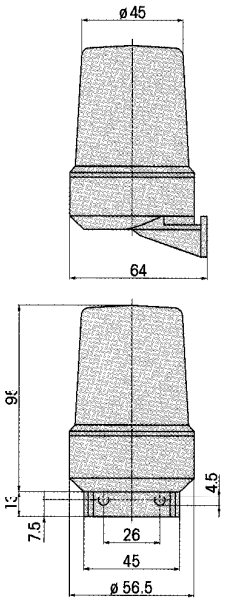




## 852 Permanent Beacon

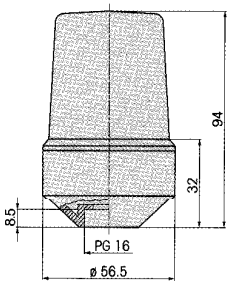


# Technical Diagrams

## 867/868/869 LED-Signal Tower

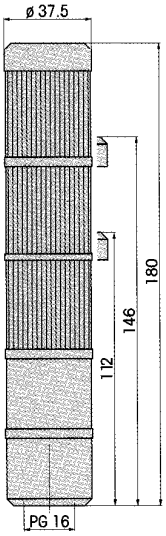


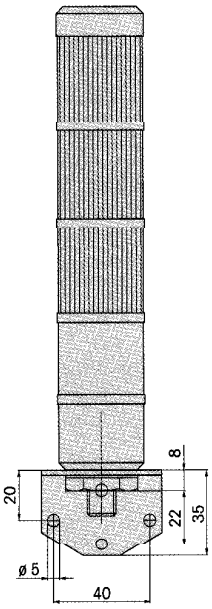


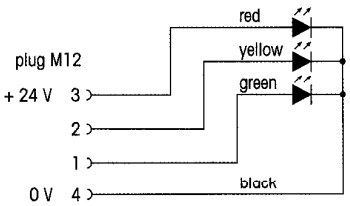

**Connection plan**

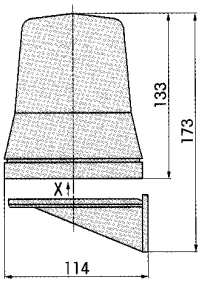




## 870 Permanent Beacon

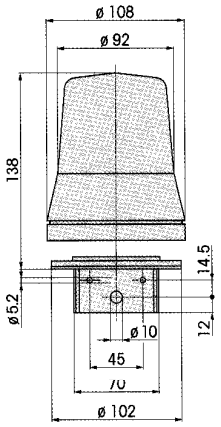





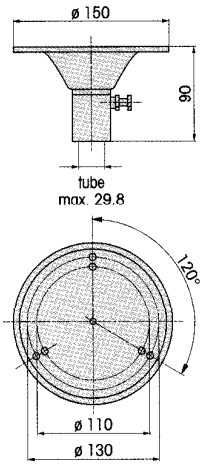

## 875 Blinking Beacon

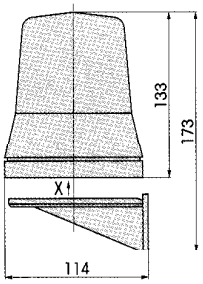

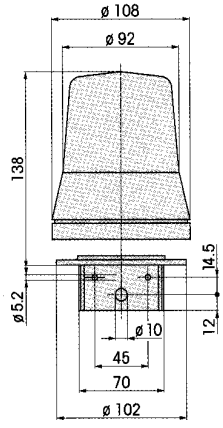

## 880 Rotating Mirror Beacon

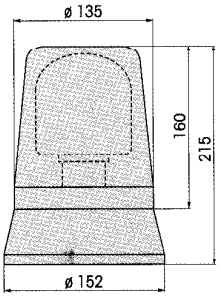


880 000 00 Flange for tube mounting

## 881 Rotating Mirror Beacon




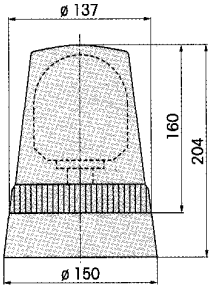



WERMA SIGNALTECHNIK

# Technical Diagrams

## 881 Special parts

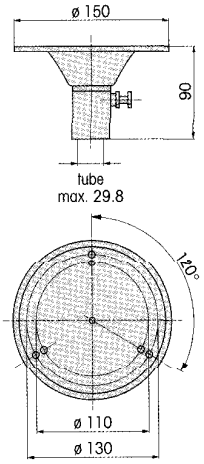



880 000 00 Flange for tube mounting




875 881 01 Winkel


## 883 Rotating Mirror Beacon

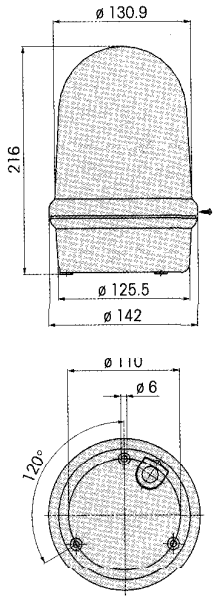


## 884 Revolving Signal Beacon

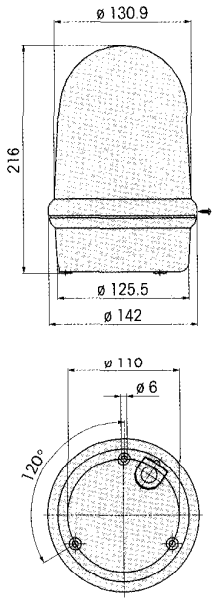



## 883/884 Special parts

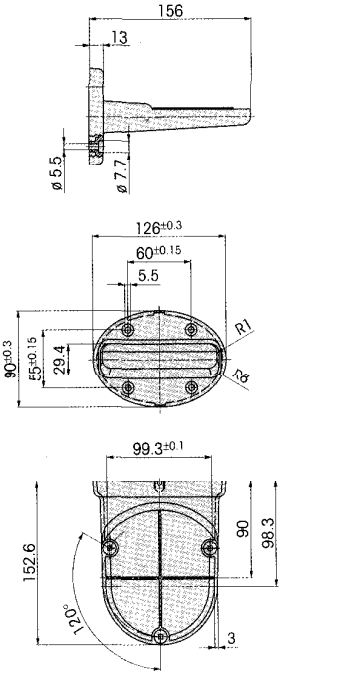



975 883 06 Bracket

## 883/884 Special parts

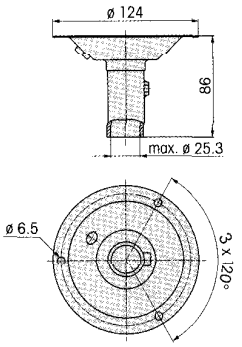



975 883 02 Flange for tube mounting

## 890 Signal Beacon

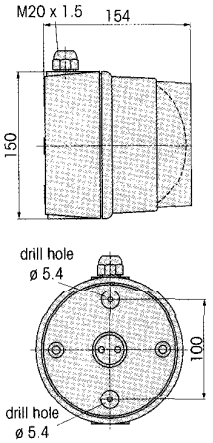



## 890 Signal Beacon

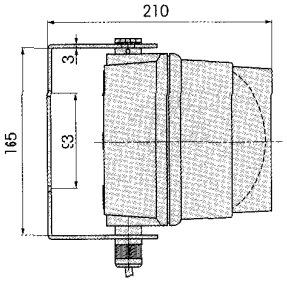


# Technical Diagrams


**890** **Signal Beacon**

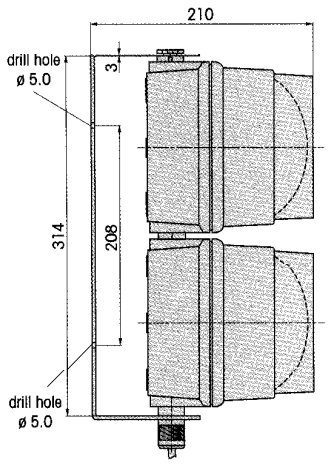



**896/898/899** **Installation Signal Beacon**

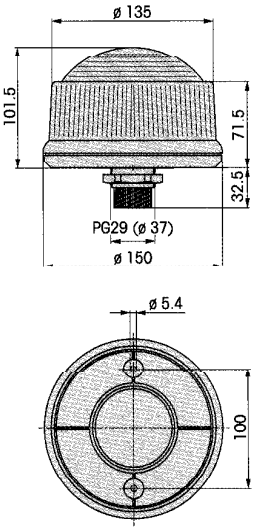



**914** **Alarm Bell**

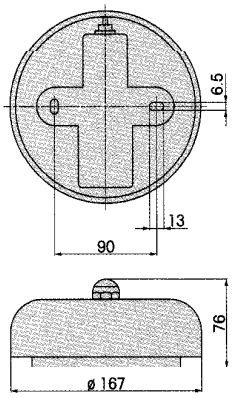



**895** **Signal Beacon**

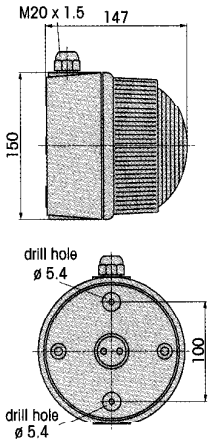


**911** **Alarm Bell**

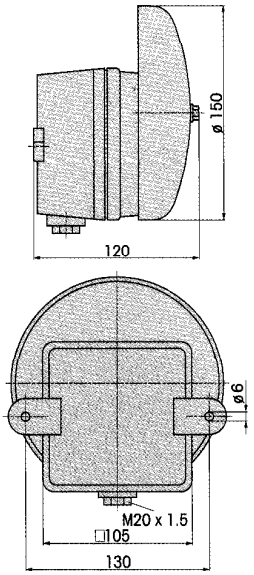


**897** **Flashing Beacon**

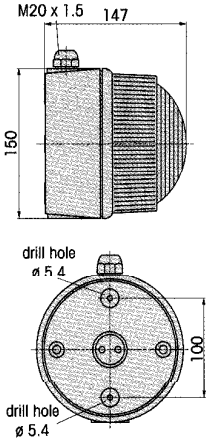





Phone +49 74 24 / 95 57-0 Fax +49 74 24 / 95 57-44

# Technical Diagrams Special Parts


**880 000 00 Flange for tube mounting**

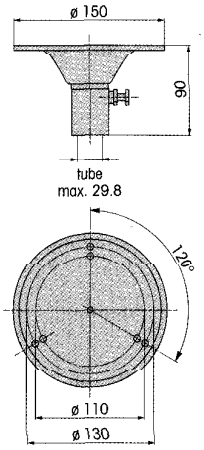



**960 000 01 Bracket**

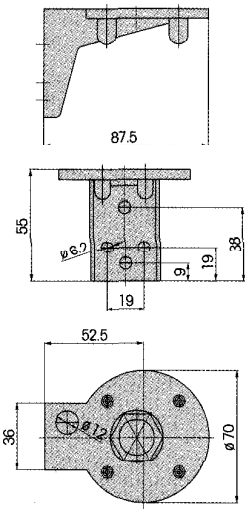



**960 000 02 Bracket**

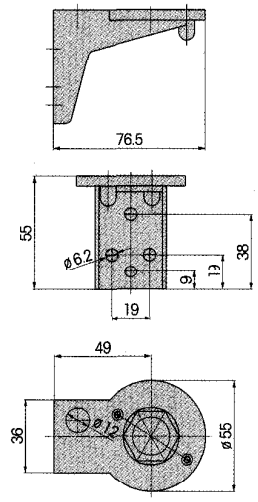



**960 000 04 PG screw**

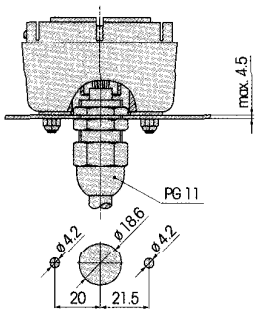



**975 109 01 Bracket**

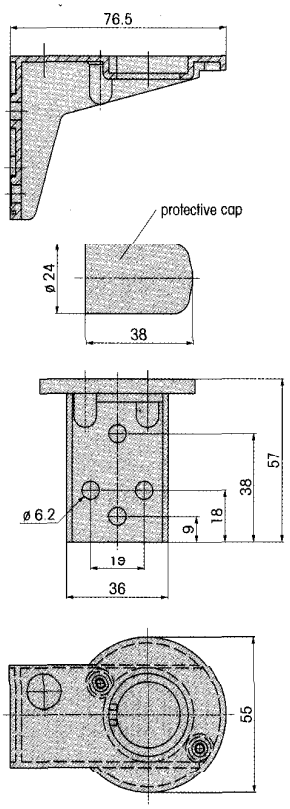


**975 109 02 Surface housing**

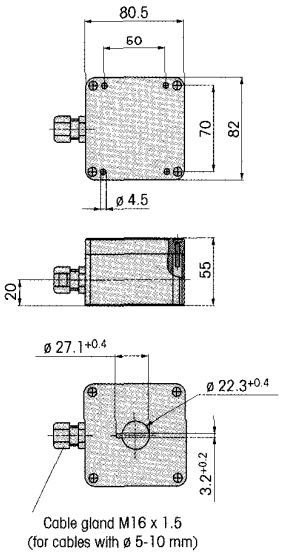



**975 109 03 Surface housing**

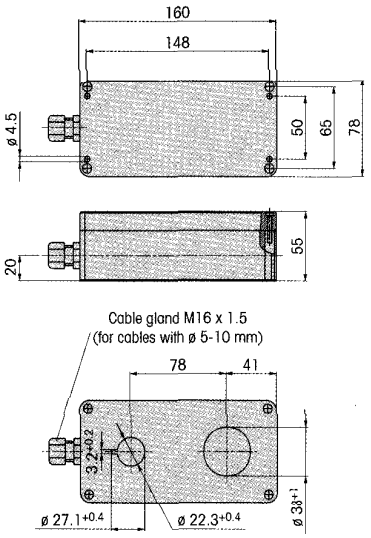


# Technical Diagrams Special Parts


## 975 109 04 Surface housing

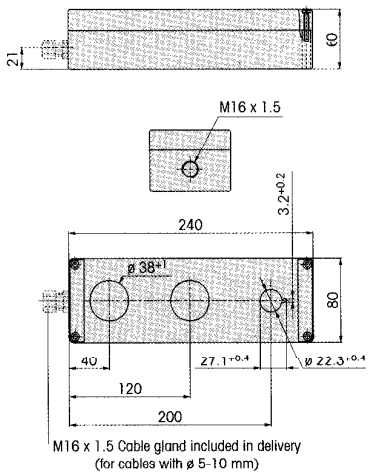



## 975 815 08 Triple surface housing

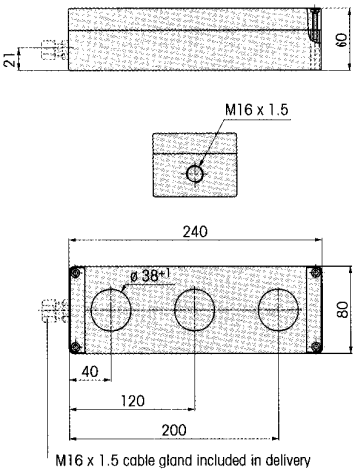



## 975 840 01 Adapter box

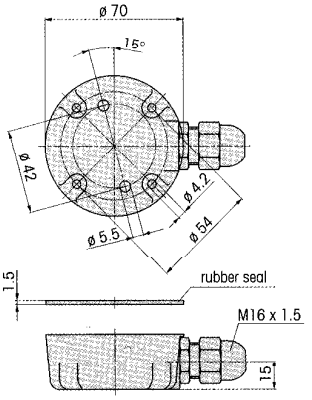



## 975 840 02 Adapter

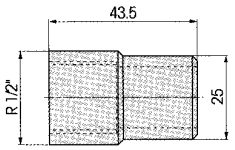



## 975 815 03 Single surface housing

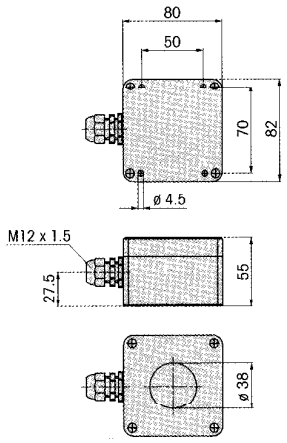



## 975 826 05 Bracket

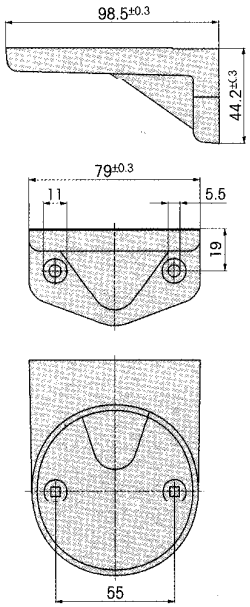



## 975 840 04 Adapter with magnetic base




## 975 840 10 Base

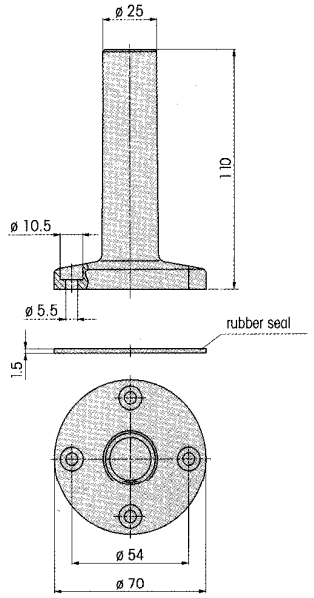


## 975 815 07 Double surface housing

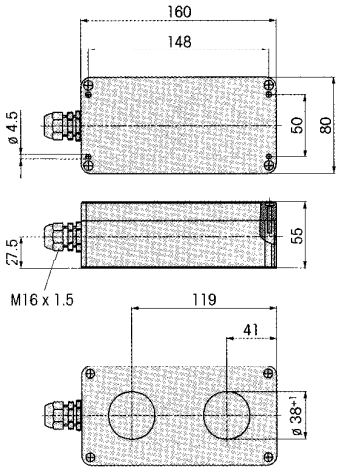






WERMA SIGNALTECHNIK

# Technical Diagrams Special Parts


**975 840 85** **Bracket**

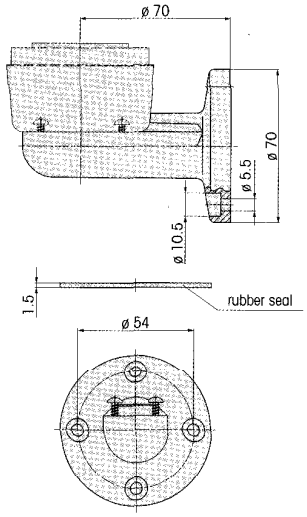



**975 840 86** **2-sided-bracket**

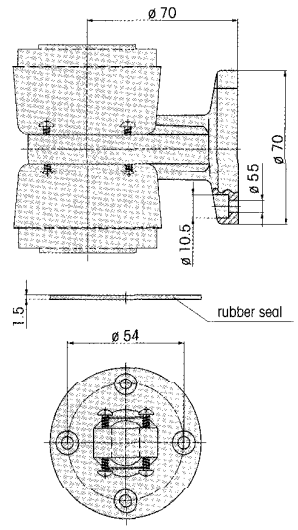



**975 840 90** **Base**

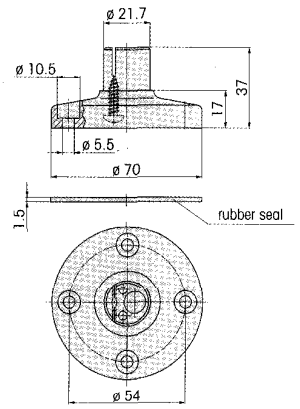



**975 840 91** **Base**

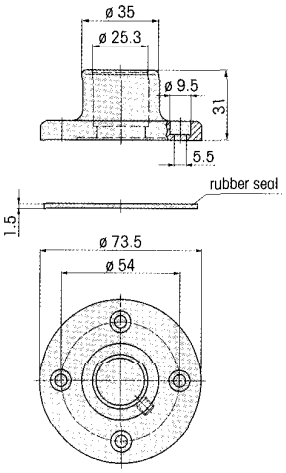



**975 845 01** **Base**

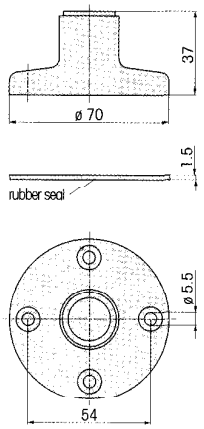



**975 845 02** **Bracket**

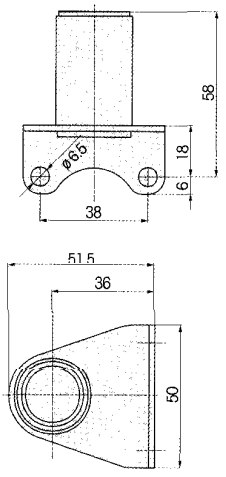


**975 845 03** **Adapter**

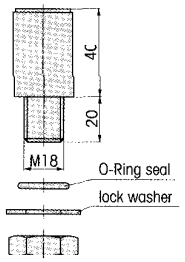


**975 883 02** **Flange to tube mounting**

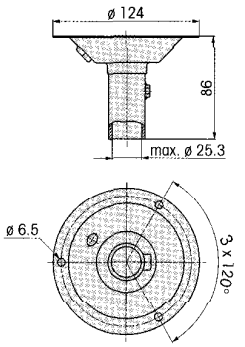


**975 883 06** **Bracket**

