Doc. N.° 1SEP619302P0001 - Rev. M


Inline II

ZLBM / ZHBM123 Installation instruction
ZLBM / ZHBM123 Montageanleitung
ZLBM / ZHBM123 安装说明


Warning


BG Внимание! Опасно напрежение! Да се монтира само от лице с електротехническа квалификация.
FR Avertissement! Tension électrique dangereuse! Installation uniquement par des personnes qualifiées en électrotechnique.
MT Twissija! Vultaġġ perikoluż! Għandu jiġi installat biss minn persuna b'kompetenza elettroteknika.
HR Upozorenje! Opasan napon! Postavljati smije samo el ktrotehnički stručnjak.
DE Warnung! Gefährliche Spannung! Installation nur durch elektrotechnische Fachkraft.
PL Ostrzeżenie! Niebezpieczne napięcie! Instalacji może dokonać wyłącznie osoba z fachową wiedzą w dziedzinie elektrotechniki.
CZ Varování! Nebezpečné napětí! Montáž smí provádět výhradně elektrotechnik!
EL Προειδοποίηση! Υψηλή τάση! Η εγκατάσταση πρέπει να γίνεται μόνο από εξειδικευμένους ηλεκτροτεχνικούς.
PT Aviso! Tensão perigosa! A instalação só deve ser realizada por um eletricista especializado.
DA Advarsel! Farlig elektrisk spænding! Installation må kun foretages af personer med elektroteknisk ekspertise.
HU Figyelmeztetés! Veszélyes feszültség! Csak elektrotechnikai tapasztalattal rendelkező szakember helyezheti üzembe.
RO Avertizare! Tensiune periculoasă! Instalarea trebuie efectuată numai de către o persoană cu experienţă în electrotehnică.
NL Waarschuwing! Gevaarlijke spanning! Mag alleen geïnstalleerd worden door een deskundige elektrotechnicus.
IE Rabhadh! Voltas guaiseach! Ba chóir do dhuine ag a bhfuil saineolas leictriteicniúil, agus an té sin amháin, é seo a shuiteáil.
SK Varovanie! Nebezpečné napätie! Montáž môže vykonávať iba skúsený elektrotechnik.
EN Warning! Hazardous voltage! Installation by person with electrotechnical expertise only.
IT Avvertenza! Tensione pericolosa! Fare installare solo da un elettricista qualificato.
SL Opozorilo! Nevarna napetost! Vgradnjo lahko opravi le oseba z elektrotehničnim strokovnim znanjem.
ET Hoiatus! Ohtlik pinge. Paigaldada võib ainult elektrotehnika-alane ekspert.
LV Uzmanību! Bīstami - elektrība! Montāžas darbus drīkst veikt tikai personas, kurām ir atbilstošas elektrotehniskās zināšanas.
ES ¡Advertencia! ¡Tensión peligrosa! La instalación deberá ser realizada únicamente por electricistas especializados.
FI Varoitus! Vaarallinen jännite! Asennuksen voi tehdä vain sähköalan ammattihenkilö.
LT Dėmesio! Pavojinga įtampa! Dirbti leidžiama tik elektrotechniko patirties turintiems asmenims.
SE Varning! Farlig spänning! Installation får endast utföras av en elektriker.
CN 警告！电压危险！只能由专业电工进行安装。
RU Осторожно! Опасное напряжение! Монтаж должен выполняться только специалистом-электриком.

ZLBM / ZHBM

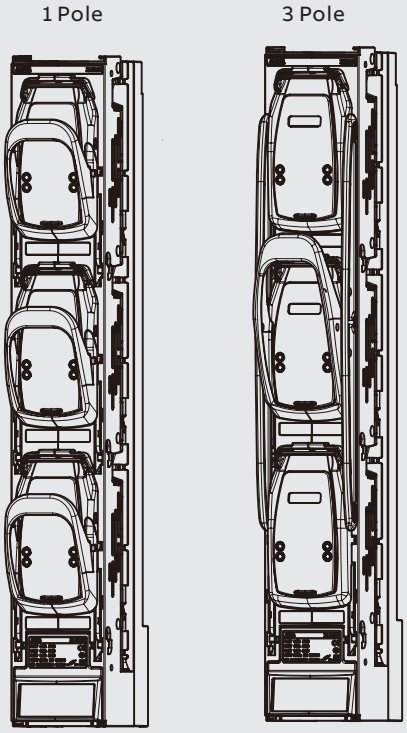

ZLBM/ZHBM123

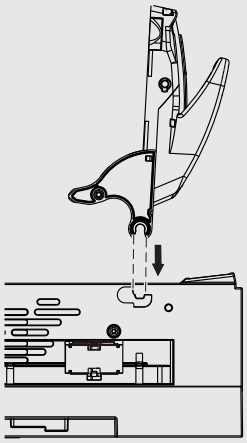

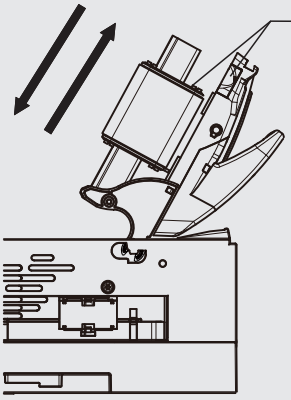

Insertion and removal of NH fuse-link.
Press in the release button and slide the fuse gripping-lugs in or out.


Allowed fuse sizes in different InlineII devices			
Device size	Fuse size (IEC60269-2)		
	NH 1	NH 2	NH 3
ZLBM / ZHBM1	x		
ZLBM / ZHBM2	x	x	
ZLBM / ZHBM3		x*	x
*) =Only use together with 1SEP621288R0001 adapter			




1A

Z-Busbar system


Cable terminals from top.

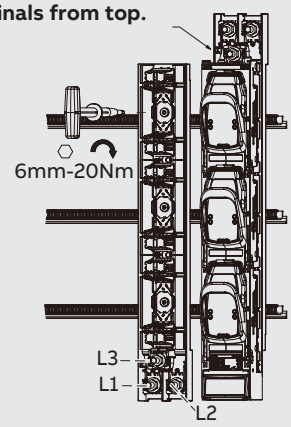


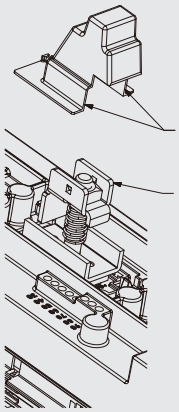

Use thumbs to widen the side walls and lift up the plastic cover.

Turn the z-clamp and the plastic cover 180 degrees.

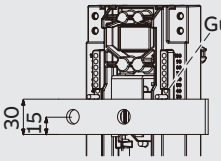





Z-clamp should be attached to Z-Busbar correctly.

1B

185mm-Busbar system


Cable terminals from top

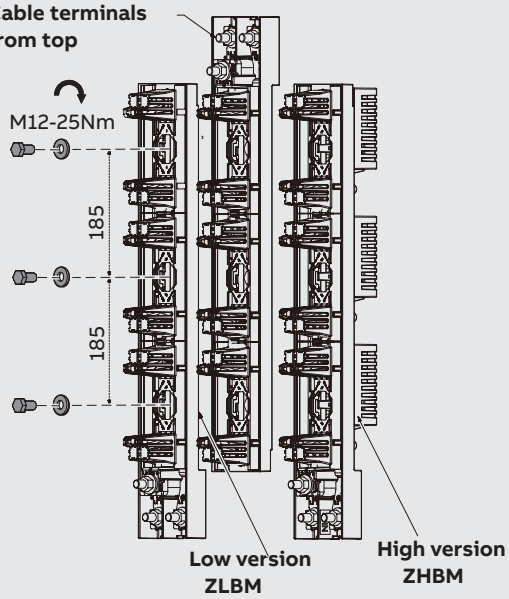

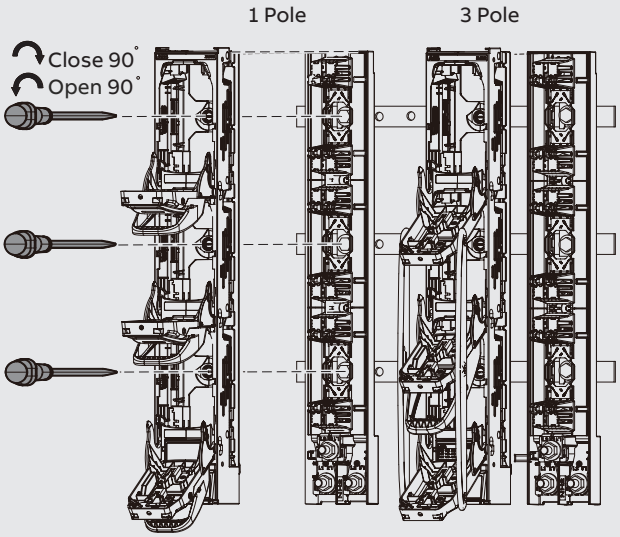

2


V-clamp connection

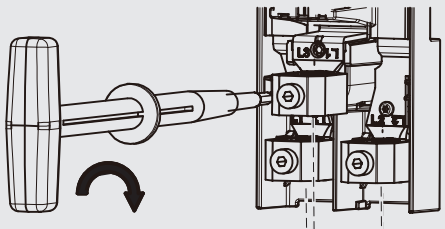

6mm-25Nm


Pad	Rm	Re	Sm	Se
	25-50	25-50	35-50	35-70
	70-185	70-240	70-240	95-300

Note!
Pressure pad can be turned.

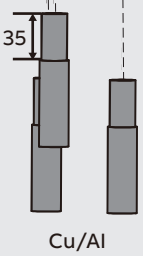

Cu/Al

Standard connection

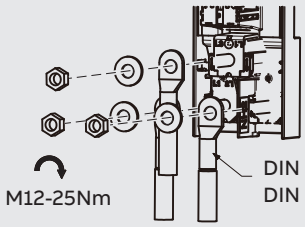

*Cable lug must be tin-coated.
Kabelschuh muss verzinnt sein.
电缆接头必须镀锡。

IMPORTANT :
When mounting terminal kits, review dedicated installation instruction!

Al-conductors have to be brushed and greased before connection.
Al-Leiter müssen vor dem Anschluss gebürstet und gefettet werden.
铝导体在接线前必须去除氧化层并涂油。

© Copyright 2023 ABB. All rights reserved.
www.abb.com