# SONF1 AC - 10 Tone ‘Sonora’

INSTALLATION INSTRUCTIONS





SONF1




| Stage1 tone | Frequency Description | SONF1 AC dB@ 1m |
|---|---|---|
| Tone 1 | 800/1000Hz @ 0.25 sec Alternating | 99dB(A) @1m |
| Tone 2 | 500/1200Hz @ 0.3Hz 0.5 sec Slow Whoop | 100dB(A) @ 1m |
| Tone 3 | 1200/500Hz @ 1Hz - DIN / PFEER P.T.A.P. | 99dB(A) @ 1m |
| Tone 4 | 544Hz (100mS)/440Hz (400mS) - NF S 32-001 | 97B(A) @ 1m |
| Tone 5 | 1000Hz Continuous - PFEER Toxic Gas | 100dB(A) @ 1m |
| Tone 6 | Bell | 95dB(A) @1m |
| Tone 7 | 800/1000Hz @ 7Hz Sweeping | 99dB(A) @1m |
| Tone 8 | 2400/2900Hz @ 50Hz Sweeping | 100dB(A) @ 1m |
| Tone 9 | 420Hz @ 0.625 sec Australian Alert | 97dB(A) @ 1m |
| Tone 10 | 500-1200Hz 3.75sec /0.25sec. Australian Evac. | 100dB(A) @ 1m |

| | | | |
|---|---|---|---|
| Voltage : | 24vac 50/60Hz | 115vac 50/60Hz | 230vac 50/60Hz |
| Voltage range : | +/-10% | +/-10% | +/-10% |
| Current mA : | 40mA | 13mA | 13mA |

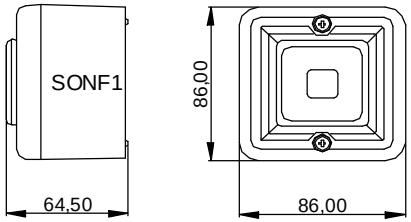

- Volume Control
- Réglage du volume
- Steuerung der Lautstärke
- Controllo volume
- Controlo do Volume
- Control Volumen
- Volumen kontrol
- Volumeregeling
- Volumkontroll
- Volym kontroll

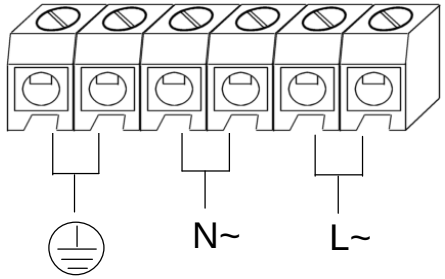

**>95dB(A)@1m.**

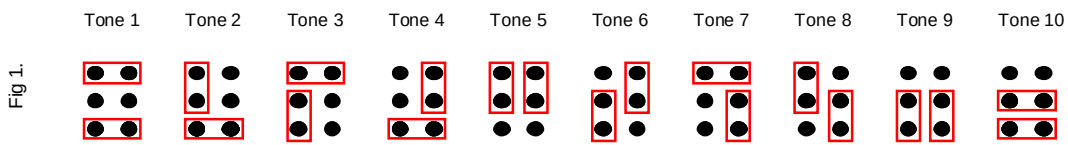


Fig 1.

- **Tone selection.** To select a tone place the pin link in the position shown above (Fig. 1).
- **Sélection de la tonalité / réglage des commutateurs.** Pour sélectionner une tonalité, mettre les socles à broches dans les positions illustrées (Fig. 1).
- **Tonwahl / Einstellung der Schalter.** Zur Wahl eines Tons die Klemmenanschlüsse in die angegebenen Positionen bringen (Fig.1).
- **Selezione tono / regolazione commutatore.** Per selezionare un tono, disporre i collegamenti a cavallotto nelle posizioni indicate (Fig. 1).
- **Seleção de tons / ajuste dos comutadores.** Para seleccionar um tom, coloque as ligações dos pinos na posição mostrada (Fig.1)
- **Selección Tono / programación interruptores.** Para seleccionar un tono colocar las conexiones de los puentes en las posiciones mostradas (Fig. 1).
- **Toonselectie**. Om een toon te selecteren de pinverbinding in de hierboven aangetoonde positie plaatsen (Fig. 1)
- **Valg af tone**. Valg af en tone sker ved at anbringe stiftforbindelsen i ovenstående position (fig. 1).
- **Velge tone.** For å velge en tone må du plassere stiftleddet i posisjonen som vist ovenfor (fig. 1).
- **Tonval**. Välj en ton genom att placera stiftanslutningen i läget som visas ovan (fig. 1).



No liability is accepted for any consequence of the use of this document. The technical specification of this unit is subject to change without notice due to our policy of continual product development. All dimensions are approximate. This unit is sold subject to our standard conditions of sale, a copy of which is available on request.

**Tel : 0044(0)2087438880 mail : sales@e2s.com Fax : 0044(0)2087404200 web : www.e2s.com**