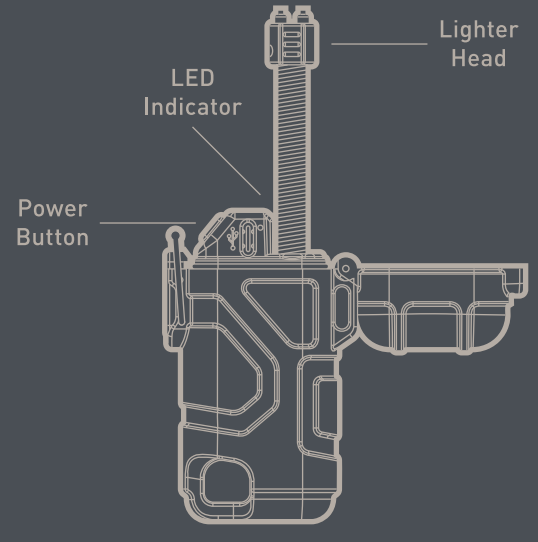

OPERATION
Each press of the power button will activate the lighter. If held continuously, the lighter will be interrupted after 6 seconds. To reactivate the lighter, release the power button and press it again.

LED INDICATOR
Located next to the charging port, it indicates:
Battery Low - Flashing
Charging - Solid
Fully Charged - Turns Off

SAFETY NOTICE
Continuously reactivating the lighter can cause the lighter head to get very hot. Please allow the lighter head to cool before touching it.

EXTEND - Grab the sides of the lighter head and pull up.

COLLAPSE - Ensure lighter head is cool. Grab the lighter head and press it back into the housing of the lighter.