

MTL405-1760K_Instructions_Layout 1 11/11/2014 16:41 Page 1

3

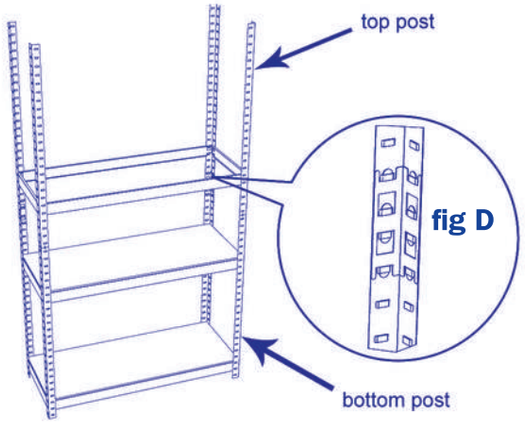

Add a board shelf to the level built in step two. Place the four connectors onto the top ends of the four posts, insert the top posts into the connectors and tap down to seat properly **(fig D).** Add the third level in the same way as the first two levels and tap lightly to seat the tabs.

4

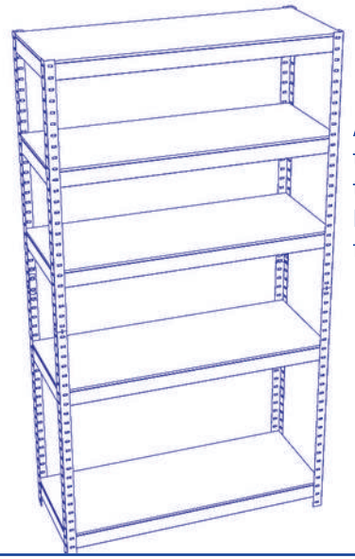

Add a board shelf to the level built in step three. Add the last two levels to the shelving unit and tap lightly to seat the tabs and add the remaining two boards. Finally put the four end caps onto the ends of the four posts.


MATLOCK INDUSTRIAL PRODUCTS
Security House, Wigston, Leicester, England, LE18 2FS.

MATLOCK

Standard Duty Racking

5 Shelf - 405mm Depth


ORDER CODE: MTL-405-1760K

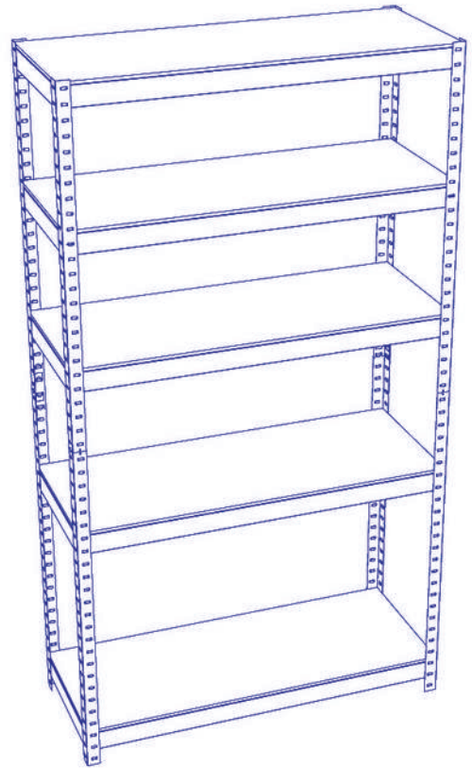

Up To 100kg UDL
Shelf Capacity

ASSEMBLY INSTRUCTIONS

List of Parts

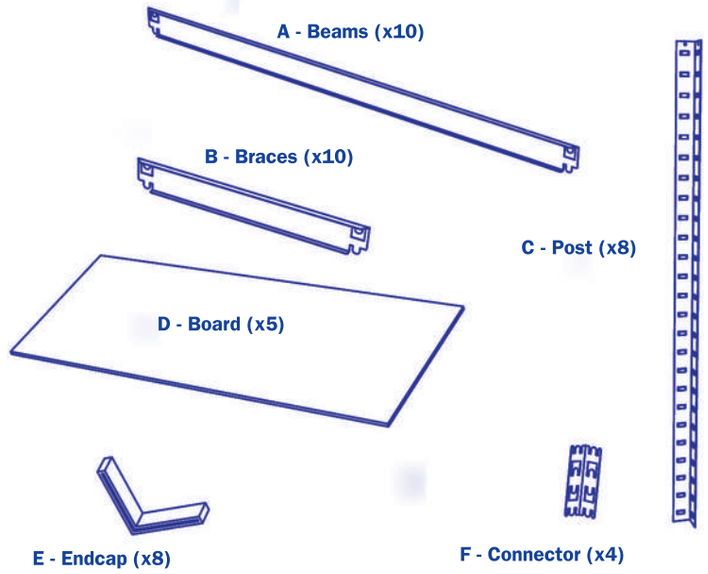

Proper installation techniques for tab engagement


A-Tap Overlay

Brace tab over post holes, so that the brace is flush to the post.




B-Partial Engagement

Apply downward pressure to the brace by hand, to partially seat tabs.

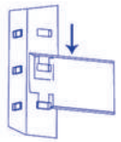



C-Full Engagement


Tap brace down lightly with a mallet to fully seat the tabs

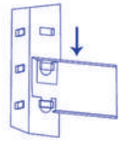

1

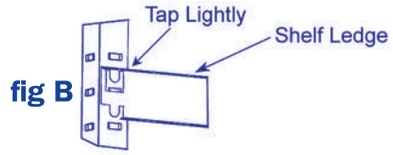


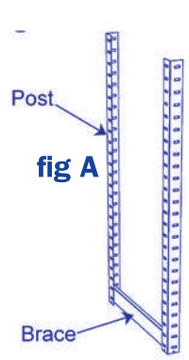

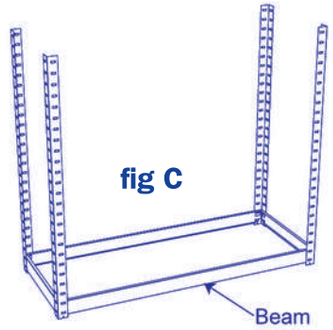

Assemble two posts to one brace **(fig A)** by placing the tabs of the brace into the holes of the post with the shelf ledge facing upwards **(fig B)**. Then tap lightly to seat the tabs. Repeat this with the other two legs and a brace. Assemble these two post end units with two beams **(fig C)**. Tap lightly to seat the beams onto the two post end units.

2

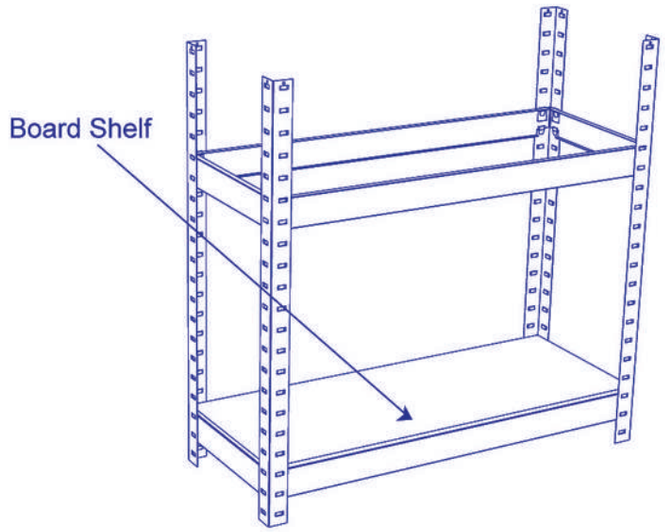

Add a board shelf to the level built in step one. Add two beams and braces in the same way as in step one to your desired height. Tap lightly to seat the tabs.