Offis


INSTRUCTION: OFI-836-0360K, OFI-836-0370K



1 Fasten the pole with 2 PCS bolt using hex wrench.



2 Insert two casters (one with brake, one without brake) into each base.

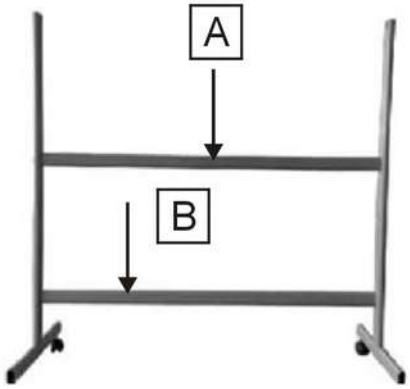

3 Fasten the crossbar **A** on the top with 4 PCS bolt using hex wrench.
Fasten the crossbar **B** on the bottom with 4 PCS bolt using hex wrench.



4 Fasten the white board into the frame assembly.

SWISS HOUSE
Wigston, Leicester, England, LE18 2FS.