THE ENVIRONMENT

Always dispose of unwanted tools, accessories and packaging materials in an environmentally friendly manner.

QUALITY GUARANTEE & WARRANTY

SENATOR TOOLS carry a one year manufacturer's warranty.

SENATOR TOOLS are designed & manufactured to the highest standards & specifications.

Assuring the quality and performance required by all sectors of industry.

SENATOR TOOLS are fully guaranteed against faulty materials & workmanship.

Should they be found to be defective, they will either be repaired or replaced free of charge (fair wear and tear and/or misuse excepted).

Please retain supplier invoice as proof of purchase.

Senator is a registered trade mark of The Kennedy Group Ltd.

THE KENNEDY GROUP, WIGSTON. LEICESTER, ENGLAND, LE18 2FS.

© The Kennedy Group Ltd. 07/18

SENATOR
QUALITY TOOLING

SHELVED WORK BENCH WITH LOCKING DOOR

ORDER CODE: SEN-405-5040K


- **Cold roll steel body**
- **Powder coated resin paint**
- **Durable, high quality finish**
- **38mm wooden worktop**
- **Smooth action drawer slides**
- **1350(W) x 500(D) x 850mm(H)**




CE

INSTRUCTION MANUAL

NOTES

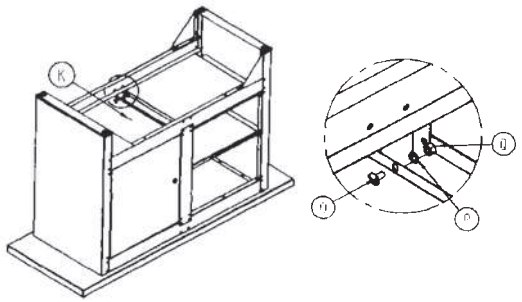

Step 9:
Fit bottom cupboard-side shelf unit (K) using the usual fittings.

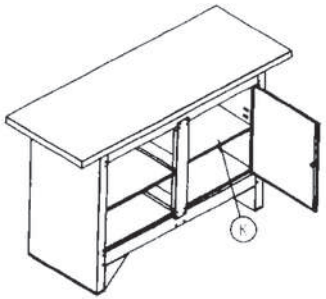

Step 10:
Open cupboard door and fit second shelf (K).


THIS CABINET IS NOT INTENDED TO BE USED FOR STANDING ON.

MAINTENANCE

- Keep the drawer slider mechanism lubricated. Lubrication should be carried out at least twice a year.
- Keep the wooden work surface clean and dry and do not use a hammer or other heavy tool directly on the work surface.
- The maximum weight for each drawer should not exceed 25kg. The maximum weight to which the cabinet is subjected should not exceed 180kg, including the worktop load.


SENATOR **Cabinet & Work Bench are designed to help you work safely and efficiently. Lifting equipment can be dangerous if the correct operating and maintenance procedures are not followed. Operating instructions and basic safety procedures are as follows:**

⚠ LOADING:

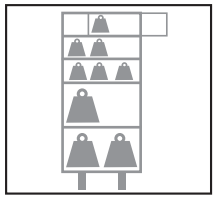

- Do not load the top drawer first.
- Do not drop tools into the drawers.
- Do not completely fill only one drawer.
- Do not load a drawer from the front.

⚠ USE:

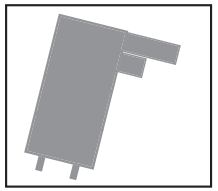


- Do not open more than one loaded drawer at a time, as this may cause the cabinet to become unstable.
- Do not stand on this product.
- Do not slam the drawers shut.

BOX CONTENTS




A – Side Panels (2)



B – Rail (2)




C – Centre Support (1)




D – Rail (2)




E – Centre Support (1)

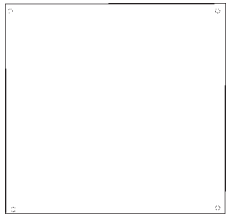


F – Back Wall Panels (2)

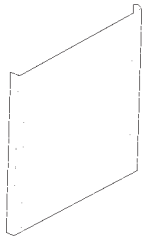


G – Supports (2)

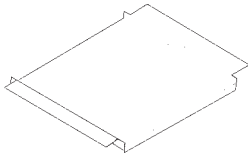


H – Shelves (4)

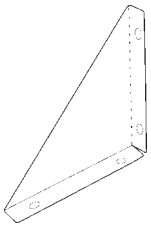


I – Corner Braces (4)

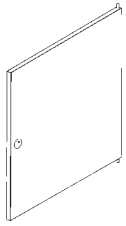

J – Door (1)

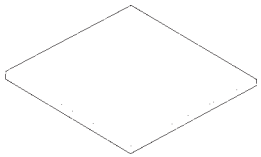

K – Shelves (2)

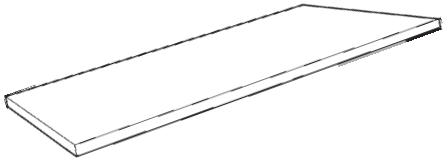

N – Wooden Work Top (1)




O ST4 8 x 16 Screws (40+3)




P Lock Washers (40+3)



Q Hex Nuts (40+3)




R Adjustable Leg Levellers (4)




S Hex Head Screws (4)


ASSEMBLY INSTRUCTIONS

To assemble this product you will require a crosspoint No. 2 screwdriver, a 10mm combination ratchet spanner and a drill with 4mm wood bit. If available, a 10mm socket wrench may aid access when assembling the unit.

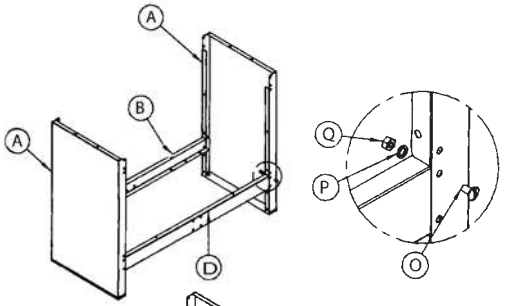



Step 1:
Join the two side panels (A) at the bottom of the cabinet using two brace rails (B and D). Fix using 8 bolt, nut and washer combinations (O, P and Q). Make sure that the brace supports have the edge with the two bolt holes facing upwards.

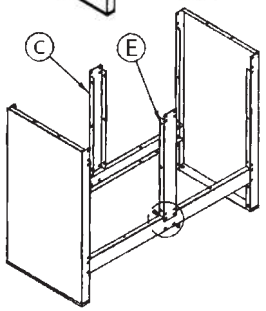

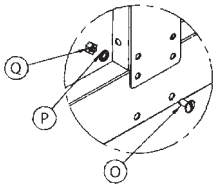



Step 2:
Attach centre supports (C and E) to the brace rails (B and D) just fitted using the bolt, washer and hex nut combinations (O, P and Q).

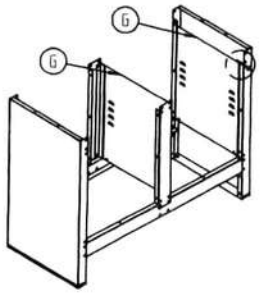

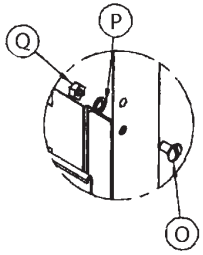



Step 3:
Slide in the shelf support units (G) and secure using the bolt, washer and hex nut combinations (O, P and Q).

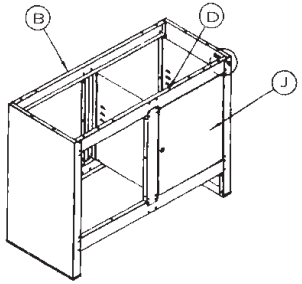

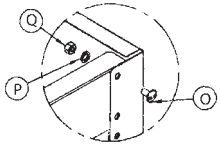



Step 4:
Fix the two top cross brace supports (B and D) at the top end of the cabinet using the bolt, washer and nut combinations (O, P and Q).

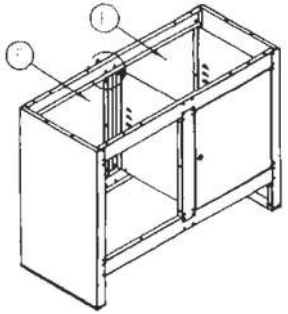

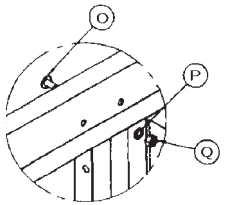


Step 5:
Attach the back wall panels (F). Secure through the side panels and the centre supports using the bolt, nut and washer combinations (O, P and Q).

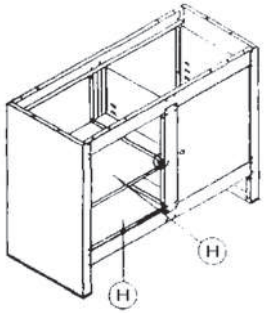


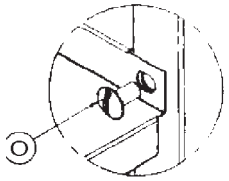


Step 6:
Insert shelves (H) in position inside the cabinet and fix using the usual bolt, washer and nut combinations (O, P and Q).

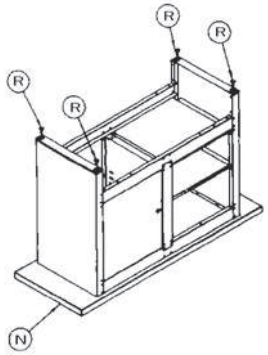

Step 7:
Fit the adjustable leg levellers (R) to the bottom of side panels (A).
Place the work top (N) on a suitable surface and turn the cabinet upside down on top of it. Position the cabinet centrally on the work top and mark the screw holes through the fixing holes in the top supports. Remove the cabinet and drill four 4mm x 13mm deep holes to receive the four 10mm x 16mm hex head screws used to secure the work top to the cabinet. Make sure that the holes do not exceed 13mm deep. Tighten the hex head screws using a suitable wrench.

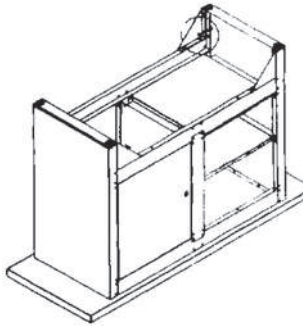

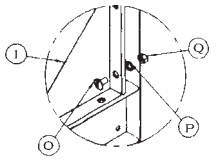

Step 8:
Fix the triangular corner braces (I) at the front and rear of the cabinet, bolting them to the bottom brace rails and the side panels.