

Wheel nut socket (outer and inner) for large buses and trucks.
Easy to organize and get access to products with design case.

sq.dr
25.4
mm
1"

For bus/truck

4 6



A809T

Specialized socket for tightening/loosening the outer nut for large buses and trucks.

6

Outer nut



8A-35T

Pin/O-ring compatible chart

O-ring	8A-	32T ~ 35T	38T, 41T
Pin		PIN5544S	PIN5547S
O-ring		RINGW30S	RINGW31S

※ Within a plastic bag (10 pcs./pkg.)

Socket for tightening/loosening of inner nut for bus and truck.
Size can handle from midium-sized car to large car.

4

Inner nut



8A-21BA

Pin/O-ring compatible chart

Models	8A-	17BA ~ 21BA
Pin		P4040S
O-ring		RAS326S

※ Within a plastic bag (10 pcs./pkg.)

Specialized socket for tightening/loosening the inner nut for large buses and trucks.

4

Inner nut



8A-21B

Pin/O-ring compatible chart

Models	8A-	17B ~ 21.5B
Pin		PIN5544S
O-ring		RINGW30S

※ Within a plastic bag (10 pcs./pkg.)

IMPACT SOCKET SET (for TRUCK WHEEL)

Models **A809T**

Contents **9 Items**

Descriptions	Models	
BUDD WHEEL SOCKET (for OUTER NUT of TRUCK WHEEL)	8A-	32T, 33T, 35T, 38T, 41T
BUDD WHEEL SOCKET (for INNER NUT of TRUCK WHEEL)	8A-	17B, 19B, 20B, 21B

- 6 Points strong drive
- For tightening/loosening outer nut and inner nut
- Package size : w370x d160x h125mm
- Weight : 7.8kg
- Qty./Carton : 1



BUDD WHEEL SOCKET (for OUTER NUT of TRUCK WHEEL)


Models	Across Flat (mm)	Dimensions (mm)					Qty./ Carton (Generally)	Weight (g)
	S	D ₁	D ₂	L ₁	L	d		
8A-32T	32	48	48	22	80	25	5	800
8A-33T	33	49	48	28	80	25	5	810
8A-35T	35	50	50	28	80	25	5	840
8A-38T	38	55	52	28	80	30	5	870
8A-41T	41	58	52	28	80	35	5	870

- 6 Points strong drive
- For tightening/loosening outer nut



CAUTION

- This thin-wall budd wheel socket is only for tire, please do not use on other applications.

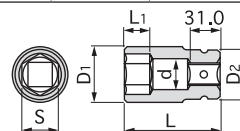

BUDD WHEEL SOCKET (for INNER NUT of TRUCK WHEEL)

Models	Across Flat (mm)	Dimensions (mm)					Qty./ Carton (Generally)	Weight (g)
	S	D ₁	D ₂	L ₁	L	d		
8A-17BA	17	38	48	20	61		5	520
8A-19BA	19	40	48	20	61		5	530
8A-20BA	20	41	48	20	61		5	535
8A-21BA	21	42	48	20	61		5	540


- For tightening/loosening inner nut



※ This product is registered design.

CAUTION

- Hold square inner nut securely to use a budd wheel socket.

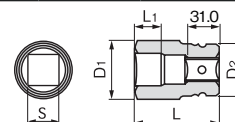

BUDD WHEEL SOCKET (for INNER NUT of TRUCK WHEEL)


Models	Across Flat (mm)	Dimensions (mm)					Qty./ Carton (Generally)	Weight (g)
	S	D ₁	D ₂	L ₁	L	d		
8A-17B	17	40	48	21	72	27	5	550
8A-17.5B	17.5	40	48	21	72	27	5	550
8A-19B	19	43	48	21	72	28	5	580
8A-20B	20	45	48	21	72	30	5	600
8A-21B	21	46	48	21	72	31	5	610
8A-21.5B	21.5	46	48	21	72	31	5	610

- For tightening/loosening inner nut



CAUTION

- Hold square inner nut securely to use a budd wheel socket.

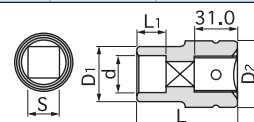

WARNING

- Use right size o-ring and pin securely fixed.
- O-ring and pin are consumptive parts. Replace those which are deteriorated or worn.