

CAMDENBOSS
ELECTRONICS & ENCLOSURES

CVB-PLUS


ASSEMBLY INSTRUCTIONS

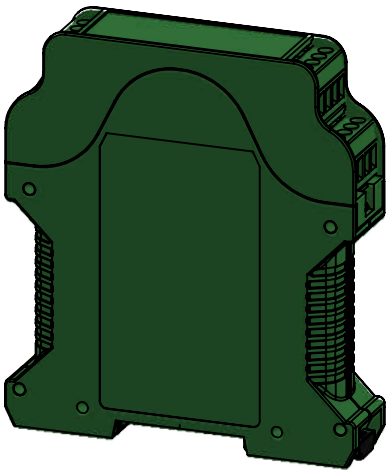


1. CLIP TWO HALVES TOGETHER

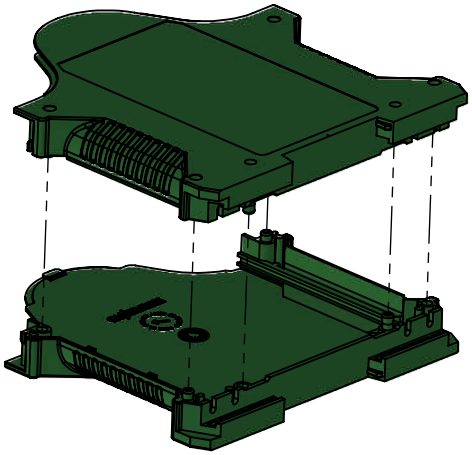


2. SLIDE IN DIN-RAIL CLIPS

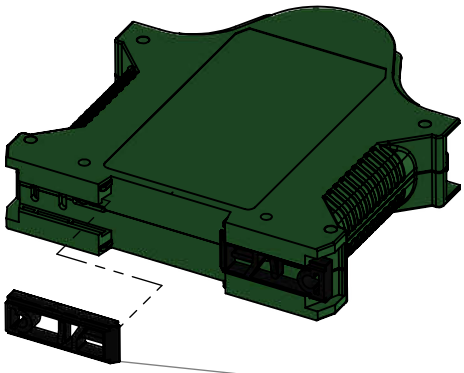


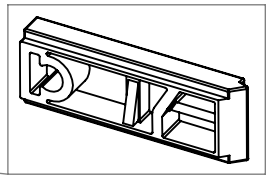


3. FIT TERMINAL BLOCKS TO PCB

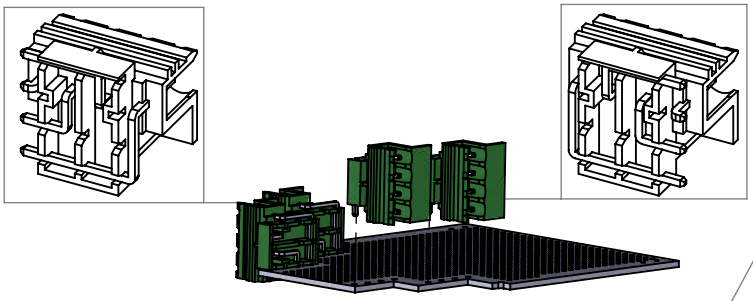


4. PUSH PCB INTO TOP

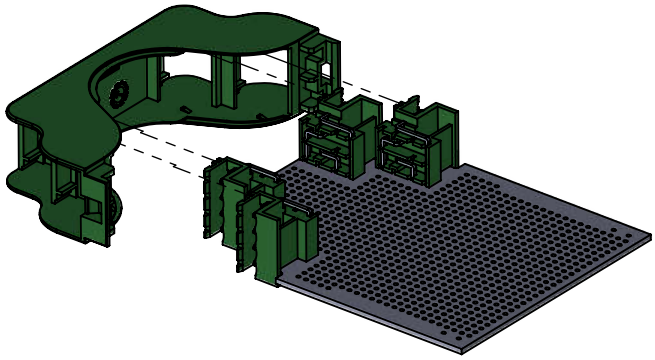


5. SLIDE PCB/TOP INTO BASE

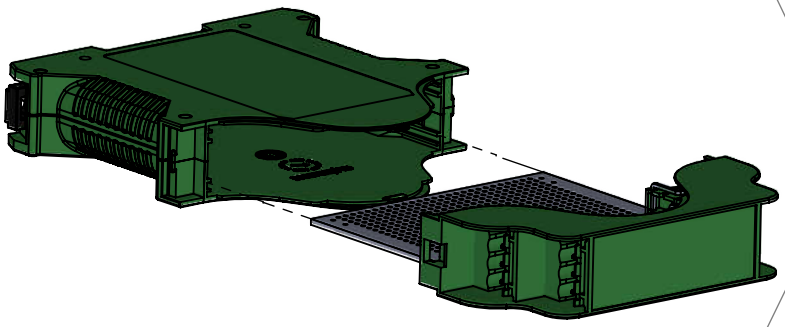

6. ATTACH PLUGGABLE TERMINAL BLOCK

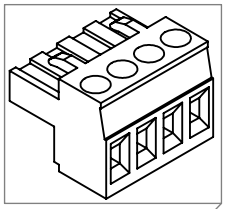

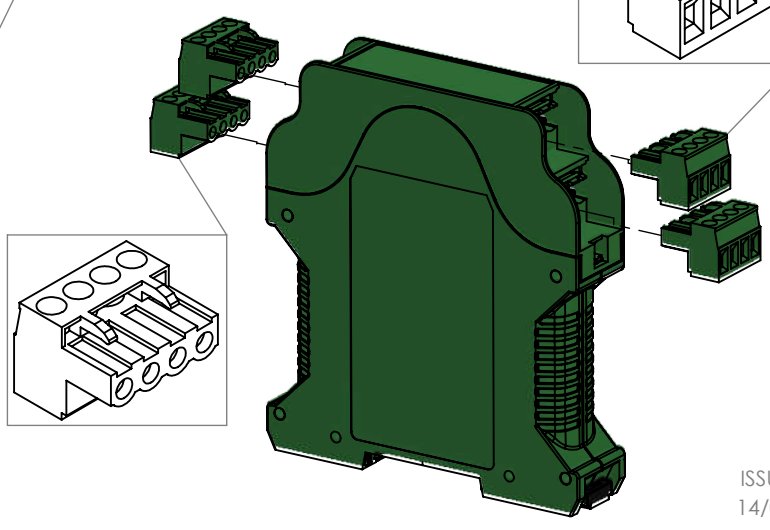

OPTIONAL DIN-RAIL MOUNTS OR WALL MOUNT

DIN-RAIL MOUNT



WALL MOUNT



PUSH CLIPS FURTHER OUT FOR WALL MOUNTING

ISSUE: O
14/04/16