

supply busbars, entry terminals
"standard" distribution

NEW



4 049 26


4 049 14



4 049 44


4 049 05


Pack	Cat.Nos	Prong-type supply busbars	Length	Max. number of devices connected
		Universal single pole + neutral		
		Reversible: blue for neutral, black for live		
20	4 049 26		1 row	13
10	4 049 37		Meter	57
		Double pole		
50	4 049 38[1]		1 row	6
10	4 049 39		Meter	28
		Double pole balanced on 3 phases		
3	4 049 40[1]		1 row	6
10	4 049 41		Meter	28
		Triple pole		
40	4 049 42[1]		1 row	4
10	4 049 43		Meter	19
		Four pole		
30	4 049 44		1 row	3
10	4 049 45		Meter	14

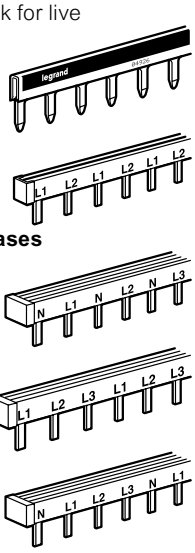


Pack	Cat.Nos	Fork-type supply busbars	Length	Max. number of devices connected
		Single pole		
20	4 049 11		1 row	12
10	4 049 12		Meter	57
		Double pole		
10	4 049 14		Meter	28
		Triple pole		
5	4 049 17		1 row	4
10	4 049 18		Meter	19
		Four pole		
10	4 049 20		Meter	14

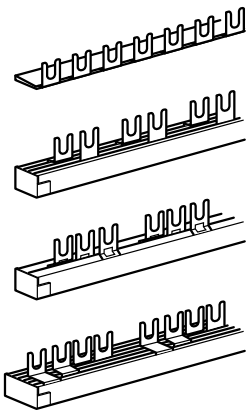

Pack	Cat.Nos	Protection
		Protection of prongs
20	4 049 88	12 modules Can be cut to length
		Protection of supply busbar ends
40	4 049 89	For single pole/single pole + neutral
20	4 049 90	For double pole length 1 m and triple pole
20	4 049 91	For four-pole



Pack	Cat.Nos	Entry terminals
20	4 049 05	For universal single pole + neutral or single pole supply busbars Cross section: 4 to 25 mm² - IP 2X
20	4 049 06	For all supply busbars Cross section: 6 to 35 mm²




1: Filled with end protection

Technical characteristics

	Busbars types	Max. number of devices connected	Length in number of 17.5 mm modules	Cross section (mm²)	Permissible current: 1 central power supply point	Permissible current: 2 power supply point
Single pole or Single pole + neutral	1 row	13	13	16²	80	100
	Meter	57	57			
Double pole	1 row	6	12	10²	63	90
	Meter	28	56	16²	80	100
Double pole balanced on 3-phases	1 row	6	12	10²	63	90
	Meter	28	56	16²	80	100
Triple pole	1 row	4	12	10²	63	90
	Meter	19	57	16²	80	100
Four pole	1 row	3	12	10²	63	90
	Meter	14	56	16²	80	100


Use of supply busbars

Universal single phase + neutral
- blue for neutral
- black for live

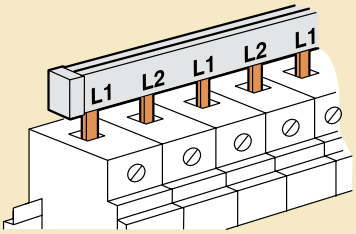


Entry terminal

Power supply at the rear of the busbar
For all devices with moving cage terminals

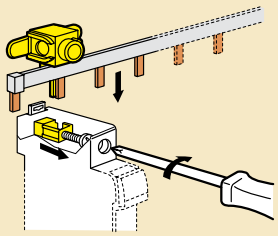

Power supply at the front of the busbar
For all devices with fixed cage terminals

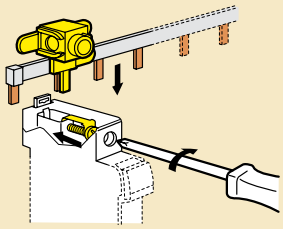

Four pole busbar

