Accessories (continued)

Front operation shaft support accessory

Use

This support maintains shaft position for extension shafts greater than 320 mm in length.

Rating (A)	Frame size	Reference
50 … 400	11 … 16	3899 **0400**



Shaft guide for external operation

Use

To guide the shaft extension into the external handle.
This accessory enables the handle to engage the extension shaft with a misalignment of up to 15 mm.
Required for a shaft lengths over 320 mm.

Description	Reference
Shaft guide	1429 **0000**



Shaft for external front operation handle

Use

Standard lengths:
- 200 mm
- 320 mm
- 400 mm
- 500 mm.

Other lengths: consult us.

Rating (A)	Frame size	Shaft length (mm)	Reference
CD 20 …CD 32	0	200	1401 **0520**
CD 20 …CD 32	0	320	1401 **0532**
CD 20 …CD 32	0	400	1401 **0540**(1)
32 … 400	11 … 16	200	1400 **1020**
32 … 400	11 … 16	320	1400 **1032**
32 … 400	11 … 16	500	1400 **1050**(2)
630 … 800	17	200	1400 **1220**
630 … 1250	17/18	320	1400 **1232**
630 … 1250	17/18	500	1400 **1250**(1)

(1) Use the shaft guide accessory for external operation.
(2) Use the front operation shaft support accessory.

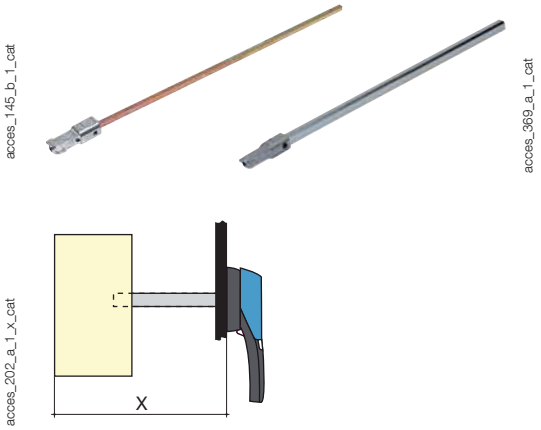

Dimension X (mm) for FUSERBLOC BS88

Shaft length (mm)	CD 20 …CD 32 A1 0	32 A1 11	63 … 160 A2-A3/A4 12/13/14	CD160 … CD200 A3-A4 13 A	160 … 200 B1-B2 14/15	250 … 315 B1-B2-B3 15/16	630 … 800 C1-C2-C3 17	1250 D1 18
200	102 … 245	100 … 230	125 … 230	150 … 230	135 … 230	160 … 230	270 … 304	
320	102 … 365	100 … 350	125 … 350	150 … 350	135 … 350	160 … 350	270 … 424	304 … 424
400	102 … 445							
500		100 … 530	125 … 530	150 … 530	135 … 530	160 … 530	270 … 600	304 … 600

Dimension X (mm) for FUSERBLOC NFC and DIN

Shaft length (mm)	CD 25 …CD 32 10x38/14x51 0	50 14x51 11	63 00C 12	100 … 160 22x58/00 13	160 0 14	250 … 400 1/2 15/16	630 … 800 3 17	800 … 1250 4 18
200	102 … 245	100 … 230	125 … 230	135 … 230	145 … 230	160 … 230	270 … 304	
320	102 … 365	100 … 350	125 … 350	135 … 350	145 … 350	160 … 350	270 … 424	304 … 424
400	102 … 445	100 … 430	125 … 430	135 … 430	145 … 430	160 … 430	270 … 504	304 … 504
500		100 … 530	125 … 530	135 … 530	145 … 530	160 … 530	270 … 604	304 … 604