

PNOZ s5

PILZ
THE SPIRIT OF SAFETY

Safety relays

Operating Manual-21397-EN-11

This document is the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.


SD means Secure Digital

Introduction	**5**
Validity of documentation	5
Using the documentation	5
Definition of symbols	5
Safety	**6**
Intended use	6
Safety regulations	6
Safety assessment	6
Use of qualified personnel	7
Warranty and liability	7
Disposal	7
For your safety	7
Unit features	**8**
Safety features	**8**
Block diagram/terminal configuration	**9**
Type: 24 VDC	9
Type: 48 - 240 VAC/DC	9
Function description	**10**
Timing diagrams	11
Automatic and manual start	11
Monitored start	12
Reset with start-up test	13
Installation	**14**
Wiring	**14**
Preparing for operation	**15**
Operating modes and delay time	15
Set operating modes	16
Set delay time	16
Connection	17
Operation	**19**
Status indicators	20
Error indicators	20

Faults - malfunctions	**21**
Dimensions in mm	**22**
Technical details Order no. 750105, 751105, 751185	**22**
Technical details Order no. 750135, 751135	**29**
Safety characteristic data	**35**
Supplementary data	**36**
Service life graph	36
Permitted operating height	37
Remove plug-in terminals	**39**
Order reference	**39**
EC declaration of conformity	**39**

Introduction

Validity of documentation

This documentation is valid for the product PNOZ s5. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

Safety

Intended use

The safety relay provides a safety-related interruption of a safety circuit.

The safety relay meets the requirements of EN 60947-5-1, EN 60204-1 and VDE 0113-1 and may be used in applications with

- E-STOP pushbuttons
- Safety gates
- Light grids and safety switches with detection of shorts across contacts

The following is deemed improper use in particular

- Any component, technical or electrical modification to the product,
- Use of the product outside the areas described in this manual,
- Use of the product outside the technical details (see Technical details [📖 22]).



NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

Safety regulations

Safety assessment

Before using a device it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- Are familiar with the basic regulations concerning health and safety / accident prevention,
- Have read and understood the information provided in the section entitled Safety
- Have a good knowledge of the generic and specialist standards applicable to the specific application.

Warranty and liability

All claims to warranty and liability will be rendered invalid if

- The product was used contrary to the purpose for which it is intended,
- Damage can be attributed to not having followed the guidelines in the manual,
- Operating personnel are not suitably qualified,
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

Disposal

- In safety-related applications, please comply with the mission time T_M in the safety-related characteristic data.
- When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

For your safety

The unit meets all the necessary conditions for safe operation. However, please note the following:

- Note for overvoltage category III: If voltages higher than low voltage (>50 VAC or >120 VDC) are present on the unit, connected control elements and sensors must have a rated insulation voltage of at least 250 V.

Unit features

- Positive-guided relay outputs:
  - 2 safety contacts (N/O), instantaneous
  - 2 safety contacts (N/O), delay-on de-energisation
- 1 semiconductor output
- Connection options for:
  - E-STOP pushbuttons
  - Safety gate limit switches
  - Start buttons
  - Light grids and safety switches with detection of shorts across contacts
- A connector can be used to connect 1 PNOZsigma contact expansion module
- Operating modes and delay times can be selected via rotary switches
- LED indicator for:
  - Supply voltage
  - Input status, channel 1
  - Input status, channel 2
  - Switch status channel 1/2
  - Start circuit
  - Error
- Plug-in connection terminals (either spring-loaded terminal or screw terminal)
- See order reference for unit types

Safety features

The safety relay meets the following safety requirements:

- The circuit is redundant with built-in self-monitoring.
- The safety function remains effective in the case of a component failure.
- The correct opening and closing of the safety function relays is tested automatically in each on-off cycle.

Block diagram/terminal configuration

Type: 24 VDC

- U_B: 24 VDC; Order No. 750105, 751105, 751185

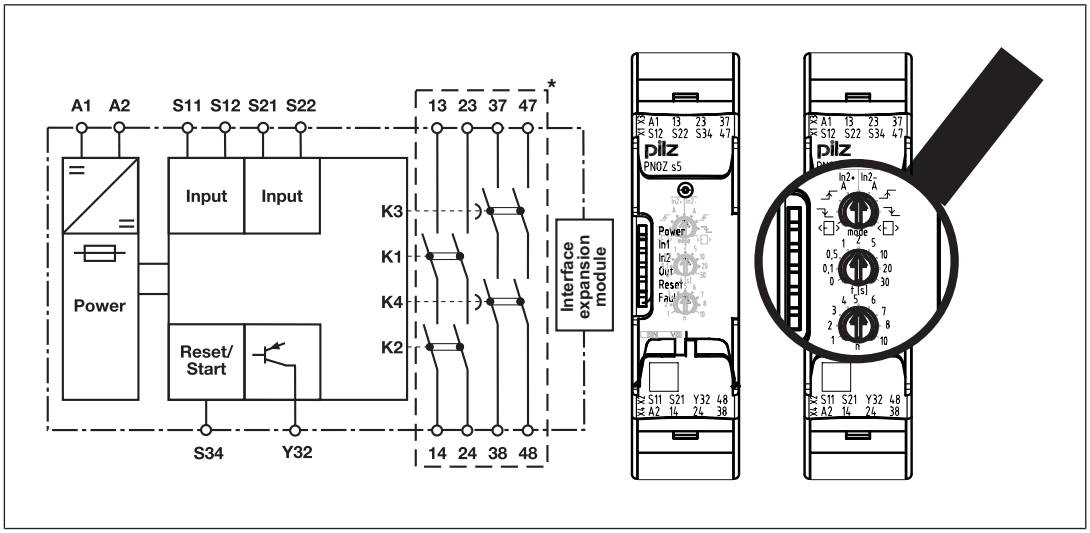


Fig.: Centre: Front view with cover, right: Front view without cover

*Insulation between the non-marked area and the relay contacts: Basic insulation (overvoltage category III), Protective separation (overvoltage category II)

Type: 48 - 240 VAC/DC

- U_B: 48 – 240 VAC/DC; Order No. 750135, 751135

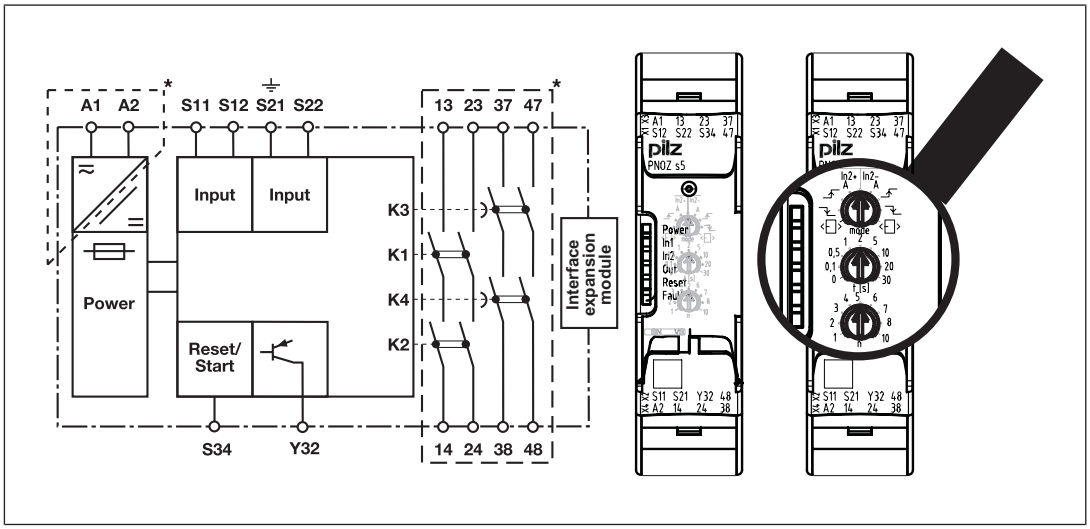


Fig.: Centre: Front view with cover, right: Front view without cover

*Insulation between the non-marked area and the relay contacts: Basic insulation (overvoltage category III), Protective separation (overvoltage category II)

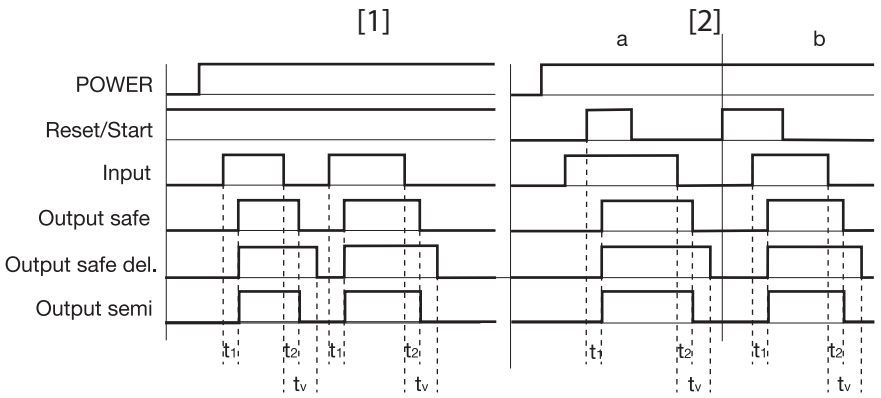
Function description

- In2+ Single-channel operation: no redundancy in the input circuit, earth faults in the start circuit and input circuit are detected.
- Dual-channel operation without detection of shorts across contacts: Redundant input circuit, detects PNOZ s5
  - earth faults in the start and input circuit,
  - short circuits in the input circuit and, with a monitored start, in the start circuit too.
- In2- Dual-channel operation with detection of shorts across contacts: Redundant input circuit, detects PNOZ s5
  - earth faults in the start and input circuit,
  - Short circuits in the input circuit and, with a monitored start, in the start circuit too,
  - Shorts across contacts in the input circuit.
- **A** Automatic start: Unit is active once the input circuit has been closed.
- Manual start Unit is active once the input circuit and the start circuit are closed.
- Monitored start with falling edge: Unit is active once
  - the input circuit is closed and then the start circuit is closed and opened again.
  - the start circuit is closed and then opened again once the input circuit is closed.
- Monitored start with rising edge: Unit is active once the input circuit is closed and once the start circuit is closed after the waiting period has elapsed (see technical details).
- Start with start-up test: The unit checks whether safety gates that are closed are opened and then closed again when supply voltage is applied.
- Ability to increase the number of contacts available on the
  - instantaneous safety contacts by using connectors to link to a PNOZsigma contact expansion module
  - delayed/instantaneous safety contacts by connecting contact expansion modules or external contactors

Timing diagrams

Automatic and manual start

- [1]: Automatic start
- [2]: Manual start
  - a: Input circuit closes before start circuit
  - b: Start circuit closes before input circuit



Legend

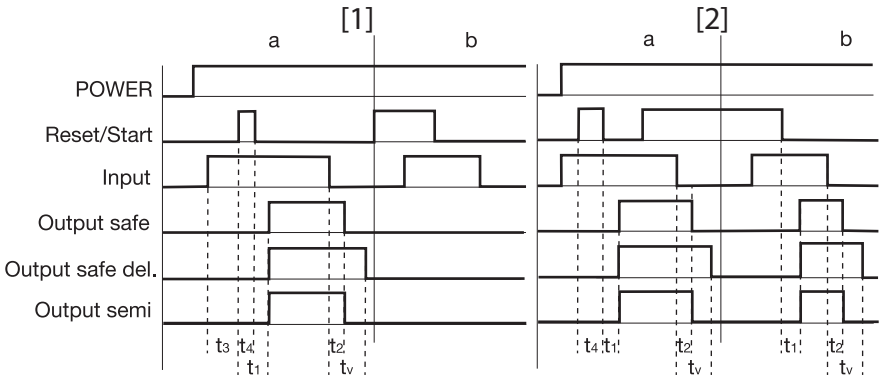
- POWER: Supply voltage
- Start: Start circuit
- Input: Input circuits
- Output safe: Safety contacts, instantaneous
- Output safe del: Safety contacts, delayed
- Output semi: Semiconductor output
- t_1: Switch-on delay
- t_2: Delay-on de-energisation
- t_v: Delay time

NOTICE

At the latest, the delay-on de-energisation safety contacts open after the set delay time + 20 ms + 15% of the set value, even in the case of a component failure.

Monitored start

- [1]: Monitored start with rising edge
  - a: Input circuit closes before start circuit
  - b: Start circuit closes before input circuit
- [2]: Monitored start with falling edge
  - a: Input circuit closes before start circuit
  - b: Start circuit closes before input circuit




Legend

- POWER: Supply voltage
- Start: Start circuit
- Input: Input circuits
- Output safe: Safety contacts, instantaneous
- Output safe del: Safety contacts, delayed
- Output semi: Semiconductor output
- t_1: Switch-on delay
- t_2: Delay-on de-energisation
- t_3: Waiting period with a monitored start
- t_4: Min. start pulse duration with a monitored start
- t_v: Delay time

NOTICE

At the latest, the delay-on de-energisation safety contacts open after the set delay time + 20 ms + 15% of the set value, even in the case of a component failure.

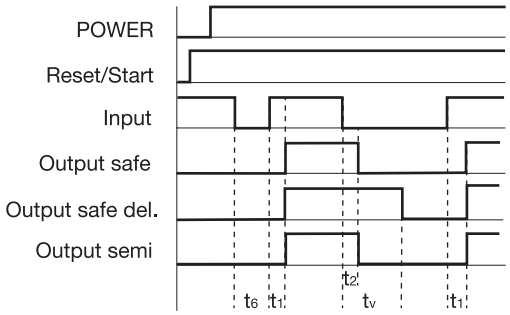Reset with start-up test



Legend

- POWER: Supply voltage
- Start: Start circuit
- Input: Input circuits
- Output safe: Safety contacts, instantaneous
- Output safe del: Safety contacts, delayed
- Output semi: Semiconductor output
- t_1: Switch-on delay
- t_2: Delay-on de-energisation
- t_v: Delay time
- t_6: Recovery time

NOTICE

At the latest, the delay-on de-energisation safety contacts open after the set delay time + 20 ms + 15% of the set value, even in the case of a component failure.

Installation

Install base unit without contact expansion module:

- Ensure that the plug terminator is inserted at the side of the unit.

Connect base unit and PNOZsigma contact expansion module:

- Remove the plug terminator at the side of the base unit and at the contact expansion module.
- Connect the base unit and the contact expansion module to the supplied connector before mounting the units to the DIN rail.

Installation in control cabinet

- The safety relay should be installed in a control cabinet with a protection type of at least IP54.
- Use the notch on the rear of the unit to attach it to a DIN rail (35 mm).
- When installed vertically: Secure the unit by using a fixing element (e.g. retaining bracket or end angle).
- Push the device upwards or downwards before lifting it from the DIN rail.

Wiring

Please note:

- Information given in the "Technical details [📖 22]" must be followed.
- Outputs 13-14, 23-24 are instantaneous safety contacts; outputs 37-38, 47-48 are delay-on de-energisation safety contacts, semiconductor output Y32 is an auxiliary output (e.g. for display).
- Semiconductor output Y32 should **not** be used for safety circuits!
- To prevent contact welding, a fuse should be connected before the output contacts (see Technical details [📖 22]).
- Calculation of the max. cable length l_{max} in the input circuit:

$$l_{max} = \frac{R_{lmax}}{R_l / km}$$

R_{lmax} = max. overall cable resistance (see Technical details [📖 22])
R_l / km = cable resistance/km

- Use copper wire that can withstand 60/75 °C.
- Sufficient fuse protection must be provided on all output contacts with capacitive and inductive loads.
- With U_B 48 – 240 VAC/DC: Connect S21 to the functional earth.
- When connecting magnetically operated, reed proximity switches, ensure that the max. peak inrush current (on the input circuit) does not overload the proximity switch.
- Ensure the wiring and EMC requirements of EN 60204-1 are met.
- On 24 VDC devices:
  The power supply must comply with the regulations for extra low voltages with protective electrical separation (SELV, PELV) in accordance with VDE 0100, Part 410.

Important for detection of shorts across contacts:

As this function for detecting shorts across contacts is not failsafe, it is tested by Pilz during the final control check. If there is a danger of exceeding the cable runs, we recommend the following test after the installation of the device:

1. Unit ready for operation (output contacts closed)
2. Short circuit the test terminals S12, S22 for detecting shorts across the inputs.
3. The unit's fuse must be triggered and the output contacts must open. Cable lengths in the scale of the maximum length can delay the fuse triggering for up to 2 minutes.
4. Reset the fuse: remove the short circuit and switch off the supply voltage for approx. 1 minute.



NOTICE

If you connect contact expansion modules to a base unit with a universal power supply, you will need to limit the conventional thermal current at the contact expansion modules' safety contacts to 70 % of the stated current (see technical details for contact expansion module).

Preparing for operation

Operating modes and delay time

The operating mode and delay time are set via the rotary switches on the unit. You can do this by opening the cover on the front of the unit.



NOTICE

Do not adjust the rotary switch during operation, otherwise an error message will appear, the safety contacts will open and the unit will not be ready for operation until the supply voltage has been switched off and then on again.

Set operating modes

- Switch off supply voltage.
- Select operating mode via the operating mode selector switch "mode".
- If the operating mode selector switch "mode" is in its start position (vertical position), an error message will appear.

Operating mode selector switch "mode"	Automatic or manual start	Monitored start rising edge	Monitored start falling edge	Automatic start with start-up test
Without detection of shorts across contacts				
With detection of shorts across contacts				

Set delay time

Time selector switch "t[s]"

Factor selector switch "n"

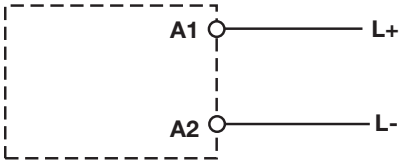
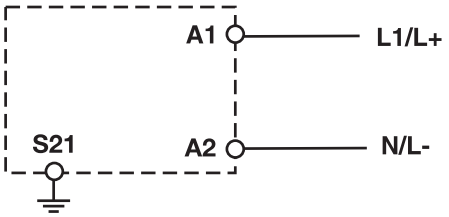
n x t[s] = Delay time











Example:

t = 4 s, n = 5
Delay time = 5 x 4 = 20 s

The min. delay time that can be set is (when t = 0): 0.04 s.

Connection

Supply voltage	Unit types with UB 24 VDC	Unit types with UB 48 – 240 VAC/ DC
		

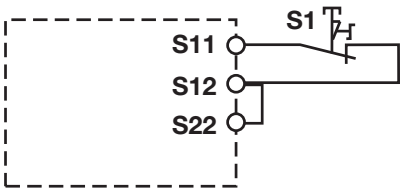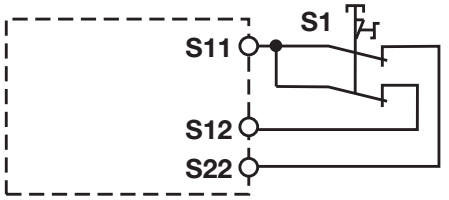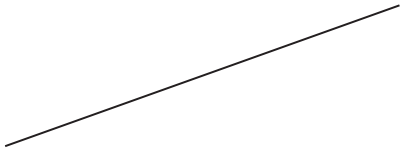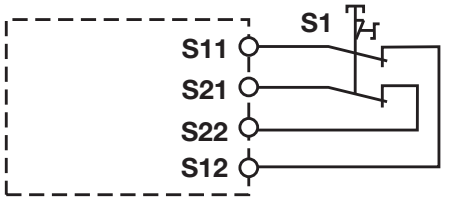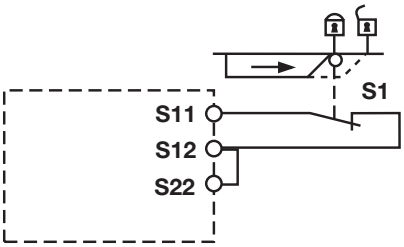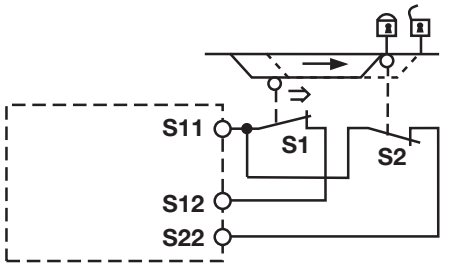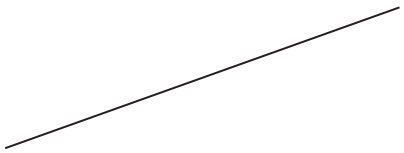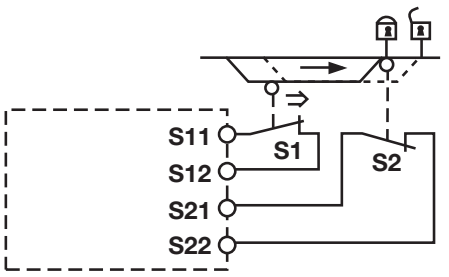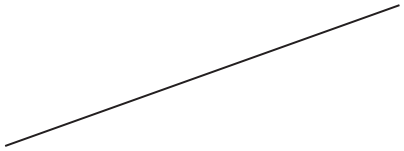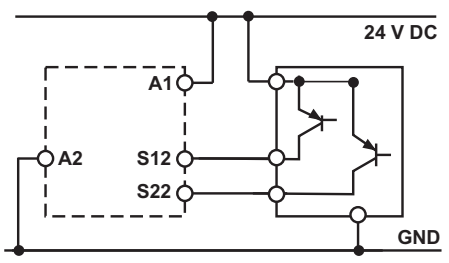Input circuit	Single-channel	Dual-channel
E-STOP **without** detection of shorts across contacts		
E-STOP **with** detection of shorts across contacts		
Safety gate **without** detection of shorts across contacts		
Safety gate **with** detection of shorts across contacts		
Light beam device or safety switch, detection of shorts across contacts via ESPE (only on unit types with UB = 24 VDC)		

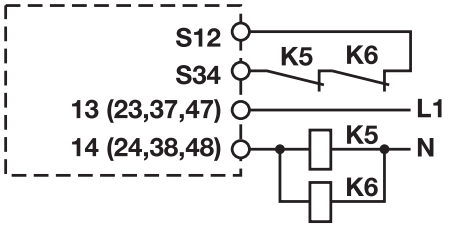
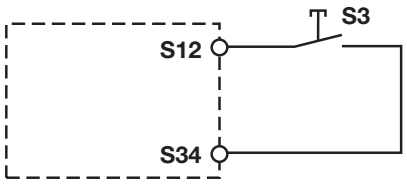
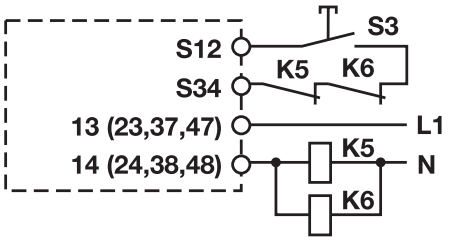
NOTICE

With single-channel wiring the safety level of your machine/plant may be lower than the safety level of the unit (see Safety characteristic data).

NOTICE

When operated with a light grid or sensor



- It must not be possible to switch off the supply voltage for the PNOZ-sigma separately from the supply voltage for the light grid or safety switch.
- The operating mode selector switch must be set to "Without detection of shorts across contacts", as shorts across contacts are detected by the ESPE.

Start circuit/feedback loop	Without feedback loop monitoring	with feedback loop monitoring
Automatic start		
Monitored, manual start/restart		

NOTICE

In the event of an automatic start or manual start with bridged start contact (fault):

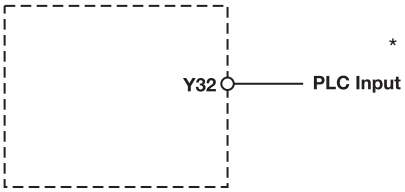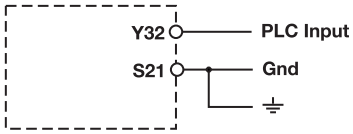The unit starts up automatically when the safeguard is reset, e.g. when the E-STOP pushbutton is released. Use external circuit measures to prevent an unexpected restart.

Semiconductor output	Unit types with U_B 24 VDC	Unit types with U_B 48 – 240 VAC/ DC
	 *Connect together the 0V connections on all the external power supplies	

Legend

- S1/S2: E-STOP/safety gate switch
- S3: Reset button
- : Switch operated
- : Gate open
- : Gate closed

Operation

When the relay outputs are switched on, the mechanical contact on the relay cannot be tested automatically. Depending on the operational environment, measures to detect the non-opening of switching elements may be required under some circumstances.

When the product is used in accordance with the European Machinery Directive, a check must be carried out to ensure that the safety contacts on the relay outputs open correctly. Open the safety contacts (switch off output) and start the device again, so that the internal diagnostics can check that the safety contacts open correctly

- for SIL CL 3/PL e at least 1x per month
- for SIL CL 2/PL d at least 1x per year

NOTICE

The safety function should be checked after initial commissioning and each time the plant/machine is changed. The safety functions may only be checked by qualified personnel.

The unit is ready for operation when the Power LED is permanently lit.

LEDs indicate the status and errors during operation:

- LED on
- LED flashes
- LED off

INFORMATION

Status indicators and error indicators may occur independently. In the case of an error display, the "Fault" LED will light or flash (exception: "Supply voltage too low"). An LED that is also flashing indicates the potential cause of the error. An LED that is lit and is static indicates a normal operating status. Several status indicators and error indicators may occur simultaneously.

Status indicators

POWER

Supply voltage is present.

IN1

Input circuit at S12 is closed.

IN2

Input circuit at S22 is closed.

OUT

Safety contacts are closed and semiconductor output Y32 carries a high signal.

RESET

24 VDC is present at S34.

OUT

Set delay time is running.

Error indicators

All LEDs off

Diagnostics: Short across contacts/earth fault; unit switched off

- Remedy: Rectify short across contacts/earth fault, switch off supply voltage for 1 min.

FAULT

Diagnostics: Plug terminator not connected

- Remedy: Insert plug terminator, switch supply voltage off and then on again.

FAULT

Diagnostics: Internal error, unit defective

- Remedy: Switch supply voltage off and then on again, change unit if necessary.

POWER

Diagnostics: Supply voltage too low

- Remedy: Check supply voltage and increase if necessary.

IN1, IN2 alternately **FAULT**

Diagnostics: Connection error (possibly: cable resistance in the input circuit is too high) or short detected between S12 and S22

- Remedy: Rectify connection error or short across contacts, switch supply voltage off and then on again.

IN1 **FAULT**

Diagnostics: Power-up blocked due to short-term interruption at S12; input circuits not operated simultaneously

- Remedy: Open both input circuits, S12 and S22, simultaneously and then close again.

IN2 **FAULT**

Diagnostics: Power-up blocked due to short-term interruption at S22; input circuits not operated simultaneously

- Remedy: Open both input circuits, S12 and S22, simultaneously and then close again.

RESET **FAULT**

Diagnostics: Position of rotary switch is not permitted or rotary switch was adjusted during operation.

- Remedy: Switch supply voltage off and then on again.

POWER, IN1, IN2, OUT, RESET, FAULT

Diagnostics: The operating mode selector switch "mode" is in its start position (vertical position)

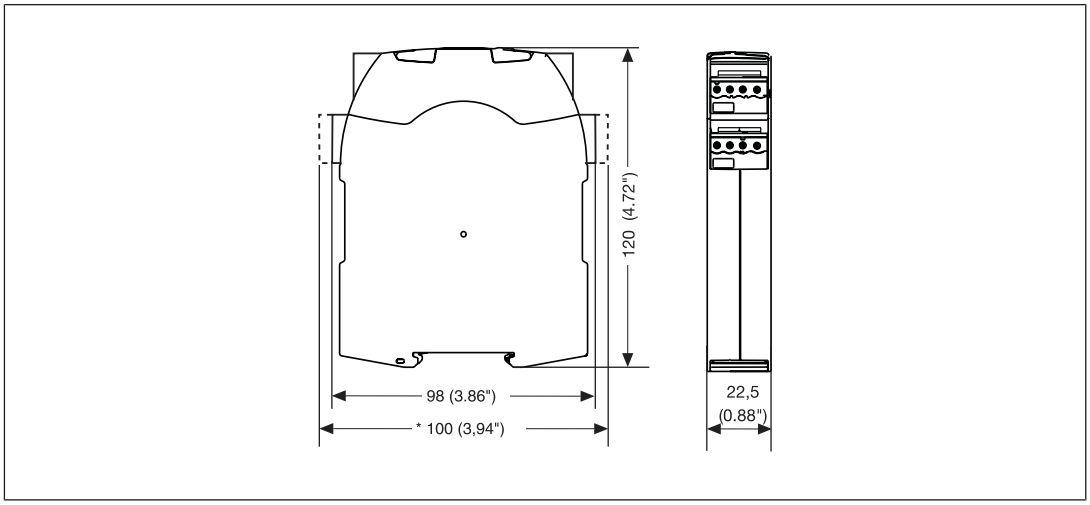
- Remedy: Switch off the supply voltage and set the required operating mode on operating mode selector switch "mode".

Faults - malfunctions

- Contact malfunctions: If the contacts have welded, reactivation will not be possible after the input circuit has opened.
- In the case of an error, the delay-on de-energisation contacts may open before the delay time has elapsed.

Dimensions in mm

*with spring-loaded terminals



Technical details Order no. 750105, 751105, 751185

General	750105	751105	751185
Approvals	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	**750105**	**751105**	**751185**
Supply voltage			
Voltage	24 V	24 V	24 V
Kind	DC	DC	DC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %	-15 %/+10 %
Output of external power supply (DC)	4 W	4 W	4 W
Residual ripple DC	20 %	20 %	20 %
Duty cycle	100 %	100 %	100 %
Inputs	**750105**	**751105**	**751185**
Number	2	2	2
Voltage at			
Input circuit DC	24 V	24 V	24 V
Start circuit DC	24 V	24 V	24 V
Feedback loop DC	24 V	24 V	24 V
Current at			
Input circuit DC	40 mA	40 mA	40 mA
Start circuit DC	40 mA	40 mA	40 mA
Feedback loop DC	40 mA	40 mA	40 mA

Inputs	750105	751105	751185
Max. inrush current impulse			
Current pulse, input circuit	**0,2 A**	**0,2 A**	**0,2 A**
Pulse duration, input circuit	**100 ms**	**100 ms**	**100 ms**
Current pulse, feedback loop	**0,2 A**	**0,2 A**	**0,2 A**
Pulse duration, feedback loop	**60 ms**	**60 ms**	**60 ms**
Current pulse, start circuit	**0,2 A**	**0,2 A**	**0,2 A**
Pulse duration, start circuit	**60 ms**	**60 ms**	**60 ms**
Min. input resistance at power-on	**110 Ohm**	**110 Ohm**	**110 Ohm**
Max. overall cable resistance RImax			
Single-channel at UB DC	**30 Ohm**	**30 Ohm**	**30 Ohm**
Dual-channel without detection of shorts across contacts at UB DC	**30 Ohm**	**30 Ohm**	**30 Ohm**
Dual-channel with detection of shorts across contacts at UB DC	**30 Ohm**	**30 Ohm**	**30 Ohm**
Semiconductor outputs	**750105**	**751105**	**751185**
Number	**1**	**1**	**1**
Voltage	**24 V**	**24 V**	**24 V**
Current	**20 mA**	**20 mA**	**20 mA**
Relay outputs	**750105**	**751105**	**751185**
Number of output contacts			
Safety contacts (N/O), instantaneous	**2**	**2**	**2**
Safety contacts (N/O), delayed	**2**	**2**	**2**
Max. short circuit current IK	**1 kA**	**1 kA**	**1 kA**
Utilisation category			
In accordance with the standard	**EN 60947-4-1**	**EN 60947-4-1**	**EN 60947-4-1**

Relay outputs	750105	751105	751185
Utilisation category of safety contacts			
AC1 at	**240 V**	**240 V**	**240 V**
Min. current	**0,01 A**	**0,01 A**	**0,01 A**
Max. current	**6 A**	**6 A**	**6 A**
Max. power	**1500 VA**	**1500 VA**	**1500 VA**
DC1 at	**24 V**	**24 V**	**24 V**
Min. current	**0,01 A**	**0,01 A**	**0,01 A**
Max. current	**6 A**	**6 A**	**6 A**
Max. power	**150 W**	**150 W**	**150 W**
Utilisation category of safety contacts delayed			
AC1 at	**240 V**	**240 V**	**240 V**
Min. current	**0,01 A**	**0,01 A**	**0,01 A**
Max. current	**6 A**	**6 A**	**6 A**
Max. power	**1500 VA**	**1500 VA**	**1500 VA**
DC1 at	**24 V**	**24 V**	**24 V**
Min. current	**0,01 A**	**0,01 A**	**0,01 A**
Max. current	**6 A**	**6 A**	**6 A**
Max. power	**150 W**	**150 W**	**150 W**
Utilisation category			
In accordance with the standard	**EN 60947-5-1**	**EN 60947-5-1**	**EN 60947-5-1**
Utilisation category of safety contacts			
AC15 at	**230 V**	**230 V**	**230 V**
Max. current	**3 A**	**3 A**	**3 A**
DC13 (6 cycles/min) at	**24 V**	**24 V**	**24 V**
Max. current	**4 A**	**4 A**	**4 A**
Utilisation category of safety contacts delayed			
AC15 at	**230 V**	**230 V**	**230 V**
Max. current	**3 A**	**3 A**	**3 A**
DC13 (6 cycles/min) at	**24 V**	**24 V**	**24 V**
Max. current	**4 A**	**4 A**	**4 A**
Utilisation category in accordance with UL			
Voltage	**240 V AC G.U. (same polarity)**	**240 V AC G.U. (same polarity)**	**240 V AC G.U. (same polarity)**
With current	**6 A**	**6 A**	**6 A**
Voltage	**24 V DC G. U.**	**24 V DC G. U.**	**24 V DC G. U.**
With current	**6 A**	**6 A**	**6 A**
Pilot Duty	**B300, R300**	**B300, R300**	**B300, R300**

Relay outputs	750105	751105	751185
External contact fuse protection, safety contacts			
In accordance with the standard	**EN 60947-5-1**	**EN 60947-5-1**	**EN 60947-5-1**
Max. melting integral	**66 A²s**	**66 A²s**	**66 A²s**
Blow-out fuse, quick	**6 A**	**6 A**	**6 A**
Blow-out fuse, slow	**4 A**	**4 A**	**4 A**
Blow-out fuse, gG	**6 A**	**6 A**	**6 A**
Circuit breaker 24V AC/DC, characteristic B/C	**4 A**	**4 A**	**4 A**
External contact fuse protection, delayed safety contacts			
Max. melting integral	**66 A²s**	**66 A²s**	**66 A²s**
Blow-out fuse, quick	**6 A**	**6 A**	**6 A**
Blow-out fuse, slow	**4 A**	**4 A**	**4 A**
Blow-out fuse, gG	**6 A**	**6 A**	**6 A**
Circuit breaker 24 V AC/DC, characteristic B/C	**4 A**	**4 A**	**4 A**
Contact material	**AgCuNi + 0,2 µm Au**	**AgCuNi + 0,2 µm Au**	**AgCuNi + 0,2 µm Au**
Conventional thermal current while loading several contacts	**750105**	**751105**	**751185**
Ith per contact at UB DC; AC1: 240 V, DC1: 24 V			
Conv. therm. current with 1 contact	**6 A**	**6 A**	**6 A**
Conv. therm. current with 2 contacts	**6 A**	**6 A**	**6 A**
Conv. therm. current with 3 contacts	**6 A**	**6 A**	**6 A**
Conv. therm. current with 4 contacts	**6 A**	**6 A**	**6 A**

Times	750105	751105	751185
Switch-on delay			
With automatic start typ.	**180 ms**	**180 ms**	**180 ms**
With automatic start max.	**330 ms**	**330 ms**	**330 ms**
With automatic start after power on typ.	**1.430 ms**	**1.430 ms**	**1.430 ms**
With automatic start after power on max.	**1.900 ms**	**1.900 ms**	**1.900 ms**
With manual start typ.	**45 ms**	**45 ms**	**45 ms**
With manual start max.	**85 ms**	**85 ms**	**85 ms**
With monitored start with rising edge typ.	**45 ms**	**45 ms**	**45 ms**
With monitored start with rising edge max.	**70 ms**	**70 ms**	**70 ms**
With monitored start with falling edge typ.	**60 ms**	**60 ms**	**60 ms**
With monitored start with falling edge max.	**80 ms**	**80 ms**	**80 ms**
Delay-on de-energisation			
With E-STOP typ.	**15 ms**	**15 ms**	**15 ms**
With E-STOP max.	**20 ms**	**20 ms**	**20 ms**
With power failure typ.	**75 ms**	**75 ms**	**75 ms**
With power failure max.	**110 ms**	**110 ms**	**110 ms**
Recovery time at max. switching frequency 1/s			
After E-STOP	**150 ms +tv**	**150 ms +tv**	**150 ms +tv**
After power failure	**200 ms**	**200 ms**	**200 ms**
Delay time tv	**0,04 s, 0,1 s, 0,2 s, 0,3 s, 0,4 s, 0,5 s, 0,6 s, 0,7 s, 0,8 s, 1 s, 1,5 s, 2 s, 2,5 s, 3 s, 3,5 s, 4 s, 5 s, 6 s, 7 s, 8 s, 10 s, 12 s, 14 s, 15 s, 16 s, 20 s, 25 s, 30 s, 35 s, 40 s, 50 s, 60 s, 70 s, 80 s, 90 s, 100 s, 120 s, 140 s, 150 s, 160 s, 180 s, 200 s, 210 s, 240 s, 300 s**	**0,04 s, 0,1 s, 0,2 s, 0,3 s, 0,4 s, 0,5 s, 0,6 s, 0,7 s, 0,8 s, 1 s, 1,5 s, 2 s, 2,5 s, 3 s, 3,5 s, 4 s, 5 s, 6 s, 7 s, 8 s, 10 s, 12 s, 14 s, 15 s, 16 s, 20 s, 25 s, 30 s, 35 s, 40 s, 50 s, 60 s, 70 s, 80 s, 90 s, 100 s, 120 s, 140 s, 150 s, 160 s, 180 s, 200 s, 210 s, 240 s, 300 s**	**0,04 s, 0,1 s, 0,2 s, 0,3 s, 0,4 s, 0,5 s, 0,6 s, 0,7 s, 0,8 s, 1 s, 1,5 s, 2 s, 2,5 s, 3 s, 3,5 s, 4 s, 5 s, 6 s, 7 s, 8 s, 10 s, 12 s, 14 s, 15 s, 16 s, 20 s, 25 s, 30 s, 35 s, 40 s, 50 s, 60 s, 70 s, 80 s, 90 s, 100 s, 120 s, 140 s, 150 s, 160 s, 180 s, 200 s, 210 s, 240 s, 300 s**
Time accuracy	**+/-1 % + +/-20 ms**	**+/-1 % + +/-20 ms**	**+/-1 % + +/-20 ms**
Repetition accuracy	**+/-1 % + +/-20 ms**	**+/-1 % + +/-20 ms**	**+/-1 % + +/-20 ms**
Repetition accuracy in the event of an error	**+/-15 % + +/-20 ms**	**+/-15 % + +/-20 ms**	**+/-15 % + +/-20 ms**
Max. delay time	**tv + 15 % + 20 ms**	**tv + 15 % + 20 ms**	**tv + 15 % + 20 ms**
Waiting period with a monitored start			
With rising edge	**150 ms**	**150 ms**	**150 ms**
With falling edge	**240 ms**	**240 ms**	**240 ms**

Times	750105	751105	751185
Min. start pulse duration with a monitored start			
With rising edge	**30 ms**	**30 ms**	**30 ms**
With falling edge	**70 ms**	**70 ms**	**70 ms**
Supply interruption before de-energisation	**20 ms**	**20 ms**	**20 ms**
Simultaneity, channel 1 and 2 max.	∞	∞	∞
Environmental data	**750105**	**751105**	**751185**
Climatic suitability	**EN 60068-2-78**	**EN 60068-2-78**	**EN 60068-2-78**
Ambient temperature			
Temperature range	**-10 - 55 °C**	**-10 - 55 °C**	**-10 - 55 °C**
Storage temperature			
Temperature range	**-40 - 85 °C**	**-40 - 85 °C**	**-40 - 85 °C**
Climatic suitability			
Humidity	**93 % r. h. at 40 °C**	**93 % r. h. at 40 °C**	**93 % r. h. at 40 °C**
Condensation during operation	**Not permitted**	**Not permitted**	**Not permitted**
EMC	**EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1**	**EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1**	**EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1**
Vibration			
In accordance with the standard	**EN 60068-2-6**	**EN 60068-2-6**	**EN 60068-2-6**
Frequency	**10 - 55 Hz**	**10 - 55 Hz**	**10 - 55 Hz**
Amplitude	**0,35 mm**	**0,35 mm**	**0,35 mm**
Airgap creepage			
In accordance with the standard	**EN 60947-1**	**EN 60947-1**	**EN 60947-1**
Overvoltage category	**III / II**	**III / II**	**III / II**
Pollution degree	**2**	**2**	**2**
Rated insulation voltage	**250 V**	**250 V**	**250 V**
Rated impulse withstand voltage	**4 kV**	**4 kV**	**4 kV**
Protection type			
Housing	**IP40**	**IP40**	**IP40**
Terminals	**IP20**	**IP20**	**IP20**
Mounting area (e.g. control cabinet)	**IP54**	**IP54**	**IP54**
Mechanical data	**750105**	**751105**	**751185**
Mounting position	**Any**	**Any**	**Any**
Mechanical life	**10,000,000 cycles**	**10,000,000 cycles**	**10,000,000 cycles**
Material			
Bottom	**PC**	**PC**	**PC**
Front	**PC**	**PC**	**PC**
Top	**PC**	**PC**	**PC**

Mechanical data	750105	751105	751185
Connection type	**Screw terminal**	**Spring-loaded terminal**	**Spring-loaded terminal**
Mounting type	**plug-in**	**plug-in**	**plug-in**
Conductor cross section with screw terminals			
1 core flexible	**0,25 - 2,5 mm², 24 - 12 AWG**	–	–
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	**0,25 - 1 mm², 24 - 16 AWG**	–	–
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	**0,2 - 1,5 mm², 24 - 16 AWG**	–	–
Torque setting with screw terminals	**0,5 Nm**	–	–
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	–	**0,2 - 2,5 mm², 24 - 12 AWG**	**0,2 - 2,5 mm², 24 - 12 AWG**
Spring-loaded terminals: Terminal points per connection	–	**2**	**2**
Stripping length with spring-loaded terminals	–	**9 mm**	**9 mm**
Dimensions			
Height	**98 mm**	**100 mm**	**100 mm**
Width	**22,5 mm**	**22,5 mm**	**22,5 mm**
Depth	**120 mm**	**120 mm**	**120 mm**
Weight	**235 g**	**235 g**	**235 g**

Where standards are undated, the 2017-01 latest editions shall apply.

Technical details Order no. 750135, 751135

General	750135	751135
Approvals	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	**750135**	**751135**
Supply voltage		
Voltage	48 - 240 V	48 - 240 V
Kind	AC/DC	AC/DC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %
Output of external power supply (AC)	8 VA	8 VA
Output of external power supply (DC)	4 W	4 W
Frequency range AC	50 - 60 Hz	50 - 60 Hz
Residual ripple DC	160 %	160 %
Duty cycle	100 %	100 %
Inputs	**750135**	**751135**
Number	2	2
Voltage at		
Input circuit DC	24 V	24 V
Start circuit DC	24 V	24 V
Feedback loop DC	24 V	24 V
Current at		
Input circuit DC	40 mA	40 mA
Start circuit DC	40 mA	40 mA
Feedback loop DC	40 mA	40 mA
Max. inrush current impulse		
Current pulse, input circuit	0,2 A	0,2 A
Pulse duration, input circuit	100 ms	100 ms
Current pulse, feedback loop	0,2 A	0,2 A
Pulse duration, feedback loop	60 ms	60 ms
Current pulse, start circuit	0,2 A	0,2 A
Pulse duration, start circuit	60 ms	60 ms
Min. input resistance at power-on	110 Ohm	110 Ohm

Inputs	750135	751135
Max. overall cable resistance Rl-max		
Single-channel at UB DC	**30 Ohm**	**30 Ohm**
Single-channel at UB AC	**30 Ohm**	**30 Ohm**
Dual-channel without detection of shorts across contacts at UB DC	**30 Ohm**	**30 Ohm**
Dual-channel without detection of shorts across contacts at UB AC	**30 Ohm**	**30 Ohm**
Dual-channel with detection of shorts across contacts at UB DC	**30 Ohm**	**30 Ohm**
Dual-channel with detection of shorts across contacts at UB AC	**30 Ohm**	**30 Ohm**
Semiconductor outputs	**750135**	**751135**
Number	**1**	**1**
Voltage	**24 V**	**24 V**
Current	**20 mA**	**20 mA**
Relay outputs	**750135**	**751135**
Number of output contacts		
Safety contacts (N/O), instantaneous	**2**	**2**
Safety contacts (N/O), delayed	**2**	**2**
Max. short circuit current IK	**1 kA**	**1 kA**
Utilisation category		
In accordance with the standard	**EN 60947-4-1**	**EN 60947-4-1**
Utilisation category of safety contacts		
AC1 at	**240 V**	**240 V**
Min. current	**0,01 A**	**0,01 A**
Max. current	**6 A**	**6 A**
Max. power	**1500 VA**	**1500 VA**
DC1 at	**24 V**	**24 V**
Min. current	**0,01 A**	**0,01 A**
Max. current	**6 A**	**6 A**
Max. power	**150 W**	**150 W**
Utilisation category of safety contacts delayed		
AC1 at	**240 V**	**240 V**
Min. current	**0,01 A**	**0,01 A**
Max. current	**6 A**	**6 A**
Max. power	**1500 VA**	**1500 VA**
DC1 at	**24 V**	**24 V**
Min. current	**0,01 A**	**0,01 A**
Max. current	**6 A**	**6 A**
Max. power	**150 W**	**150 W**

Relay outputs	750135	751135
Utilisation category		
In accordance with the standard	**EN 60947-5-1**	**EN 60947-5-1**
Utilisation category of safety contacts		
AC15 at	**230 V**	**230 V**
Max. current	**3 A**	**3 A**
DC13 (6 cycles/min) at	**24 V**	**24 V**
Max. current	**4 A**	**4 A**
Utilisation category of safety contacts delayed		
AC15 at	**230 V**	**230 V**
Max. current	**3 A**	**3 A**
DC13 (6 cycles/min) at	**24 V**	**24 V**
Max. current	**4 A**	**4 A**
Utilisation category in accordance with UL		
Voltage	**240 V AC G.U. (same polarity)**	**240 V AC G.U. (same polarity)**
With current	**6 A**	**6 A**
Voltage	**24 V DC G. U.**	**24 V DC G. U.**
With current	**6 A**	**6 A**
Pilot Duty	**B300, R300**	**B300, R300**
External contact fuse protection, safety contacts		
In accordance with the standard	**EN 60947-5-1**	**EN 60947-5-1**
Max. melting integral	**66 A²s**	**66 A²s**
Blow-out fuse, quick	**6 A**	**6 A**
Blow-out fuse, slow	**4 A**	**4 A**
Blow-out fuse, gG	**6 A**	**6 A**
Circuit breaker 24V AC/DC, characteristic B/C	**4 A**	**4 A**
External contact fuse protection, delayed safety contacts		
Max. melting integral	**66 A²s**	**66 A²s**
Blow-out fuse, quick	**6 A**	**6 A**
Blow-out fuse, slow	**4 A**	**4 A**
Blow-out fuse, gG	**6 A**	**6 A**
Circuit breaker 24 V AC/DC, characteristic B/C	**4 A**	**4 A**
Contact material	**AgCuNi + 0,2 µm Au**	**AgCuNi + 0,2 µm Au**

Conventional thermal current while loading several contacts	750135	751135
Ith per contact at UB AC; AC1: 240 V, DC1: 24 V		
Conv. therm. current with 1 contact	**6 A**	**6 A**
Conv. therm. current with 2 contacts	**6 A**	**6 A**
Conv. therm. current with 3 contacts	**6 A**	**6 A**
Conv. therm. current with 4 contacts	**6 A**	**6 A**
Ith per contact at UB DC; AC1: 240 V, DC1: 24 V		
Conv. therm. current with 1 contact	**6 A**	**6 A**
Conv. therm. current with 2 contacts	**6 A**	**6 A**
Conv. therm. current with 3 contacts	**6 A**	**6 A**
Conv. therm. current with 4 contacts	**6 A**	**6 A**
Times	**750135**	**751135**
Switch-on delay		
With automatic start typ.	**180 ms**	**180 ms**
With automatic start max.	**330 ms**	**330 ms**
With automatic start after power on typ.	**1.430 ms**	**1.430 ms**
With automatic start after power on max.	**1.900 ms**	**1.900 ms**
With manual start typ.	**45 ms**	**45 ms**
With manual start max.	**85 ms**	**85 ms**
With monitored start with rising edge typ.	**45 ms**	**45 ms**
With monitored start with rising edge max.	**70 ms**	**70 ms**
With monitored start with falling edge typ.	**60 ms**	**60 ms**
With monitored start with falling edge max.	**80 ms**	**80 ms**
Delay-on de-energisation		
With E-STOP typ.	**15 ms**	**15 ms**
With E-STOP max.	**20 ms**	**20 ms**
With power failure typ.	**75 ms**	**75 ms**
With power failure max.	**110 ms**	**110 ms**
Recovery time at max. switching frequency 1/s		
After E-STOP	**150 ms +tv**	**150 ms +tv**
After power failure	**200 ms**	**200 ms**

Times	750135	751135
Delay time tv	**0,04 s, 0,1 s, 0,2 s, 0,3 s, 0,4 s, 0,5 s, 0,6 s, 0,7 s, 0,8 s, 1 s, 1,5 s, 2 s, 2,5 s, 3 s, 3,5 s, 4 s, 5 s, 6 s, 7 s, 8 s, 10 s, 12 s, 14 s, 15 s, 16 s, 20 s, 25 s, 30 s, 35 s, 40 s, 50 s, 60 s, 70 s, 80 s, 90 s, 100 s, 120 s, 140 s, 150 s, 160 s, 180 s, 200 s, 210 s, 240 s, 300 s**	**0,04 s, 0,1 s, 0,2 s, 0,3 s, 0,4 s, 0,5 s, 0,6 s, 0,7 s, 0,8 s, 1 s, 1,5 s, 2 s, 2,5 s, 3 s, 3,5 s, 4 s, 5 s, 6 s, 7 s, 8 s, 10 s, 12 s, 14 s, 15 s, 16 s, 20 s, 25 s, 30 s, 35 s, 40 s, 50 s, 60 s, 70 s, 80 s, 90 s, 100 s, 120 s, 140 s, 150 s, 160 s, 180 s, 200 s, 210 s, 240 s, 300 s**
Time accuracy	**+/-1 % + +/-20 ms**	**+/-1 % + +/-20 ms**
Repetition accuracy	**+/-1 % + +/-20 ms**	**+/-1 % + +/-20 ms**
Repetition accuracy in the event of an error	**+/-15 % + +/-20 ms**	**+/-15 % + +/-20 ms**
Max. delay time	**tv + 15 % + 20 ms**	**tv + 15 % + 20 ms**
Waiting period with a monitored start		
With rising edge	**150 ms**	**150 ms**
With falling edge	**240 ms**	**240 ms**
Min. start pulse duration with a monitored start		
With rising edge	**30 ms**	**30 ms**
With falling edge	**70 ms**	**70 ms**
Supply interruption before de-energisation	**20 ms**	**20 ms**
Simultaneity, channel 1 and 2 max.	∞	∞
Environmental data	**750135**	**751135**
Climatic suitability	**EN 60068-2-78**	**EN 60068-2-78**
Ambient temperature		
Temperature range	**-10 - 55 °C**	**-10 - 55 °C**
Storage temperature		
Temperature range	**-40 - 85 °C**	**-40 - 85 °C**
Climatic suitability		
Humidity	**93 % r. h. at 40 °C**	**93 % r. h. at 40 °C**
Condensation during operation	**Not permitted**	**Not permitted**
EMC	**EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1**	**EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1**
Vibration		
In accordance with the standard	**EN 60068-2-6**	**EN 60068-2-6**
Frequency	**10 - 55 Hz**	**10 - 55 Hz**
Amplitude	**0,35 mm**	**0,35 mm**
Airgap creepage		
In accordance with the standard	**EN 60947-1**	**EN 60947-1**
Overvoltage category	**III / II**	**III / II**
Pollution degree	**2**	**2**
Rated insulation voltage	**250 V**	**250 V**
Rated impulse withstand voltage	**4 kV**	**4 kV**

Environmental data	750135	751135
Protection type		
Housing	**IP40**	**IP40**
Terminals	**IP20**	**IP20**
Mounting area (e.g. control cabinet)	**IP54**	**IP54**
Mechanical data	**750135**	**751135**
Mounting position	**Any**	**Any**
Mechanical life	**10,000,000 cycles**	**10,000,000 cycles**
Material		
Bottom	**PC**	**PC**
Front	**PC**	**PC**
Top	**PC**	**PC**
Connection type	**Screw terminal**	**Spring-loaded terminal**
Mounting type	**plug-in**	**plug-in**
Conductor cross section with screw terminals		
1 core flexible	**0,25 - 2,5 mm², 24 - 12 AWG**	–
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	**0,25 - 1 mm², 24 - 16 AWG**	–
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	**0,2 - 1,5 mm², 24 - 16 AWG**	–
Torque setting with screw terminals	**0,5 Nm**	–
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	–	**0,2 - 2,5 mm², 24 - 12 AWG**
Spring-loaded terminals: Terminal points per connection	–	**2**
Stripping length with spring-loaded terminals	–	**9 mm**
Dimensions		
Height	**98 mm**	**100 mm**
Width	**22,5 mm**	**22,5 mm**
Depth	**120 mm**	**120 mm**
Weight	**250 g**	**250 g**

Where standards are undated, the 2017-01 latest editions shall apply.

Safety characteristic data

NOTICE

You must comply with the safety-related characteristic data in order to achieve the required safety level for your plant/machine.

Operating Mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN 62061 SIL CL	EN 62061 PFH_D [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2015 T_M [year]
Safety contacts, instantaneous	**PL e**	**Cat. 4**	**SIL CL 3**	**2,31E-09**	**SIL 3**	**2,03E-06**	**20**
Safety contacts, delayed	**PL e**	**Cat. 4**	**SIL CL 3**	**2,34E-09**	**SIL 3**	**2,75E-05**	**20**

All the units used within a safety function must be considered when calculating the safety characteristic data.

INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

CAUTION!

It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.

The PFH value depends on the switching frequency and the load on the relay output.
If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Supplementary data

CAUTION!

It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.

The PFH value depends on the switching frequency and the load on the relay output.
If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Service life graph

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

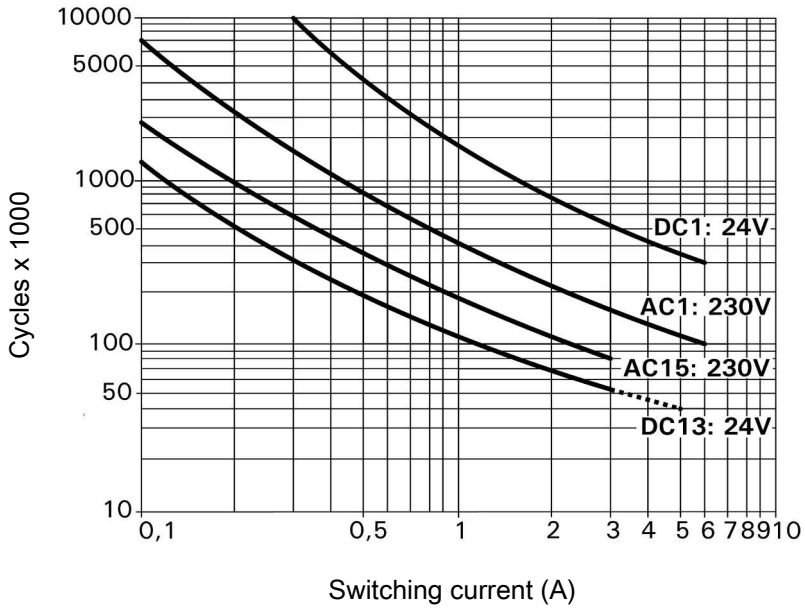


Fig.: Service life graphs at 24 V DC and 230 V AC

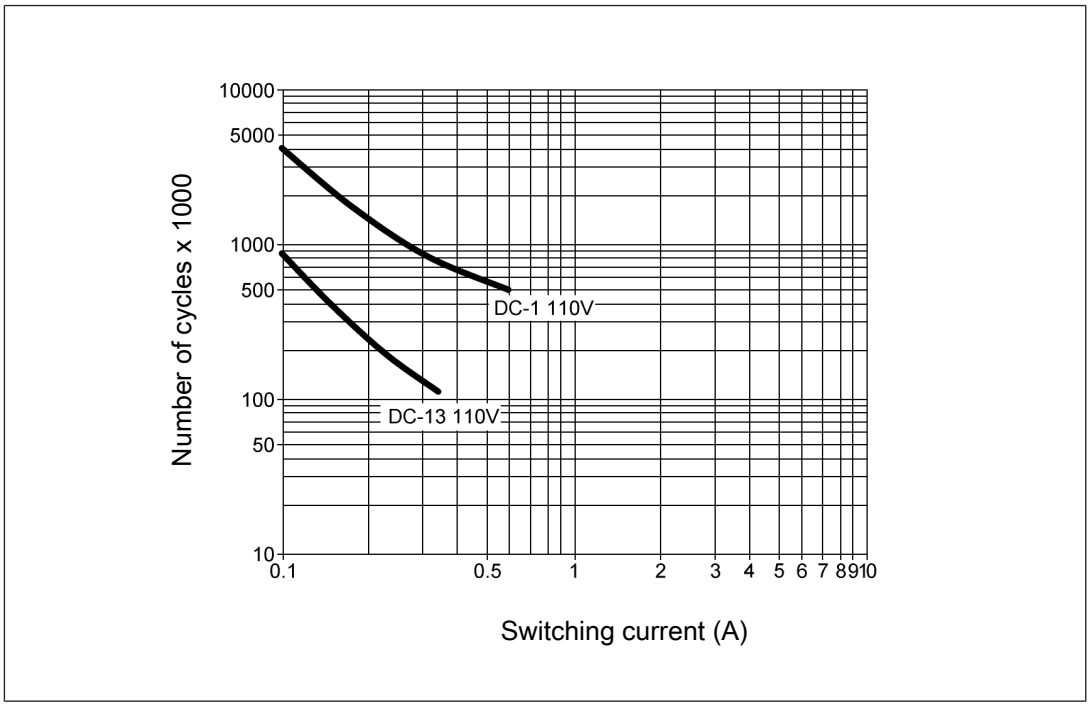


Fig.: Service life graphs at 110 V DC

Example

- Inductive load: 0.2 A
- Utilisation category: AC15
- Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see Technical details [📖 22]) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

Permitted operating height

The values stated in the technical details apply to the use of the device in operating heights up to max. 2000 m above sea level. When used in greater heights, constraints have to be taken into account:

- Permitted maximum operating height 5000 m
- Only device versions with UB 24 V DC are permitted (order no. 750105, 751105, 751185)
- Reduction of rated insulation voltage and rated impulse withstand voltage for applications with safe separation:

Maximum operation height	Rated insulation voltage	Overvoltage category	Max. rated impulse withstand voltage
3000 m	150 V	II	2.5 kV
	100 V	III	2.5 kV
4000 m	150 V	II	2.5 kV
	100 V	III	2.5 kV
5000 m	100 V	II	1.5 kV
	24 V	III	0.8 kV

- Reduction of rated insulation voltage and rated impulse withstand voltage for applications with basic insulation:

Maximum operation height	Rated insulation voltage	Overvoltage category	Max. rated impulse withstand voltage
3000 m	250 V	II	2.5 kV
	150 V	III	2.5 kV
4000 m	250 V	II	2.5 kV
	150 V	III	2.5 kV
5000 m	150 V	II	1.5 kV
	100 V	III	1.5 kV


- From an operating height of 2000 m the max. permitted ambient temperature is reduced by 0.5 °C/100 m

Operating height	Permitted ambient temperature
3000 m	50 °C
4000 m	45 °C
5000 m	40 °C

Remove plug-in terminals

Procedure: Insert the screwdriver into the housing recess behind the terminal and lever the terminal out.

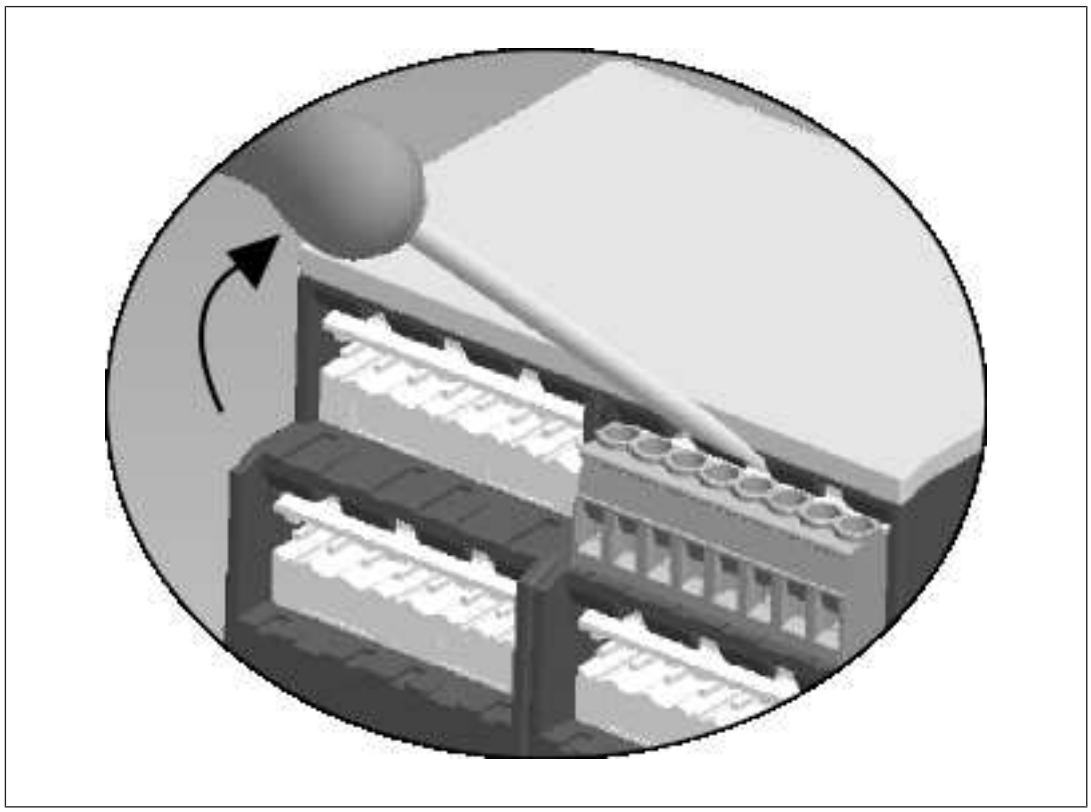Do **not** remove the terminals by pulling the cables!



Order reference

Product type	Features	Connection type	Order No.
PNOZ s5	24 VDC	Screw terminals	750 105
PNOZ s5 C	24 VDC	Spring-loaded terminals	751 105
PNOZ s5 C (coated version)	24 VDC	Spring-loaded terminals	751 185
PNOZ s5	48 - 240 VAC/DC	Screw terminals	750 135
PNOZ s5 C	48 - 240 VAC/DC	Spring-loaded terminals	751 135

EC declaration of conformity

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/downloads.
Representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

Support

Technical support is available from Pilz round the clock.

Americas
Brazil
+55 11 97569-2804
Canada
+1 888-315-PILZ (315-7459)
Mexico
+52 55 5572 1300
USA (toll-free)
+1 877-PILZUSA (745-9872)

Asia
China
+86 21 60880878-216
Japan
+81 45 471-2281
South Korea
+82 31 450 0680

Australia
+61 3 95600621

Europe
Austria
+43 1 7986263-0
Belgium, Luxembourg
+32 9 3217575
France
+33 3 88104000
Germany
+49 711 3409-444
Ireland
+353 21 4804983
Italy, Malta
+39 0362 1826711
Scandinavia
+45 74436332
Spain
+34 938497433
Switzerland
+41 62 88979-30
The Netherlands
+31 347 320477
Turkey
+90 216 5775552
United Kingdom
+44 1536 462203

You can reach our international hotline on:
+49 711 3409-444
support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.

Energy saving by Pilz

BLUECOMPETENCE Alliance Member
Partner of the Engineering Industry Sustainability Initiative

pilz
Partner of:
The Best of German Engineering

Pilz GmbH & Co. KG
Felix-Wankel-Straße 2
73760 Ostfildern, Germany
Tel.: +49 711 3409-0
Fax: +49 711 3409-133
info@pilz.com
www.pilz.com

PILZ
THE SPIRIT OF SAFETY

21397-EN-11, 2017-06 Printed in Germany
© Pilz GmbH & Co. KG, 2015

CMSE®, InduraNET p®, PAS4000®, PAScal®, PASconfig®, Pilz®, PIT®, PLID®, PMCprimo®, PMCprotego®, PMCtendo®, PMD®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS SafetyEYE®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features m from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.