
Fitting Instructions for **KEYBOLT** ™

Weatherproof Locking Bolt

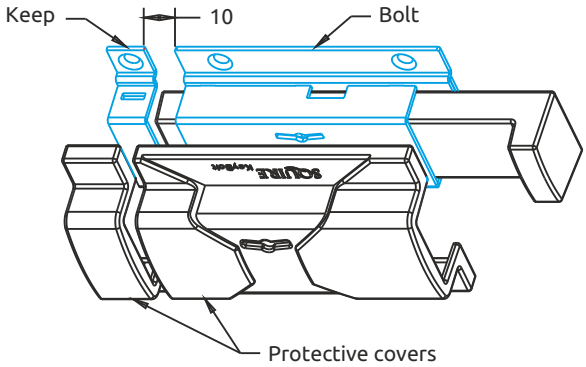

Fitting Instructions

1. Using the bolt and keep as a template, mark the screw positions. Leave a 10mm gap between the bolt and keep to allow for fitting of the protective covers.
2. Drill pilot holes for the screws. (Use 3.5mm diameter drill bit).
3. Use the security screws provided and firmly screw into position. (Note these security screws cannot be undone). Ensure that the screws are fully tightened in order that the protective covers will fit correctly.
4. Fit the protective covers by holding in position (ensure the key aperture in the cover aligns with the key aperture in the lock) and tap them firmly until they click home.

User instructions

1. The Key Bolt can be locked in both the closed and open positions or used as a bolt without the locking function.
2. To lock the bolt, insert the key with the key blade pointing away from the keep and rotate clockwise.
3. To unlock the bolt, insert the key with the key blade pointing towards the keep and rotate anti-clockwise.
4. If you wrongly insert the key DO NOT force the key as it will be damaged or broken.

Henry Squire & Sons Limited
Hilton Cross Business Park, Cannock Road, Featherstone, Wolverhampton, WV10 7QZ
Tel: 01902 308050 Fax: 01902 308051
E-Mail: info@henry-squire.co.uk Website: www.squirelocks.co.uk