## ■ Repair kit
Models **RK-572N**

Suitable model : 571, 572
The kit contains parts No.1-8.



It's possible to use for both of 571 and 572.
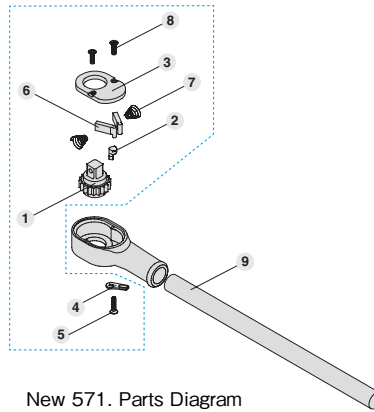
New 571. Parts Diagram

### ■ New 571 and new 572 Parts table

| NO. | Descriptions | Qty. |
|---|---|---|
| 1 | Gear | 1 |
| 2 | Cam | 1 |
| 3 | Lid | 1 |
| 4 | Switching handle | 1 |
| 5 | Screw (Torx bolt M3x8 (T10)) | 1 |
| 6 | Claw | 2 |
| 7 | Spring | 2 |
| 8 | Screw (Torx bolt M4x6 (T20)) | 2 |

| NO. | Model | Descriptions | Qty. |
|---|---|---|---|
| 9 | 113 | A crossbar 113. | 1 |

### ⚠ CAUTION
● Repair may be difficult for the general public.
● We do not sell parts by part.

## ■ Repair kit
Models **RK-572**

Suitable model : Old 571, old 572.   The kit contains parts No.1-7.

Old 571.

Old 572.



### ■ Old 571. Parts table

| NO. | Model | Descriptions | Qty. |
|---|---|---|---|
| 1 | GP572G | Gear | 1 |
| 2 | GP471P | Cam | 1 |
| 3 | GP572C | Lid | 1 |
| 4 | GP471L | Switching handle | 1 |
| 5 | GP572V | Screw ((+) countersunk head screw M5 x 32) | 2 |
| 6 | GP572N | Claw | 2 |
| 7 | GP471S | Spring | 2 |
| 8 | 113 | A crossbar 113. | 1 |

※The part will be count as 1 item regardless of its quantity (in case of 2, 2set).
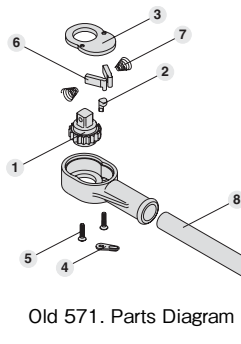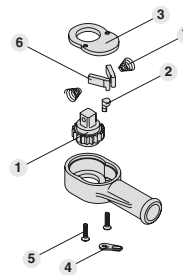
Old 571. Parts Diagram

### ■ Old 572. Parts table

| NO. | Model | Descriptions | Qty. |
|---|---|---|---|
| 1 | GP572G | Gear | 1 |
| 2 | GP471P | Cam | 1 |
| 3 | GP572C | Lid | 1 |
| 4 | GP471L | Switching handle | 1 |
| 5 | GP572V | Screw ((+) countersunk head screw M5 x 32) | 2 |
| 6 | GP572N | Claw | 2 |
| 7 | GP471S | Spring | 2 |

※The part will be count as 1 item regardless of its quantity (in case of 2, 2set).

Old 572. Parts Diagram

## T-TYPE SLIDE HANDLE

With a square drive on a slide handle, making it possible to work from any position. Switchable between L-shaped and T-shaped with a slide.

sq.dr **25.4 mm 1"**

| Models | Square Drive (mm) | Dimensions (mm) | | | Qty./ Carton (Generally) | Weight (g) |
|---|---|---|---|---|---|---|
| | | D | H | L | | |
| 415 | 25.4 | 28 | 52 | 660 | 1 | 3,820 |
| 416 | 25.4 | — | 52 | — | 1 | 620 |

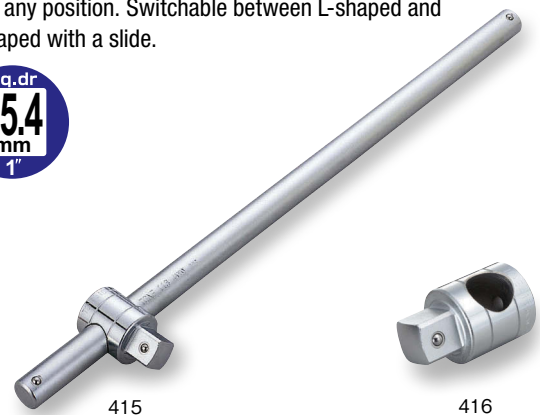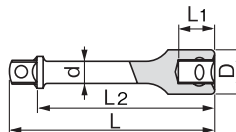※ 415 is square drive department 416 and crossbar 113 (P214).
※ 416 is only the square drive part.

### ⚠ CAUTION
● Do not use with extension pipe etc.
● Avoid giving shock by hitting with hammer etc.
● Insert square drive positively to the bottom.



415

416

## EXTENSION BAR

Suitable for narrow, deep places as extending socket.

sq.dr **25.4 mm 1"**

| Models | Square Drive (mm) | Dimensions (mm) | | | | | Qty./ Carton (Generally) | Weight (g) |
|---|---|---|---|---|---|---|---|---|
| | | D | L₁ | L₂ | L | d | | |
| 612 | 25.4 | 46 | 31 | 122 | 150 | 25 | 1 | 870 |
| EX80-200 | 25.4 | 46 | 31 | 172 | 200 | 25 | 1 | 1,055 |
| EX80-250 | 25.4 | 46 | 31 | 222 | 250 | 25 | 1 | 1,260 |
| 613 | 25.4 | 46 | 31 | 372 | 400 | 25 | 1 | 1,820 |



612

EX80-250

### ⚠ CAUTION
● Do not use with power tools.
● Do not assemble multiple attachments. (Extension bar, Universal joint, Socket adaptor, Quick adaptor)

For hand tool